

CT-3500 S2

Digital Circuit Breaker Timer

USER'S MANUAL



Vanguard Instruments Company, Inc.
1520 S. Hellman Ave.
Ontario, California 91761, USA

TEL: (909) 923-9390
FAX: (909) 923-9391

July 2012
Revision 1

SAFETY SUMMARY

FOLLOW EXACT OPERATING PROCEDURES

Any deviation from the procedures described in this User's Manual may create one or more safety hazards, may damage the CT-3500 S2, or cause errors in the test results. Vanguard Instruments Company, Inc. assumes no liability for unsafe or improper use of the CT-3500 S2.

All safety precautions provided in this manual must be observed during all phases of testing including test preparation, test lead connection, actual testing, and test lead disconnection.

SAFETY WARNINGS AND CAUTIONS

Only trained operators shall use the CT-3500 S2. All devices under test shall be **off-line** and **fully isolated**. Do not perform test procedures or service alone.

DO NOT MODIFY TEST EQUIPMENT

To avoid the risk of introducing additional or unknown hazards, do not install substitute parts or perform any unauthorized modification to any CT-3500 S2 test unit. To ensure that all designed safety features are maintained, it is highly recommended that repairs be performed only by Vanguard Instruments Company factory personnel or by an authorized repair service provider. Unauthorized modifications can cause safety hazards and will void the manufacturer's warranty.

WARNING

Do not remove test leads during a test. Failure to heed this warning can result in electrical shock to personnel and damage to the equipment.

TABLE OF CONTENTS

CONVENTIONS USED IN THIS DOCUMENT	1
1.0 INTRODUCTION	2
1.1 General Description and Features	2
1.2 Technical Specifications	3
1.3 CT-3500 S2 Controls and Indicators	4
2.0 PRE-TEST SETUP	5
2.1 Operating Voltages	5
2.2 LCD Screen Contrast Control	5
3.0 OPERATING PROCEDURES	6
3.1 Connection Diagrams	6
3.3 Setting the Frequency	9
3.4 Using a PC to Retrieve Test Shots from the CT-3500 S2	10
3.5 Testing Procedures	12
3.5.1. Entering Test Record Header Information	12
3.5.2. Timing an OPEN Operation	15
3.5.3. Timing a CLOSE Operation	18
3.5.4. Timing an OPEN-CLOSE Operation	21
3.5.5. Timing a CLOSE-OPEN Operation	24
3.5.6. Timing a Special OPEN Operation	27
3.6 Working With Test Shots	30
3.6.1. Viewing the Contents of the Working Memory	30
3.6.2. Saving Test Results to a Test Shot	32
3.6.3. Restoring a Test Shot From Flash EEPROM	34
3.6.4. Restoring a Test Shot From a USB Flash Drive	37
3.6.5. Copying Test Records to a USB Flash Drive	39
3.6.6. Printing the Test Record Directory	42
3.6.7. Erasing Test Records from the Flash EEPROM	44
3.7 Performing Cable Diagnostics	47
4.0 Getting the Latest Firmware, Software, and Manuals	48

LIST OF TABLES

Table 1. CT-3500 S2 Technical Specifications 3

LIST OF FIGURES

Figure 1. CT-3500 S2 Controls and Indicators..... 4

Figure 2. Typical CT-3500 S2 Connection Diagram (Trigger Cable with 4 Leads) 6

Figure 3. Typical CT-3500 S2 Connection Diagram (Trigger Cable with 3 Leads) 7

Figure 4. Sample OPEN Test Results Printout..... 17

Figure 5. Sample CLOSE Test Results Printout..... 20

Figure 6. Sample OPEN-CLOSE Test Results Printout 23

Figure 7. Sample CLOSE-OPEN Test Results Printout 26

Figure 8. Sample Special OPEN Test Results Printout..... 29

CONVENTIONS USED IN THIS DOCUMENT

This document uses the following conventions:

- A key, switch, or knob on the CT-3500 S2 is indicated as **[KEY]**, **[SWITCH]**, **[KNOB]**.
- Menu options are referenced as *(MENU OPTION)*.
- The terms “test record” and “test shot” are used interchangeably.
- CT-3500 S2 screen output is shown as:

```
1. OPTION 1  
2. OPTION 2  
3. OPTION 3  
4. OPTION 4  
5. OPTION 5
```

- When instructions are provided, the menu item that should be selected is shown in **bold** as shown below (option 3 should be selected):

```
1. OPTION 1  
2. OPTION 2  
3. OPTION 3  
4. OPTION 4  
5. OPTION 5
```

- Warning messages are indicated as:



Warning message

WARNING

- Important notes are indicated as:



Note details

NOTE

1.0 INTRODUCTION

1.1 General Description and Features

The CT-3500 S2 is Vanguard's second generation, stand-alone, digital, microprocessor-controlled, circuit-breaker timer. It measures the elapsed time from the instant a breaker coil is energized to the instant of opening or closing of a circuit-breaker's dry contacts. In addition to timing a breaker's contact response time, the CT-3500 S2 can also time relays or other switching functions that use an initiating trigger voltage (24-300 Volts DC or AC). The timer-triggering voltage starts three independent electronic timers. Each timer is individually stopped by its respective dry-contact closing or opening. The CT-3500 can fully analyze the timing of all circuit breaker operations (Open, Close, Open – Close, and Close – Open). Timing results are displayed in milliseconds and cycles on the unit's back-lit LCD screen and can be printed on the built-in 2.5-inch wide thermal printer.

Contact Timing Inputs

The CT-3500 S2 features three dry-contact, timer-channel monitoring inputs. The dry-contact channels use an isolated 15 Vdc power supply to monitor the circuit breaker contact states. All inputs are shunted to ground until the instant a test is initiated. All contact timing inputs are protected against static discharge. A contact self-test cable-mode is also available for testing cables or connections to the breaker.

User Interface

The CT-3500 S2 features a back-lit LCD screen (128 x 64 pixels) that is viewable in both bright sunlight and low-light levels. A rugged, 44-key, "QWERTY" membrane keypad is used to control the unit and input data. The unit's built-in 2.5-inch wide thermal printer can be used to print test reports.

Internal Test Record Storage

The CT-3500 S2 can store up to 128 test records in Flash EEPROM. Test records can be retrieved and printed on the built-in thermal printer, or they can be transferred to a PC via the unit's USB interface. The USB interface can also be used for diagnostic testing and for updating firmware. The CT-3500 S2 also features a USB Flash drive interface that can be used to store test records on an external USB Flash drive. A Windows®-based Circuit Breaker Analysis application is provided with each unit and can be used to transfer test records to a PC. Test records can also be reviewed, printed or exported in Excel, PDF, and XML formats for further analysis.

1.2 Technical Specifications

Table 1. CT-3500 S2 Technical Specifications

TYPE	portable circuit-breaker analyzer
PHYSICAL SPECIFICATIONS	16"W x 7"H x 13" D (40.6 cm x 17.4 cm x 33 cm); Weight: 14 lbs. (6.4 Kg)
INPUT POWER	100-240 Vac, 50/60 Hz
DRY-CONTACT INPUT	3 channels
TRIGGER INPUT VOLTAGE	open/close: 24-300 V, DC or peak AC
BREAKER OPERATIONS	Open, Close, Open-Close, Close-Open
TIMING RESOLUTION	±0.1 millisecond; accuracy: 0.05% of reading ±0.1 ms
DISPLAY	back-lit LCD screen (128 x 64 pixels); viewable in bright sunlight and low light conditions
KEYPAD	rugged, 44-key "QWERTY"-style membrane keypad
PRINTER	built-in 2.5-inch wide thermal printer
INTERNAL TEST RECORD STORAGE	stores up to 128 timing records
COMPUTER INTERFACE	one USB PC interface, one USB Flash drive interface
PC SOFTWARE	Windows®-based Breaker Analysis software included with purchase price
SAFETY	designed to meet IEC61010 (1995), UL61010A-1, CSA-C22.2 standards
ENVIRONMENT	Operating: -10°C to +50°C (+15°F to +122°F); Storage: -30°C to +70°C (-22°F to +158°F)
HUMIDITY	90% RH @ 40°C (104°F) non-condensing
ALTITUDE	2,000 m (6,562 ft) to full safety specifications
CABLES	furnished with full set of test leads (including 20-foot contact leads, 30-foot contact lead extensions, trigger cable, power cable, and ground cable)
OPTIONS	transportation case
WARRANTY	one year on parts and labor



NOTE

The above specifications are valid at nominal operating voltage and at a temperature of 25°C (77°F). Specifications may change without prior notice.

1.3 CT-3500 S2 Controls and Indicators

The CT-3500 S2's controls and indicators are shown in Figure 1 below. The purpose of the controls and indicators may seem obvious, but users should familiarize themselves with them before using the CT-3500 S2. Accidental misuse of the controls will usually cause no serious harm. Users should also familiarize themselves with the safety summary information found on the front page of this User's Manual.

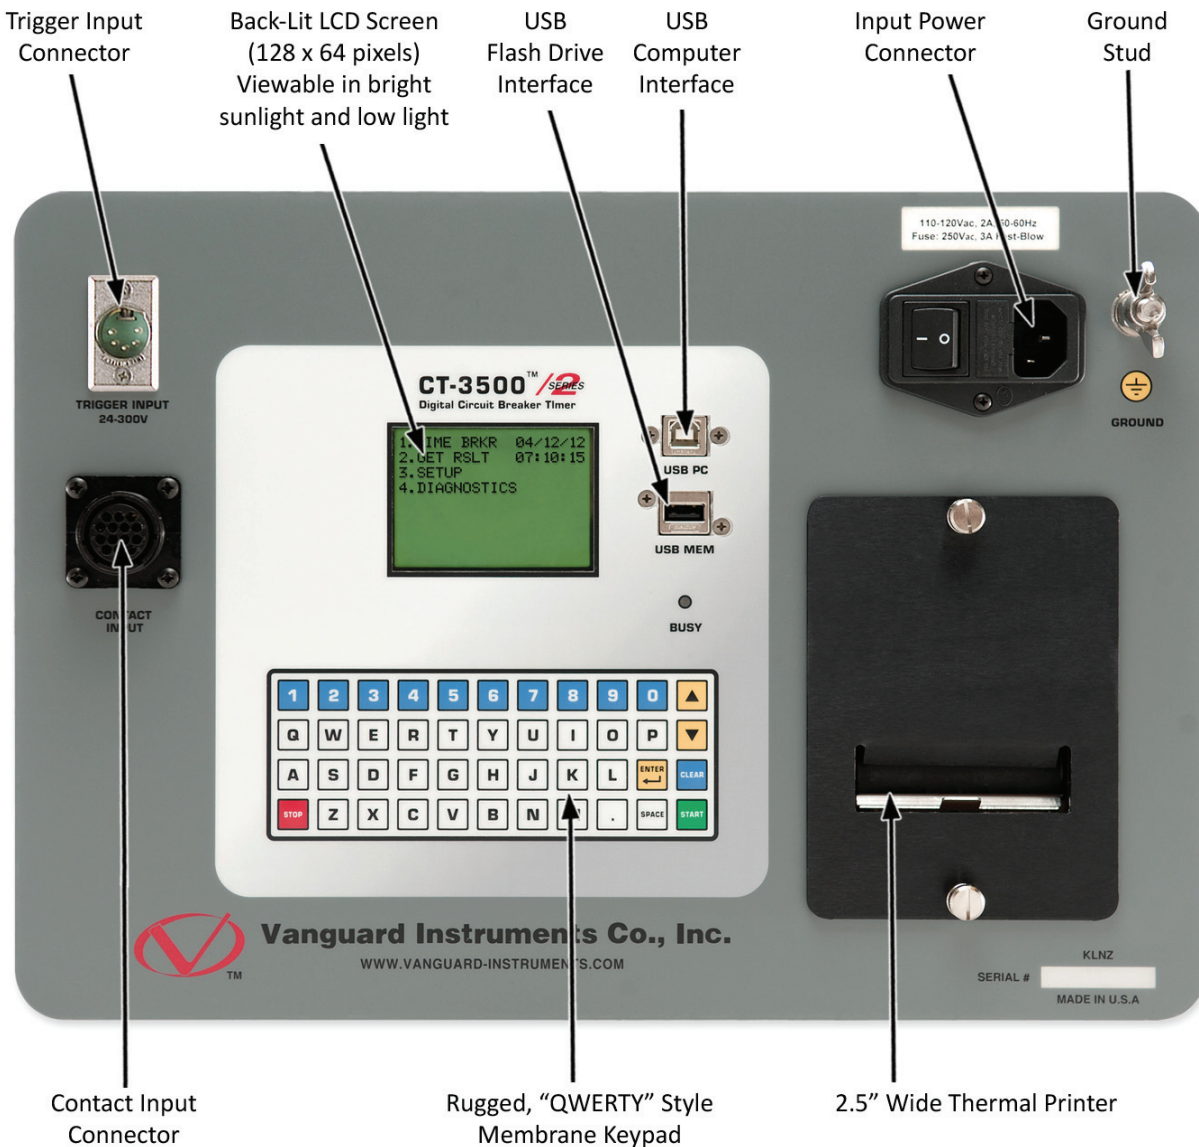


Figure 1. CT-3500 S2 Controls and Indicators

2.0 PRE-TEST SETUP

2.1 Operating Voltages

The CT-3500 S2 operates on voltages between 100-240 Vac, 50/60 Hz.

2.2 LCD Screen Contrast Control

To increase the LCD screen contrast, press and hold the **[^]** key for two seconds. Release the button when the desired contrast level has been reached.

To decrease the LCD screen contrast, press and hold the **[v]** key for two seconds. Release the button when the desired contrast level has been reached.

2.3 Printer Paper Control

To advance the thermal printer paper, press and release the **[^]** key.

To retract the thermal printer paper, press and release the **[v]** key.

2.4 Printer Paper

The CT-3500 S2's built-in thermal printer uses 2.5-inch wide thermal paper for printing test results. To maintain the highest print quality and to avoid paper jams, the use of thermal paper supplied by Vanguard Instruments Company is highly recommended. Additional paper can be ordered from the following sources:

Vanguard Instruments Co, Inc.

1520 S. Hellman Avenue

Ontario, CA 91761

Tel: 909-923-9390

Fax: 909-923-9391

Part Number: VIC TP-3 paper

BG Instrument Co.

13607 E. Trent Avenue

Spokane, WA 99216

Tel: 509-893-9881

Fax: 509-893-9803

Part Number: VIC TP-3 paper

3.0 OPERATING PROCEDURES

3.1 Connection Diagrams

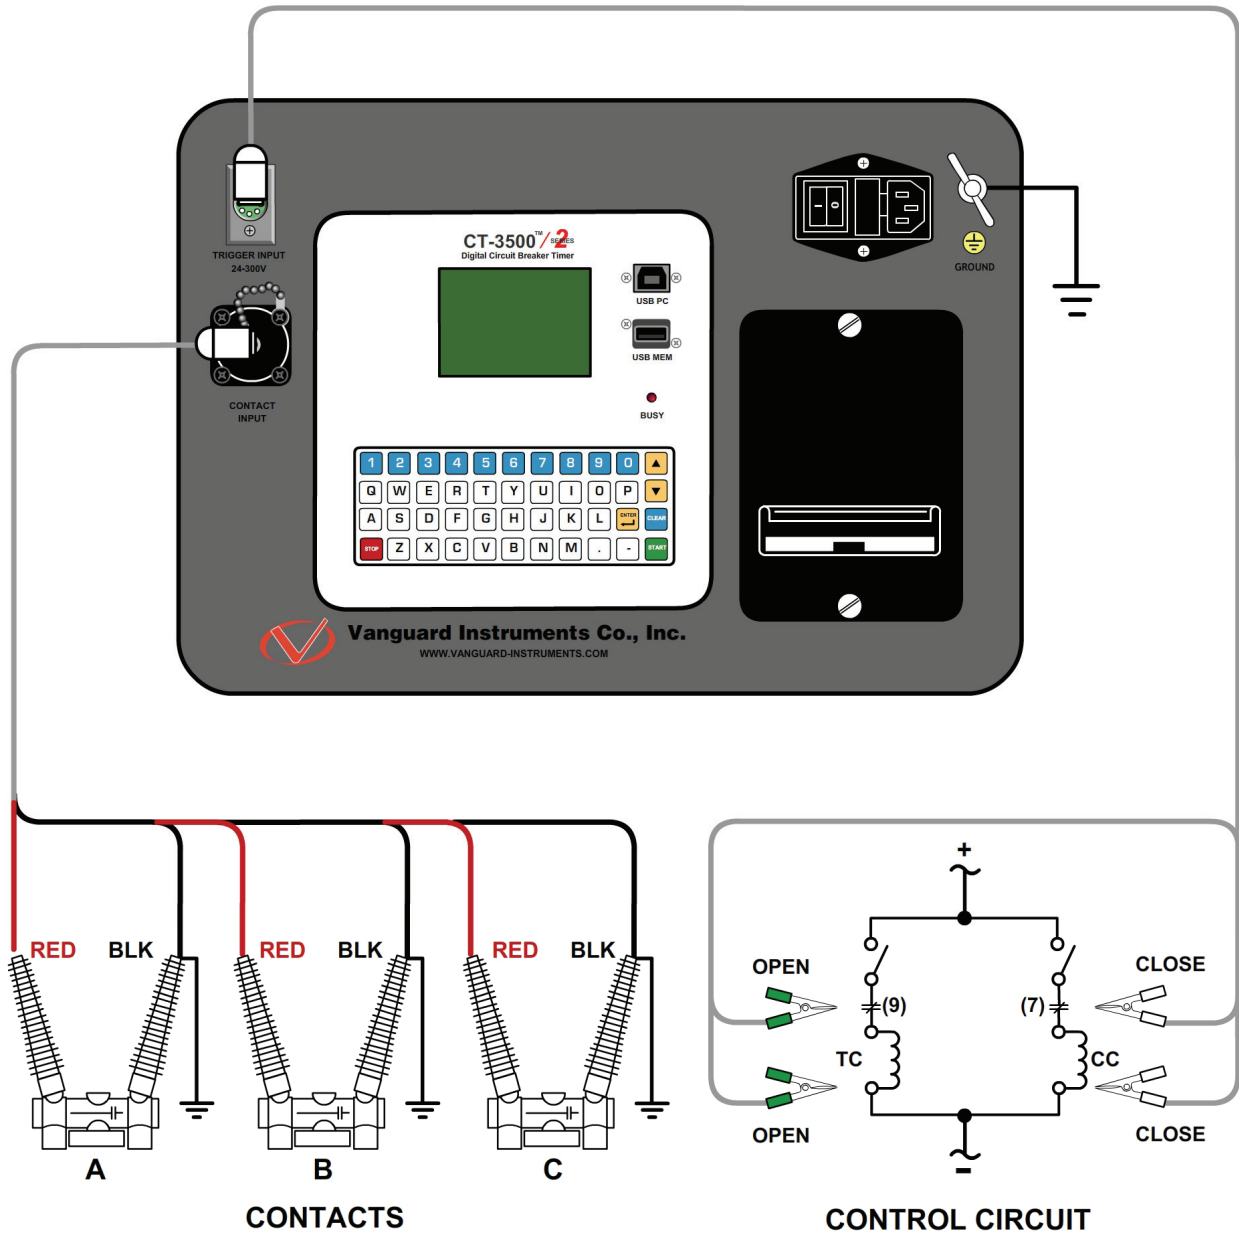


Figure 2. Typical CT-3500 S2 Connection Diagram (Trigger Cable with 4 Leads)

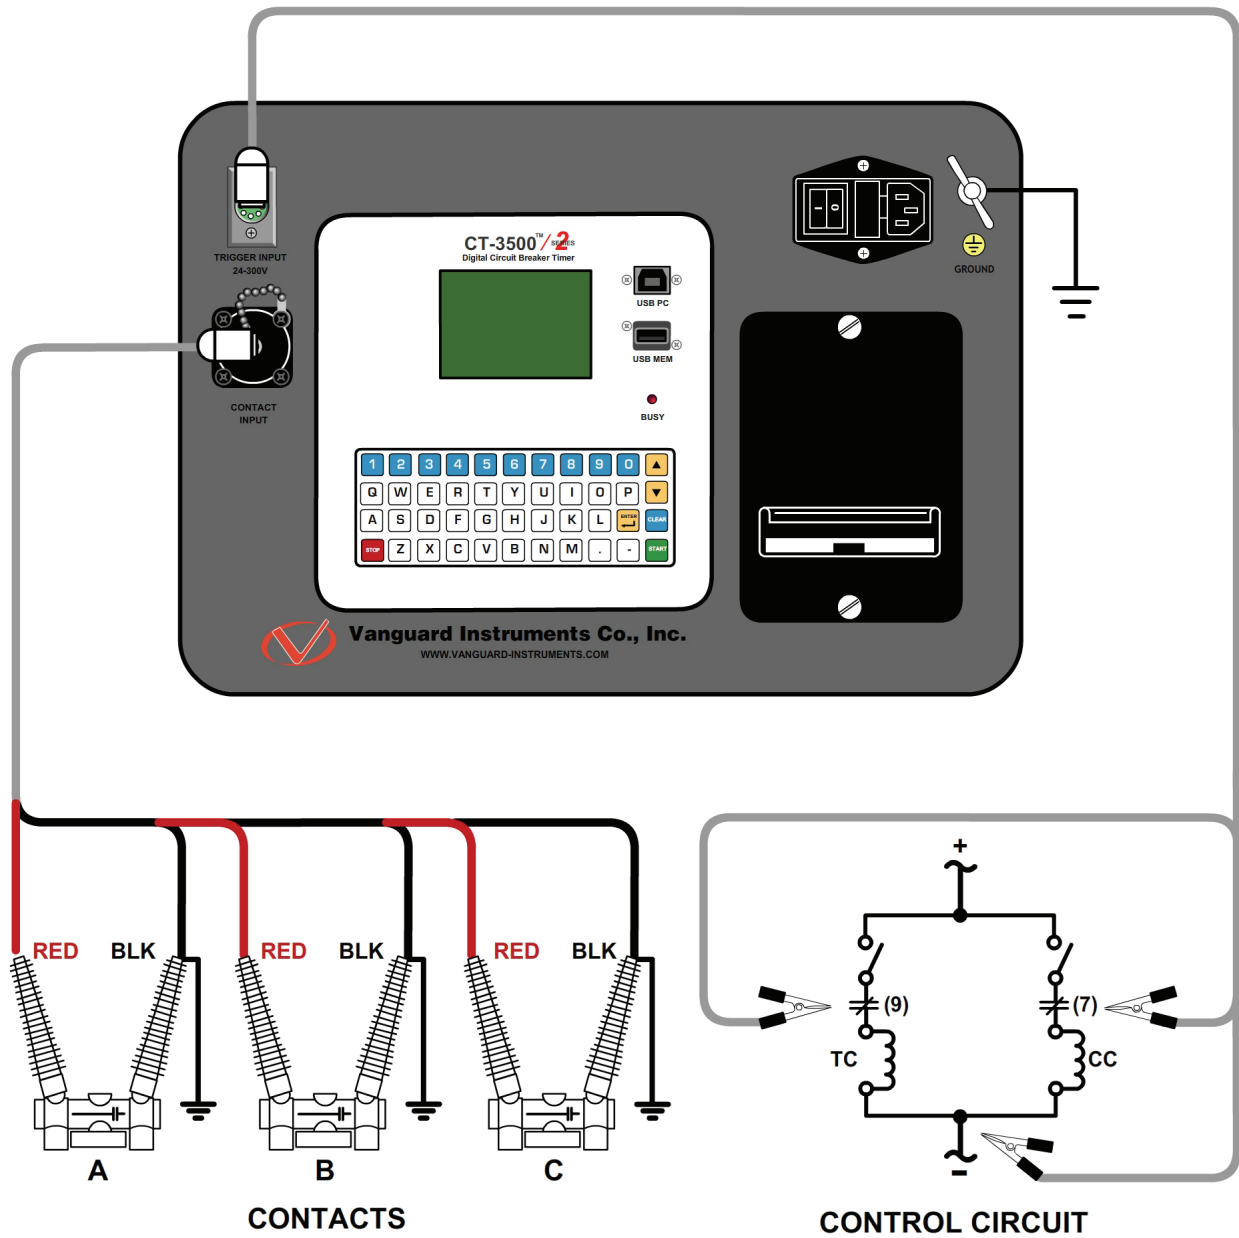


Figure 3. Typical CT-3500 S2 Connection Diagram (Trigger Cable with 3 Leads)

3.2 Setting the Date and Time

To set the date and time:

- a. Start from the "START-UP" menu:

```
1. TIME BRKR 05/14/12
2. GET RSLT 08:45:25
3. SETUP
4. DIAGNOSTICS
```

Press the **[3]** key (*SETUP*).

- b. The following screen will be displayed:

```
1. SHOT DESCRIPTION
2. SAVE / RESTORE
3. SET 50/60 HZ
4. SET DATE & TIME
```

Press the **[4]** key (*SET DATE & TIME*)

- c. The following screen will be displayed:

```
ENTER DATE
MM-DD-YY
```

Type in the date using the keypad. The following screen will be displayed:

```
ENTER TIME
HH:MM:SS
```

Enter the time using the alpha-numeric keypad. When the time has been entered, you will be immediately returned to the "START-UP" menu.

3.3 Setting the Frequency

Follow the steps below to set the frequency (50 or 60 Hz):

- a. Start from the "START-UP" menu:



```
1. TIME BRKR 05/14/12
2. GET RSLT 08:45:25
3. SETUP
4. DIAGNOSTICS
```

Press the **[3]** key (*SETUP*).


- b. The following screen will be displayed:



```
1. SHOT DESCRIPTION
2. SAVE / RESTORE
3. SET 50/60 HZ
4. SET DATE & TIME
```


Press the **[3]** key (*SET 50/60 HZ*).

- c. The following screen will be displayed:

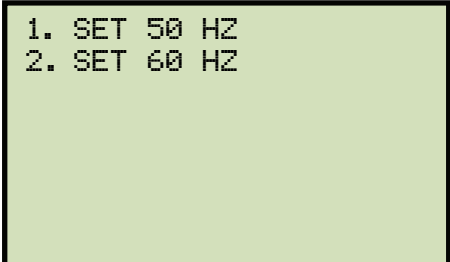

```
1. SET 50 HZ
2. SET 60 HZ
```

Select the preferred frequency by pressing the corresponding key on the keypad (**[1]** or **[2]**). The frequency will be set and a confirmation screen will be displayed as shown below:

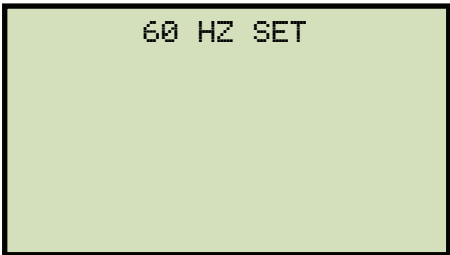


```
60 HZ SET
```

Press any key to return to the "START-UP" menu.


3.4 Using a PC to Retrieve Test Shots from the CT-3500 S2

The CT-3500 S2 can be connected to a PC, and test records can be retrieved from the unit using the included Vanguard Universal Software (VUS, version 2.05 and above). Follow the steps below to properly connect the CT-3500 S2 and configure the VUS application to recognize the unit.

- a. Install the Vanguard Universal Software.
- b. Connect the CT-3500 S2 to the PC by connecting a USB cable from an open USB port on the PC to the unit's "USB PC" port.
- c. Turn on the power on the CT-3500 S2.
- d. If this is the first time you are connecting the unit to the PC, Windows will recognize it as a new device and automatically install necessary drivers. If using Windows XP, you may be prompted to install drivers. Select the automatic installation option and Windows will locate the generic drivers necessary.
- e. Please note that although the unit is connected via USB, it uses an internal serial interface to communicate with the PC. As such, it will appear in the windows Device Manager as a USB Serial Port. Open the Device Manager from the Windows Control Panel and note the COM port number. For example, in the installation shown below, the CT-3500 S2 is shown as COM10 (USB Serial Port).

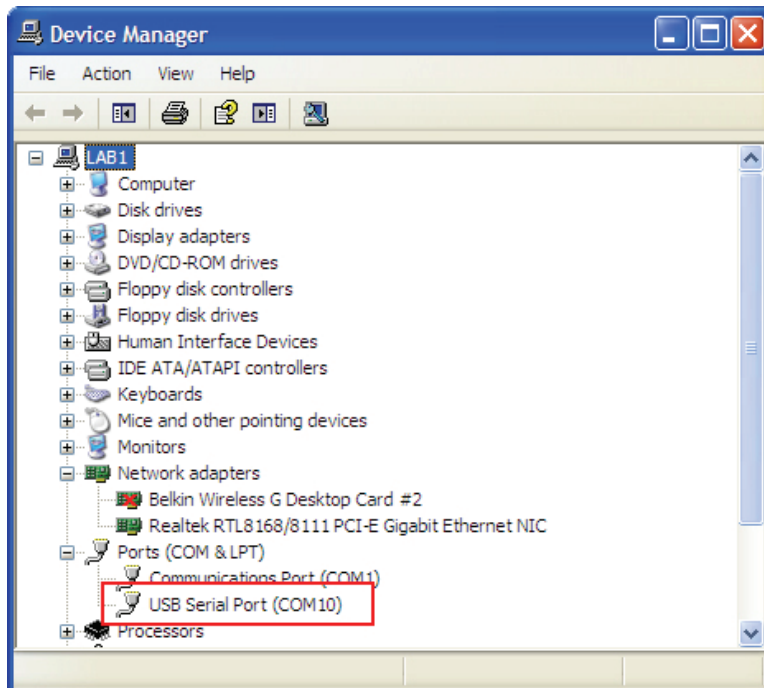

- f. Launch the VUS application and then click on the “Settings” icon. The following window will be displayed:

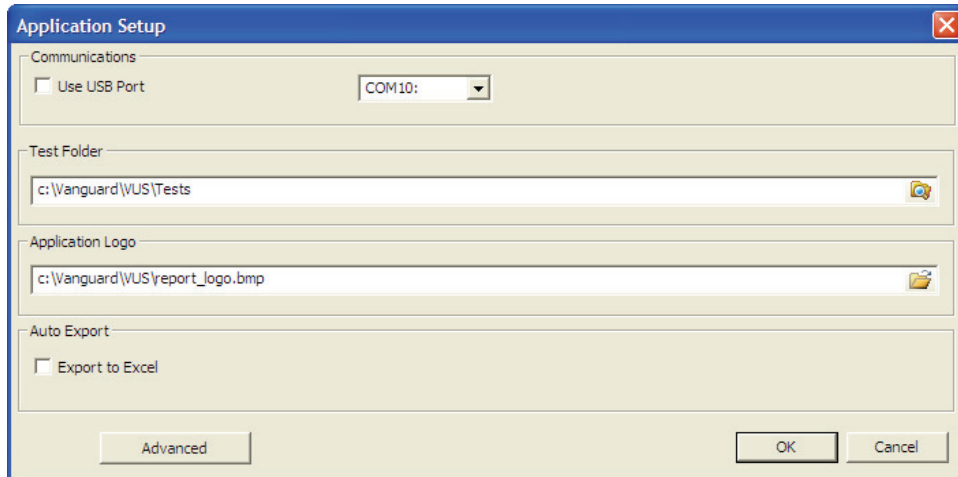

Make sure that the “Use USB Port” option is UN-checked. Then, from the drop down menu to the right of the “Use USB Port” checkbox select the COM port that corresponds to the port that the CT-3500 S2 is connected to. In the above example, the CT-3500 S2 is connected to COM10. Then click the OK button.

- g. You can now use the VUS software to transfer test records from the CT-3500 S2 to the PC.

3.5 Testing Procedures

3.5.1. Entering Test Record Header Information

You can enter the test record header information before performing tests. The record header includes identifying information such as the company, station, circuit, manufacturer, etc. Once the header information has been set, it will apply to all subsequent test records. Follow the steps below to enter the test header information:


- a. Start from the "START-UP" menu:



```
1. TIME BRKR 05/14/12
2. GET RSLT 08:45:25
3. SETUP
4. DIAGNOSTICS
```

Press the **[3]** key (*SETUP*).


- b. The following screen will be displayed:

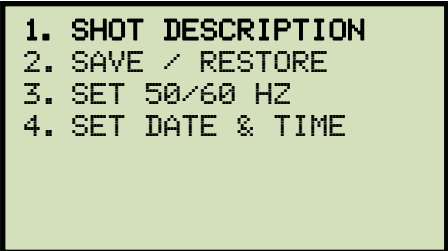

```
1. SHOT DESCRIPTION
2. SAVE / RESTORE
3. SET 50/60 HZ
4. SET DATE & TIME
```

Press the **[1]** key (*SHOT DESCRIPTION*).

- c. The following screen will be displayed:

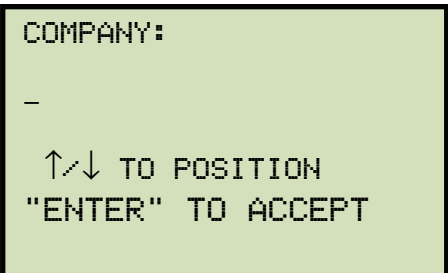

```
COMPANY:
-
↑/↓ TO POSITION
"ENTER" TO ACCEPT
```

Type the company name using the keypad. Press the **[ENTER]** key when you are done typing the company name.

- d. The following screen will be displayed:

```
STATION:  
  
-  
  
↑/↓ TO POSITION  
"ENTER" TO ACCEPT
```

Type the station name using the keypad and then press the **[ENTER]** key.

- e. The following screen will be displayed:

```
CIRCUIT:  
  
-  
  
↑/↓ TO POSITION  
"ENTER" TO ACCEPT
```

Type the circuit information using the keypad and then press the **[ENTER]** key.

- f. The following screen will be displayed:

```
MANUFACTURER:  
  
-  
  
↑/↓ TO POSITION  
"ENTER" TO ACCEPT
```

Type the manufacturer name using the keypad and then press the **[ENTER]** key.

- g. The following screen will be displayed:

```
MODEL:
-
↑/↓ TO POSITION
"ENTER" TO ACCEPT
```

Type the circuit breaker's model information using the keypad and then press the **[ENTER]** key.

- h. The following screen will be displayed:

```
SERIAL NUMBER:
-
↑/↓ TO POSITION
"ENTER" TO ACCEPT
```

Type the circuit breaker's serial number using the keypad and then press the **[ENTER]** key.

- i. The following screen will be displayed:

```
KVA RATING:
-
↑/↓ TO POSITION
"ENTER" TO ACCEPT
```

Type the circuit breaker's KVA rating using the keypad and then press the **[ENTER]** key.

- j. The following screen will be displayed:

```
OPERATOR:
-
↑/↓ TO POSITION
"ENTER" TO ACCEPT
```

Type the operator's name using the keypad and then press the **[ENTER]** key. All header information will be saved, and you will be returned to the "START-UP" menu.

3.5.2. Timing an OPEN Operation

Follow the steps below to time an OPEN operation:

- a. Start from the "START-UP" menu:

```
1. TIME BRKR 05/14/12
2. GET RSLT 08:45:25
3. SETUP
4. DIAGNOSTICS
```

Press the **[1]** key (*TIME BRKR*).

- b. The following screen will be displayed:

```
TIMING MODE:

1.OPEN      2.CLOSE
3.OPEN-CL   4.CL-OPEN
5.SP OPEN
```

Press the **[1]** key (*OPEN*).

- c. The following screen will be displayed:

```
TEST: OPEN

OPEN BREAKER NOW...
```

Manually open the breaker.

- d. The following screen will be displayed:


```
PRINT TEST RESULTS?
1.YES
2.NO
```

Press the **[1]** key (*YES*) to print the test results on the unit's built-in thermal printer.

**NOTE**

You can also view the test results on the unit's LCD screen. Please see section 3.6.1.


- e. The test results will be printed (please see Figure 4) and the following screen will be displayed:

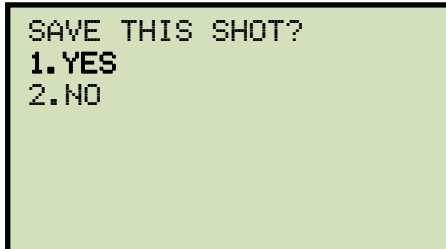

Press the **[1]** key (*YES*) to save the test shot.

**NOTE**

If a USB Flash drive is connected to the unit's "USB MEM" port, the following screen will be displayed:

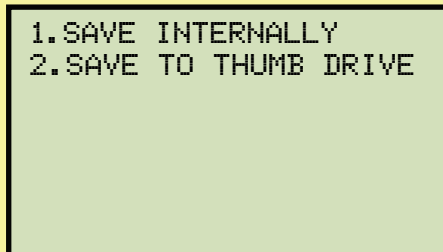


1. *SAVE INTERNALLY*

Press the **[1]** key (*SAVE INTERNALLY*) to save the test shot to the unit's internal memory. **Continue to step f.**


2. *SAVE TO THUMB DRIVE*

Press the **[2]** key (*SAVE TO THUMB DRIVE*) to save the test shot to the connected USB Flash drive. The test record will be saved and the following screen will be displayed:

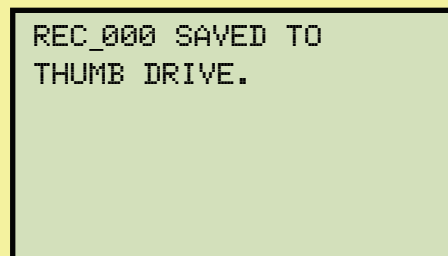

Press any key to return to the "START-UP" menu.

- f. The following screen will be displayed:

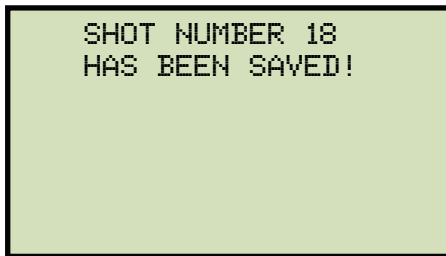

Press any key to return to the "START-UP" menu.

TEST RESULTS			
DATE:05/14/12		TIME:13:27:58	
COMPANY:		VANGUARD INSTRUMENT	
STATION:			
CIRCUIT:			
MFR:			
MODEL:			
S/N:			
KVA:			
OPERATOR:			
NOTES: _____			
TEST: OPEN			
CONTACT OPEN TIME			
CH	TIME	CYCLE	BOUNCE
	(ms)	60 Hz	(ms)
A	23.3	1.398	0.0
B	22.3	1.338	0.0
C	21.3	1.278	0.0
DELTA TIME (ms) =			2.0

Figure 4. Sample OPEN Test Results Printout

3.5.3. Timing a CLOSE Operation

Follow the steps below to time a CLOSE operation:

- a. Start from the "START-UP" menu:

```
1. TIME BRKR 05/14/12
2. GET RSLT 08:45:25
3. SETUP
4. DIAGNOSTICS
```

Press the **[1]** key (*TIME BRKR*).

- b. The following screen will be displayed

```
TIMING MODE:

1.OPEN      2.CLOSE
3.OPEN-CL   4.CL-OPEN
5.SP OPEN
```

Press the **[2]** key (*CLOSE*).

- c. The following screen will be displayed:

```
TEST: CLOSE

CLOSE BREAKER NOW...
```

Manually close the breaker.

- d. The following screen will be displayed:

```
PRINT TEST RESULTS?
1.YES
2.NO
```


Press the **[1]** key (*YES*) to print the test results on the unit's built-in thermal printer.



You can also view the test results on the unit's LCD screen. Please see section 3.6.1.

NOTE

- e. The test results will be printed (please see Figure 5) and the following screen will be displayed:

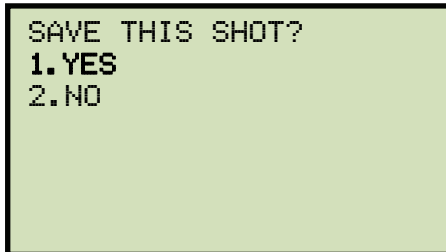


Press the **[1]** key (YES) to save the test shot.



If a USB Flash drive is connected to the unit's "USB MEM" port, the following screen will be displayed:

NOTE

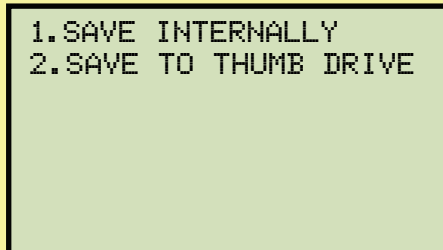


1. *SAVE INTERNALLY*

Press the **[1]** key (*SAVE INTERNALLY*) to save the test shot to the unit's internal memory. **Continue to step f.**


2. *SAVE TO THUMB DRIVE*

Press the **[2]** key (*SAVE TO THUMB DRIVE*) to save the test shot to the connected USB Flash drive. The test record will be saved and the following screen will be displayed:

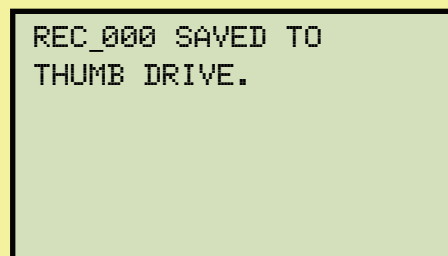

Press any key to return to the "START-UP" menu.

- f. The following screen will be displayed:

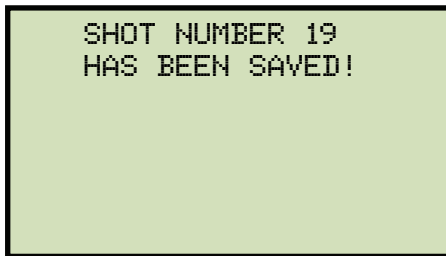

```
SHOT NUMBER 19
HAS BEEN SAVED!
```

Press any key to return to the "START-UP" menu.

TEST RESULTS	
DATE:05/14/12	TIME:13:56:36
COMPANY:	VANGUARD INSTRUMENT
STATION:	
CIRCUIT:	
MFR:	
MODEL:	
S/N:	
KVA:	
OPERATOR:	
NOTES: _____	
TEST: CLOSE	
CONTACT CLOSE TIME	
CH	TIME CYCLE BOUNCE
	(ms) 60 Hz (ms)
A	103.3 6.198 0.0
B	102.3 6.138 0.0
C	101.3 6.078 0.0
DELTA TIME (ms) = 2.0	

Figure 5. Sample CLOSE Test Results Printout

3.5.4. Timing an OPEN-CLOSE Operation

Follow the steps below to time an OPEN-CLOSE operation:

- a. Start from the "START-UP" menu:

```
1. TIME BRKR 05/15/12
2. GET RSLT 09:15:25
3. SETUP
4. DIAGNOSTICS
```

Press the **[1]** key (*TIME BRKR*).

- b. The following screen will be displayed:

```
TIMING MODE:

1.OPEN      2.CLOSE
3.OPEN-CL   4.CL-OPEN
5.SP OPEN
```

Press the **[3]** key (*OPEN-CL*).

- c. The following screen will be displayed:

```
TEST: OPEN-CLOSE

OPEN BREAKER NOW...
```

Manually initiate an OPEN-CLOSE operation on the breaker.

- d. The following screen will be displayed:

```
PRINT TEST RESULTS?
1.YES
2.NO
```


Press the **[1]** key (*YES*) to print the test results on the unit's built-in thermal printer.



You can also view the test results on the unit's LCD screen. Please see section 3.6.1.

NOTE

- e. The test results will be printed (please see Figure 6) and the following screen will be displayed:

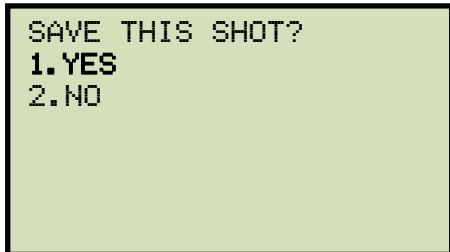


Press the **[1]** key (*YES*) to save the test shot.



If a USB Flash drive is connected to the unit's "USB MEM" port, the following screen will be displayed:

NOTE

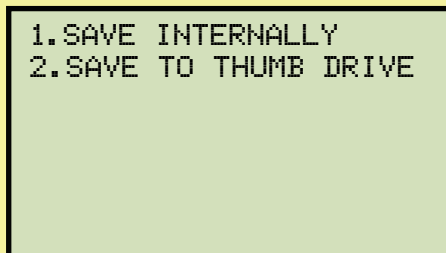


1. *SAVE INTERNALLY*

Press the **[1]** key (*SAVE INTERNALLY*) to save the test shot to the unit's internal memory. **Continue to step f.**

2. *SAVE TO THUMB DRIVE*

Press the **[2]** key (*SAVE TO THUMB DRIVE*) to save the test shot to the connected USB Flash drive. The test record will be saved and the following screen will be displayed:

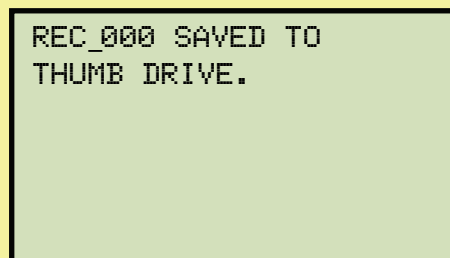

Press any key to return to the "START-UP" menu.

- f. The following screen will be displayed:

```

SHOT NUMBER 20
HAS BEEN SAVED!
  
```

Press any key to return to the "START-UP" menu.

TEST RESULTS			
DATE:05/15/12 TIME:07:53:46			
COMPANY: VANGUARD INSTRUMENT			
STATION:			
CIRCUIT:			
MFR:			
MODEL:			
S/N:			
KVA:			
OPERATOR:			
NOTES: _____			
TEST: OPEN-CLOSE			
CONTACT OPEN TIME			
CH	TIME	CYCLE	BOUNCE
	(ms)	60 Hz	(ms)
A	845.2	50.712	0.0
B	846.2	50.772	0.0
C	847.2	50.832	0.0
DELTA TIME (ms) =			2.0
CONTACT CLOSE TIME			
CH	TIME	CYCLE	BOUNCE
	(ms)	60 Hz	(ms)
A	1025.2	61.512	0.0
B	1026.2	61.572	0.0
C	1027.2	61.632	0.0
DELTA TIME (ms) =			2.0
CONTACT DEAD TIME			
CH	TIME	CYCLE	
	(ms)	60 Hz	
A	180.0	10.800	
B	180.0	10.800	
C	180.0	10.800	

Figure 6. Sample OPEN-CLOSE Test Results Printout

3.5.5. Timing a CLOSE-OPEN Operation

Follow the steps below to time a CLOSE-OPEN operation:

- a. Start from the "START-UP" menu:

```
1. TIME BRKR 05/15/12
2. GET RSLT 09:15:25
3. SETUP
4. DIAGNOSTICS
```

Press the **[1]** key (*TIME BRKR*).

- b. The following screen will be displayed:

```
TIMING MODE:

1.OPEN      2.CLOSE
3.OPEN-CL   4.CL-OPEN
5.SP OPEN
```

Press the **[4]** key (*CL-OPEN*).

- c. The following screen will be displayed:

```
TEST: CLOSE-OPEN

CLOSE BREAKER NOW...
```

Manually initiate a CLOSE-OPEN operation on the breaker.

- d. The following screen will be displayed:

```
PRINT TEST RESULTS?
1.YES
2.NO
```


Press the **[1]** key (*YES*) to print the test results on the unit's built-in thermal printer.



You can also view the test results on the unit's LCD screen. Please see section 3.6.1.

NOTE

- e. The test results will be printed (please see Figure 7) and the following screen will be displayed:

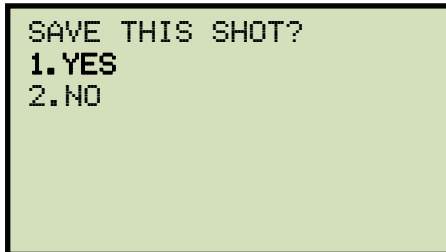


Press the **[1]** key (YES) to save the test shot.



If a USB Flash drive is connected to the unit's "USB MEM" port, the following screen will be displayed:

NOTE

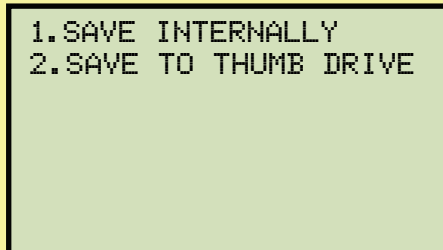


1. *SAVE INTERNALLY*

Press the **[1]** key (*SAVE INTERNALLY*) to save the test shot to the unit's internal memory. **Continue to step f.**

2. *SAVE TO THUMB DRIVE*

Press the **[2]** key (*SAVE TO THUMB DRIVE*) to save the test shot to the connected USB Flash drive. The test record will be saved and the following screen will be displayed:

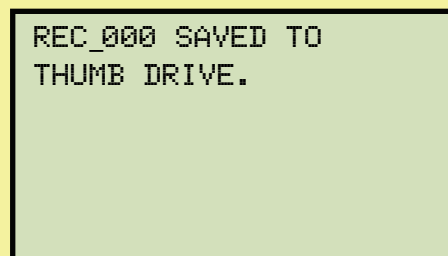

Press any key to return to the "START-UP" menu.

- f. The following screen will be displayed:

```

SHOT NUMBER 21
HAS BEEN SAVED!

```

Press any key to return to the "START-UP" menu.

TEST RESULTS			
DATE:05/15/12		TIME:08:00:50	
COMPANY:		VANGUARD INSTRUMENT	
STATION:			
CIRCUIT:			
MFR:			
MODEL:			
S/N:			
KVA:			
OPERATOR:			
NOTES: _____			
TEST: CLOSE-OPEN			
CONTACT CLOSE TIME			
CH	TIME (ms)	CYCLE 60 Hz	BOUNCE (ms)
A	2650.4	159.024	0.0
B	2651.4	159.084	0.0
C	2652.4	159.144	0.0
DELTA TIME (ms) =			2.0
CONTACT OPEN TIME			
CH	TIME (ms)	CYCLE 60 Hz	BOUNCE (ms)
A	2710.4	162.624	0.0
B	2711.4	162.684	0.0
C	2712.4	162.744	0.0
DELTA TIME (ms) =			2.0
CONTACT LIVE TIME			
CH	TIME (ms)	CYCLE 60 Hz	
A	60.0	3.600	
B	60.0	3.600	
C	60.0	3.600	

Figure 7. Sample CLOSE-OPEN Test Results Printout

3.5.6. Timing a Special OPEN Operation

Some special circuit breakers are designed in such a way that two of the dry-contacts follow the breaker operation while the third contact operates in the opposite direction. For example, when an OPEN operation is performed, two of the dry-contacts open while the third contact closes. The CT-3500 S2 offers a special OPEN test that can be used to time such a breaker.

Follow the steps below to perform a special OPEN operation:


- a. Start from the "START-UP" menu:



```
1. TIME BRKR 05/16/12
2. GET RSLT 09:55:55
3. SETUP
4. DIAGNOSTICS
```

Press the **[1]** key (*TIME BRKR*).


- b. The following screen will be displayed:

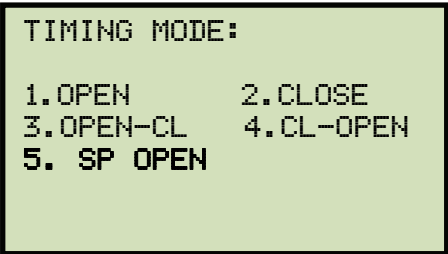

```
TIMING MODE:
1. OPEN      2. CLOSE
3. OPEN-CL   4. CL-OPEN
5. SP OPEN
```

Press the **[5]** key (*SP OPEN*).


- c. The following screen will be displayed:

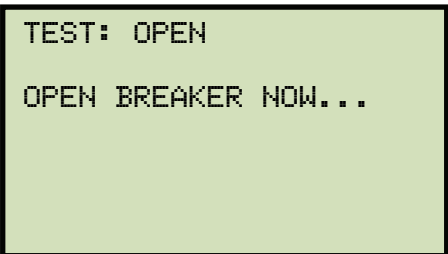

```
TEST: OPEN
OPEN BREAKER NOW...
```

Manually initiate an OPEN operation on the breaker.

- d. The following screen will be displayed:

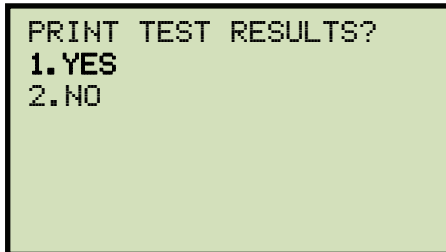

```
PRINT TEST RESULTS?  
1.YES  
2.NO
```


Press the **[1]** key (YES) to print the test results on the unit's built-in thermal printer.



You can also view the test results on the unit's LCD screen. Please see section 3.6.1.

NOTE

- e. The test results will be printed (please see Figure 8) and the following screen will be displayed:

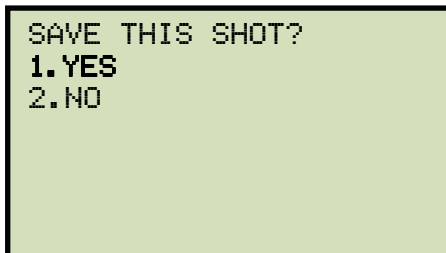


```
SAVE THIS SHOT?  
1.YES  
2.NO
```

Press the **[1]** key (YES) to save the test shot.



If a USB Flash drive is connected to the unit's "USB MEM" port, the following screen will be displayed:

NOTE

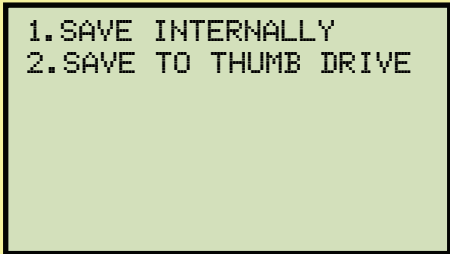

```
1.SAVE INTERNALLY  
2.SAVE TO THUMB DRIVE
```

1. *SAVE INTERNALLY*

Press the **[1]** key (*SAVE INTERNALLY*) to save the test shot to the unit's internal memory. **Continue to step f.**

2. *SAVE TO THUMB DRIVE*

Press the **[2]** key (*SAVE TO THUMB DRIVE*) to save the test shot to the connected USB Flash drive. The test record will be saved and the following screen will be displayed:

```
REC_000 SAVED TO
THUMB DRIVE.
```

Press any key to return to the "START-UP" menu.

- f. The following screen will be displayed

```
SHOT NUMBER 22
HAS BEEN SAVED!
```

Press any key to return to the "START-UP" menu.

TEST RESULTS			
DATE:05/16/12	TIME:07:19:09		
COMPANY:	VANGUARD INSTRUMENT		
STATION:			
CIRCUIT:			
MFR:			
MODEL:			
S/N:			
KVA:			
OPERATOR:			
NOTES: _____			
TEST: SPECIAL OPEN			
CONTACT OPEN TIME			
CH	TIME	CYCLE	BOUNCE
	(ms)	60 Hz	(ms)
A	1592.4	95.544	74.2
B	25.3	1.518	0.0
C	24.3	1.458	0.0
DELTA TIME (ms) = 1568.1			

Figure 8. Sample Special OPEN Test Results Printout

3.6 Working With Test Shots

3.6.1. Viewing the Contents of the Working Memory

Whenever a test is performed and the reading is kept, the data is temporarily stored in the CT-3500 S2's working memory. You can view the test reading in the unit's working memory using the steps below:

- a. Start from the "START-UP" menu:

```
1. TIME BRKR 05/15/12
2. GET RSLT 09:15:25
3. SETUP
4. DIAGNOSTICS
```

Press the **[2]** key (*GET RSLT*).

- b. The following screen will be displayed:

```
REVIEW TEST
1.DISPLAY TEST DATA
2.PRINT TEST DATA
```

1. *DISPLAY TEST DATA*

Press the **[1]** key (*DISPLAY TEST DATA*) to display the test results on the unit's LCD screen. The following screen will be displayed:

```
SHOT NUMBER: 2
OPEN SHOT
05/15/12 10:07:29
VANGUARD INSTRUMENTS
```

Press any key to view the test results. The following screen will be displayed:

```
OPEN (MS / CYCLES)
A 329.6MS 19.776CY
B 330.6MS 19.836CY
C 331.6MS 19.896CY
BOUNCE TIMES:
A 0.0MS 0.000CY
B 0.0MS 0.000CY
C 0.0MS 0.000CY
```

Press any key to return to the "START-UP" menu.

2. *PRINT TEST DATA*

Press the **[2]** key (*PRINT TEST DATA*) to print the test results on the unit's built-in thermal printer. The test results will be printed and you will be returned to the "START-UP" menu.

3.6.2. Saving Test Results to a Test Shot

After performing a test, the user is presented the option to save the test results to the unit's Flash EEPROM or to a USB Flash Drive. If the test results are not saved immediately after performing a test, they will still remain in the working memory and can be saved later, as long as a new test has not been performed and the unit has not been turned off. Follow the steps below to save the test results from the working memory to a test record (the following procedure can also be used to re-save a restored test record to a new memory location or to a USB Flash Drive):

- a. Perform a test or restore a test record to the working memory (see section 3.6.3 and 3.6.4), and then start from the "START-UP" menu:

```
1. TIME BRKR 05/16/12
2. GET RSLT 09:55:55
3. SETUP
4. DIAGNOSTICS
```

Press the **[3]** key (*SETUP*).

- b. The following screen will be displayed:

```
1. SHOT DESCRIPTION
2. SAVE / RESTORE
3. SET 50/60 HZ
4. SET DATE & TIME
```

Press the **[2]** key (*SAVE / RESTORE*)

- c. The following screen will be displayed:

```
1. SAVE SHOT
2. RESTORE SHOT
3. SHOT DIRECTORY
4. ERASE SHOT
5. COPY TO THUMB DRIVE
```



Option 5 (*COPY TO THUMB DRIVE*) will be listed only if a USB Flash drive is connected to the CT-3500 S2.


NOTE

Press the **[1]** key (*SAVE SHOT*).

If a USB Flash drive is connected to the unit, continue to step d.

If a USB Flash drive is NOT connected to the unit, continue to step e.

- d. The following screen will be displayed:

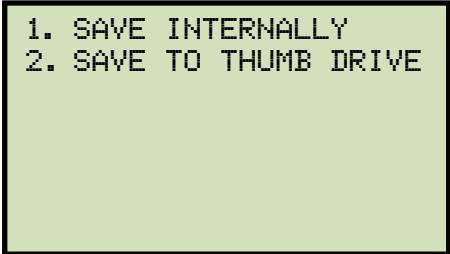

```
1. SAVE INTERNALLY
2. SAVE TO THUMB DRIVE
```

1. *SAVE INTERNALLY*

Press the **[1]** key (*SAVE INTERNALLY*) to save the test record to the unit's Flash EEPROM. **Continue to step e.**

2. *SAVE TO THUMB DRIVE*


Press the **[2]** key (*SAVE TO THUMB DRIVE*) to save the test record to the connected USB Flash drive. The following screen will be displayed:



```
REC_001 SAVED TO
THUMB DRIVE.
```

Press any key to return to the "START-UP" menu.

- e. The following screen will be displayed

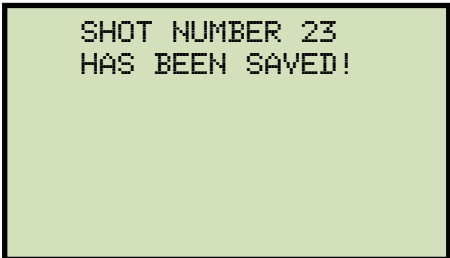

```
SHOT NUMBER 23
HAS BEEN SAVED!
```

Press any key to return to the "START-UP" menu.

3.6.3. Restoring a Test Shot From Flash EEPROM

Use the steps below to restore a test record from the CT-3500 S2's internal Flash EEPROM to the working memory:

- a. Start from the "START-UP" menu:

```
1. TIME BRKR 05/16/12
2. GET RSLT 09:55:55
3. SETUP
4. DIAGNOSTICS
```

Press the **[3]** key (*SETUP*).

- b. The following screen will be displayed:

```
1. SHOT DESCRIPTION
2. SAVE / RESTORE
3. SET 50/60 HZ
4. SET DATE & TIME
```

Press the **[2]** key (*SAVE / RESTORE*).

- c. The following screen will be displayed:

```
1. SAVE SHOT
2. RESTORE SHOT
3. SHOT DIRECTORY
4. ERASE SHOT
5. COPY TO THUMB DRIVE
```




NOTE

Option 5 (*COPY TO THUMB DRIVE*) will be listed only if a USB Flash drive is connected to the unit.

Press the **[2]** key (*RESTORE SHOT*).

- d. The following screen will be displayed:

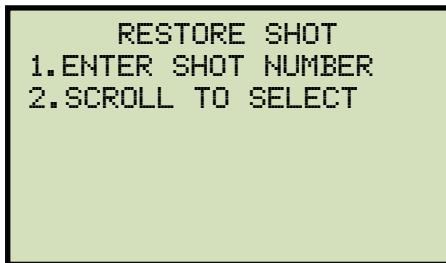


```
RESTORE SHOT
1. ENTER SHOT NUMBER
2. SCROLL TO SELECT
```



NOTE


If you have a USB Flash drive inserted in the unit's "USB MEM" port, the following screen will be displayed instead of the above screen:

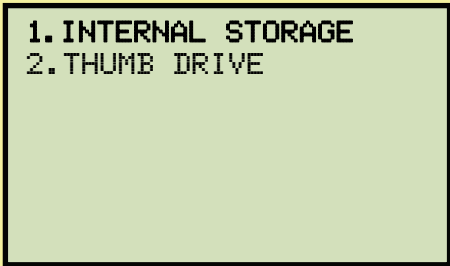

```
1. INTERNAL STORAGE
2. THUMB DRIVE
```

Press the **[1]** key (*INTERNAL STORAGE*).

The following screen will be displayed:

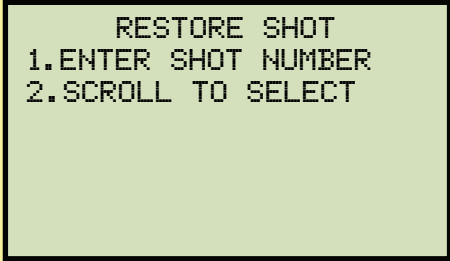


```
RESTORE SHOT
1. ENTER SHOT NUMBER
2. SCROLL TO SELECT
```

Continue with the steps below.

1. *ENTER SHOT NUMBER*

Press the **[1]** key (*ENTER SHOT NUMBER*) if you know the record number that you would like to restore.


1.1. The following screen will be displayed:

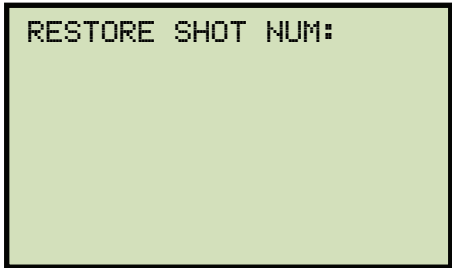

```
RESTORE SHOT NUM:
```

Type the shot number using the keypad and then press the **[ENTER]** key.

- 1.2. The following screen will be displayed:

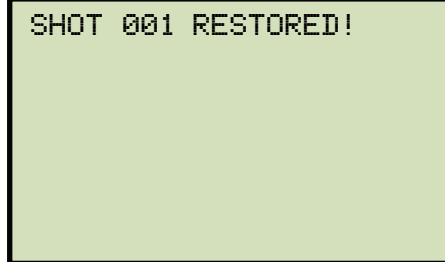

A green rectangular screen with a black border. The text 'SHOT 001 RESTORED!' is displayed in a monospaced font at the top of the screen.


The test shot will be restored to the unit's working memory. You can then view or print the test shot information using the instructions in section 3.6.1.

Press any key to return to the "START-UP" menu.

2. *SCROLL TO SELECT*

Press the **[2]** key (*SCROLL TO SELECT*) to scroll through a directory of stored test shots.


- 2.1. The following screen will be displayed:

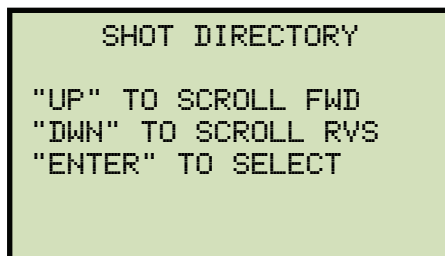

A green rectangular screen with a black border. The text 'SHOT DIRECTORY' is at the top. Below it, the instructions '"UP" TO SCROLL FWD', '"DOWN" TO SCROLL RVS', and '"ENTER" TO SELECT' are listed on separate lines.

Press the **[^]** button or the **[v]** key to display the next or previous test record, respectively.

The basic test record information will be displayed as shown:

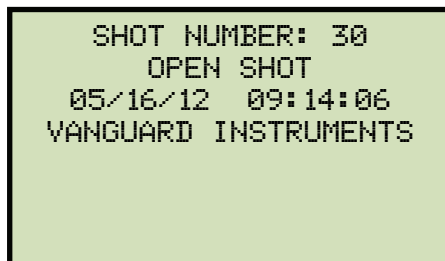

A green rectangular screen with a black border. The text is displayed in a monospaced font and includes: 'SHOT NUMBER: 30', 'OPEN SHOT', '05/16/12 09:14:06', and 'VANGUARD INSTRUMENTS'.

When you have located the test record that you would like to restore, press the **[ENTER]** key. The test shot will be restored to the unit's working memory. You can then view or print the test shot information using the instructions in section 3.6.1.

Press any key to return to the "START-UP" menu.

3.6.4. Restoring a Test Shot From a USB Flash Drive

Use the steps below to restore a test record from a USB Flash drive to the CT-3500 S2's working memory:

- a. Make sure the USB Flash drive containing the test record(s) is inserted in the CT-3500 S2's USB Flash drive port ("USB MEM" port). Then start from the "START-UP" menu:



```
1. TIME BRKR 05/16/12
2. GET RSLT 09:55:55
3. SETUP
4. DIAGNOSTICS
```

Press the **[3]** key (*SETUP*).


- b. The following screen will be displayed:



```
1. SHOT DESCRIPTION
2. SAVE / RESTORE
3. SET 50/60 HZ
4. SET DATE & TIME
```

Press the **[2]** key (*SAVE / RESTORE*)


- c. The following screen will be displayed:

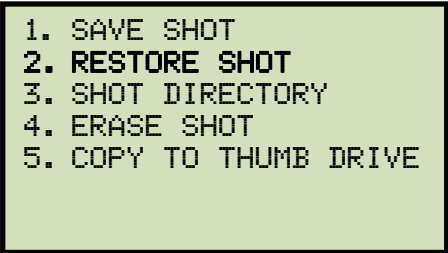

```
1. SAVE SHOT
2. RESTORE SHOT
3. SHOT DIRECTORY
4. ERASE SHOT
5. COPY TO THUMB DRIVE
```

Press the **[2]** key (*RESTORE SHOT*).

- d. The following screen will be displayed:

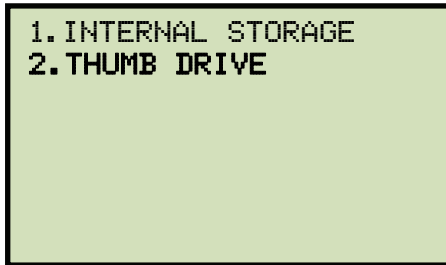

```
1.INTERNAL STORAGE
2.THUMB DRIVE
```

Press the **[2]** key (*THUMB DRIVE*).


- e. The following screen will be displayed:



```
RESTORE THUMB DRIVE
REC_
```

Type the record number that you would like to restore using the alpha-numeric keypad and then press the **[ENTER]** key.

- f. The test record will be restored to the unit's working memory and the following screen will be displayed:

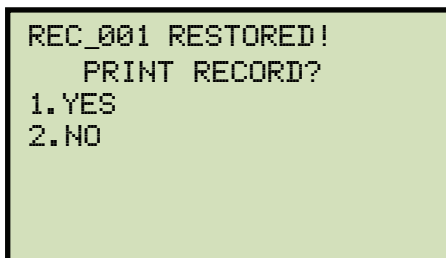

```
REC_001 RESTORED!
PRINT RECORD?
1.YES
2.NO
```

Press the **[1]** key (*YES*) if you would like to print the test record, or press the **[2]** key (*NO*) if you do not want to print the test record. The test record will be restored to the unit's working memory, and you will be returned to the "START-UP" menu.

3.6.5. Copying Test Records to a USB Flash Drive

Use the steps below to copy one or all test records from the unit's Flash EEPROM to a connected USB Flash drive:

- a. Make sure a USB Flash drive is connected to the unit's "USB MEM" port, and then start from the "START-UP" menu:



```
1. TIME BRKR 05/16/12
2. GET RSLT 09:55:55
3. SETUP
4. DIAGNOSTICS
```

Press the **[3]** key (*SETUP*).


- b. The following screen will be displayed:



```
1. SHOT DESCRIPTION
2. SAVE / RESTORE
3. SET 50/60 HZ
4. SET DATE & TIME
```

Press the **[2]** key (*SAVE / RESTORE*).


- c. The following screen will be displayed:

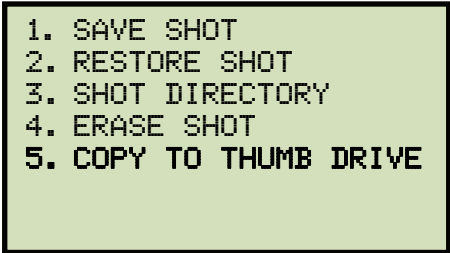

```
1. SAVE SHOT
2. RESTORE SHOT
3. SHOT DIRECTORY
4. ERASE SHOT
5. COPY TO THUMB DRIVE
```

Press the **[5]** key (*COPY TO THUMB DRIVE*).


- d. The following screen will be displayed:

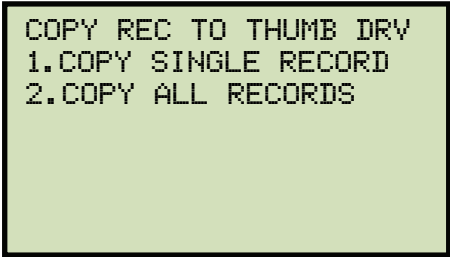

```
COPY REC TO THUMB DRV
1.COPY SINGLE RECORD
2.COPY ALL RECORDS
```

1. *COPY SINGLE RECORD*


Press the **[1]** key (*COPY SINGLE RECORD*) to copy a single test record from the unit's Flash EEPROM to the connected USB Flash drive. The following screen will be displayed:

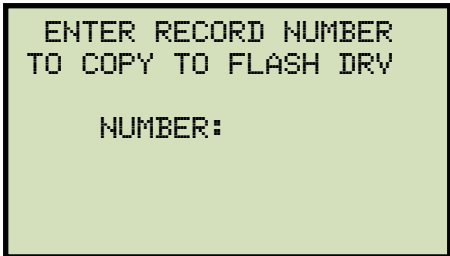

```
ENTER RECORD NUMBER
TO COPY TO FLASH DRV

NUMBER:
```

Type the record number using the alpha-numeric keypad and then press the **[ENTER]** key. The test record will be copied to the USB Flash drive and the following screen will be displayed:

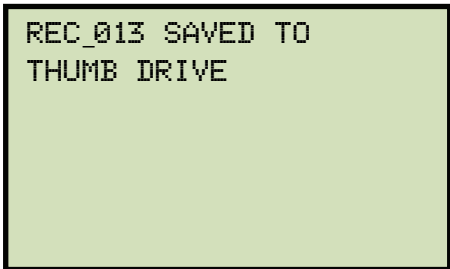


```
REC_013 SAVED TO
THUMB DRIVE
```

Press any key to return to the "START-UP" menu.

2. *COPY ALL RECORDS*

Press the **[2]** key (*COPY ALL RECORDS*) to copy all test records from the unit's Flash EEPROM to the connected USB Flash drive. All test records will be copied from the unit to the connected USB Flash drive. The following screen will be displayed when the process is finished:

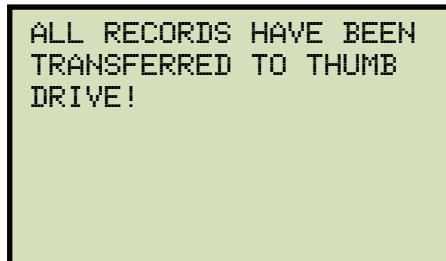A rectangular LCD screen with a light green background and a black border. It displays the text "ALL RECORDS HAVE BEEN TRANSFERRED TO THUMB DRIVE!" in a black, monospaced, all-caps font, arranged in four lines.

ALL RECORDS HAVE BEEN
TRANSFERRED TO THUMB
DRIVE!

Press any key to return to the "START-UP" menu.

3.6.6. Printing the Test Record Directory

Use the steps below to print a directory of the test records stored in the CT-3500 S2's Flash EEPROM memory or on a connected USB Flash drive:

- a. Start from the "START-UP" menu:

```
1. TIME BRKR 05/16/12
2. GET RSLT 09:55:55
3. SETUP
4. DIAGNOSTICS
```

Press the **[3]** key (*SETUP*).

- b. The following screen will be displayed:

```
1. SHOT DESCRIPTION
2. SAVE / RESTORE
3. SET 50/60 HZ
4. SET DATE & TIME
```

Press the **[2]** key (*SAVE / RESTORE*).

- c. The following screen will be displayed:

```
1. SAVE SHOT
2. RESTORE SHOT
3. SHOT DIRECTORY
4. ERASE SHOT
5. COPY TO THUMB DRIVE
```




NOTE

Option 5 (*COPY TO THUMB DRIVE*) is listed only if a USB Flash drive is connected to the unit.

Press the **[3]** key (*SHOT DIRECTORY*).

If a USB Flash drive is not connected to the unit, a directory of the shots stored in the unit's Flash EEPROM will be printed. You will be returned to the "START-UP" menu when printing is finished.

If a USB Flash drive is connected to the unit, the following screen will be displayed:

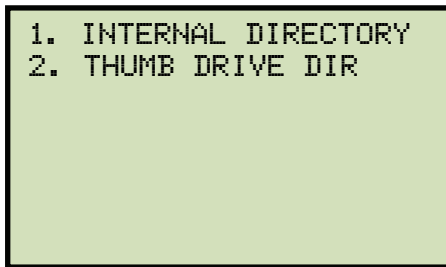

1. *INTERNAL DIRECTORY*

Press the **[1]** key (*INTERNAL DIRECTORY*) to print a directory of test shots stored in the unit's Flash EEPROM. The directory will be printed on the unit's built-in thermal printer, and you will be returned to the "START-UP" menu when printing is finished.

2. *THUMB DRIVE DIR*

Press the **[2]** key (*THUMB DRIVE DIR*) to print a directory of test shots stored on the connected USB Flash drive. The unit will search the thumb drive for test records and then a directory will be printed on the unit's thermal printer. You will be returned to the "START-UP" menu when printing is finished.

3.6.7. Erasing Test Records from the Flash EEPROM

Follow the steps below to erase test records from the Flash EEPROM

- a. Start from the "START-UP" menu:

```
1. TIME BRKR 05/16/12
2. GET RSLT 09:55:55
3. SETUP
4. DIAGNOSTICS
```

Press the **[3]** key (*SETUP*).

- b. The following screen will be displayed:

```
1. SHOT DESCRIPTION
2. SAVE / RESTORE
3. SET 50/60 HZ
4. SET DATE & TIME
```

Press the **[2]** key (*SAVE / RESTORE*).

- c. The following screen will be displayed:

```
1. SAVE SHOT
2. RESTORE SHOT
3. SHOT DIRECTORY
4. ERASE SHOT
5. COPY TO THUMB DRIVE
```

Press the **[4]** key (*ERASE SHOT*).


- d. The following screen will be displayed:

```
ERASE SHOTS

1.ERASE SINGLE SHOT
2.ERASE ALL SHOTS
```

1. ERASE SINGLE SHOT


Press the **[1]** key (*ERASE SINGLE SHOT*) to erase a single test record from the unit's internal Flash EEPROM. The following screen will be displayed:

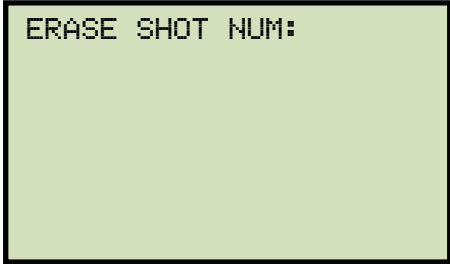A screenshot of a green screen with a black border. The text "ERASE SHOT NUM:" is displayed in the top left corner in a monospaced font.

```
ERASE SHOT NUM:
```


Type the record number that you would like to erase using the keypad and then press the **[ENTER]** key. If you do not know the test record number, you can first print the test record directory using the instructions in section 3.6.6.

The following screen will be displayed while the record is being erased:

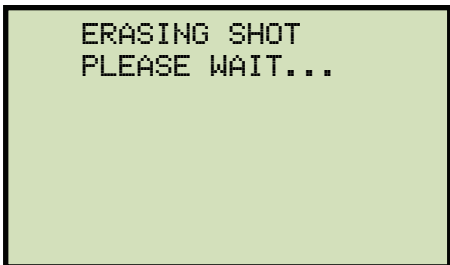A screenshot of a green screen with a black border. The text "ERASING SHOT" and "PLEASE WAIT..." are displayed in the top left corner in a monospaced font.

```
ERASING SHOT  
PLEASE WAIT...
```

The following screen will be displayed when the test record has been completely erased:

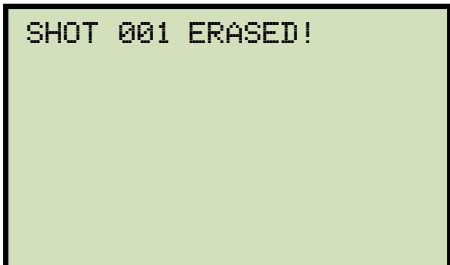
A screenshot of a green screen with a black border. The text "SHOT 001 ERASED!" is displayed in the top left corner in a monospaced font.

```
SHOT 001 ERASED!
```

Press any key to return to the "START-UP" menu.

2. ERASE ALL SHOTS


Press the **[2]** key (*ERASE ALL SHOTS*) to erase all the test records from the unit's internal Flash EEPROM. The following warning screen will be displayed:

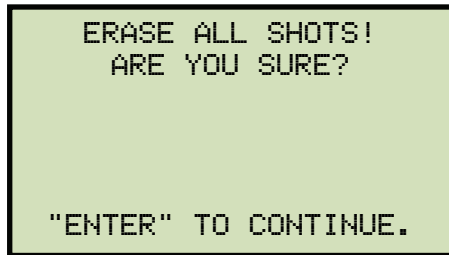A green rectangular screen with a black border. The text is in a monospaced font. The first line reads "ERASE ALL SHOTS!". The second line reads "ARE YOU SURE?". The third line, at the bottom, reads "\"ENTER\" TO CONTINUE." data-bbox="202 162 477 282"/>

```
ERASE ALL SHOTS!  
ARE YOU SURE?  
  
"ENTER" TO CONTINUE.
```


You can press the **[STOP]** key to cancel the process and return to the "START-UP" menu.

Press the **[ENTER]** key to proceed with deleting all the test records from the unit's Flash EEPROM. The following screen will be displayed during the erasure process:

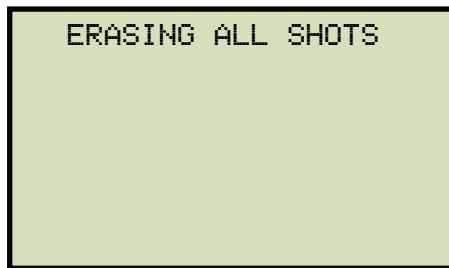A green rectangular screen with a black border. The text is in a monospaced font. The first line reads "ERASING ALL SHOTS". data-bbox="202 378 477 504"/>

```
ERASING ALL SHOTS
```

The following screen will be displayed when all test records have been completely erased:

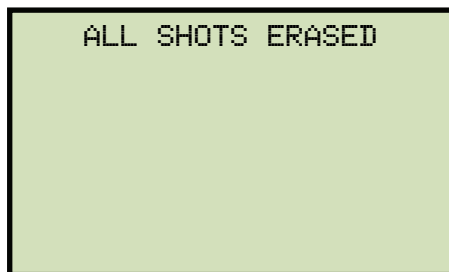A green rectangular screen with a black border. The text is in a monospaced font. The first line reads "ALL SHOTS ERASED". data-bbox="202 555 477 683"/>

```
ALL SHOTS ERASED
```

Press any key to return to the "START-UP" menu.

3.7 Performing Cable Diagnostics

The CT-3500 S2 can quickly check the test leads and breaker contacts for continuity at each of the three phase contacts. Once all connections are made, use the steps below to check your connections:

- a. Start from the "START-UP" menu:

```
1. TIME BRKR 05/16/12
2. GET RSLT 09:55:55
3. SETUP
4. DIAGNOSTICS
```

Press the **[4]** key (*DIAGNOSTICS*).

- b. The following screen will be displayed:

```
PRESS "ENTER" TO
START CABLE TEST
```

Open the breaker and then press the **[ENTER]** key.

- c. The following screen will be displayed:

```
      CABLE TEST

CH A   CH B   CH C
OPEN   OPEN   OPEN

<ANY KEY TO EXIT>
```

If the proper connections were made, "OPEN" should be displayed for all channels. You can now close the breaker. "CLOSED" should be displayed for all channels.


Press any key to return to the "START-UP" menu.

4.0 Getting the Latest Firmware, Software, and Manuals

The latest firmware, software, and user's manuals can be downloaded from the Vanguard Instruments Company's web site at <http://www.vanguard-instruments.com>. In order to download these items from our site, you will first need to sign up for a FREE user account on our site. Also, your account must be approved before it can be used to download firmware, software, and user's manuals. Follow the steps below to sign up for an account and download the latest firmware, software and user's manuals:

- a. Visit our site at <http://www.vanguard-instruments.com>.
- b. On the left hand side of the page, click on the "Create new account" link:

- c. You will be presented with a sign-up form. Please complete all the required fields on the form and click on the "Create new account" button at the bottom of the page.
- d. Once your account has been created, it will be reviewed by our staff and usually approved within the hour during regular business hours.
- e. Once you have received the account approval email, visit our site again at <http://www.vanguard-instruments.com> and login to your account using your username and password.
- f. Click on the "Downloads" link at the top of the page:

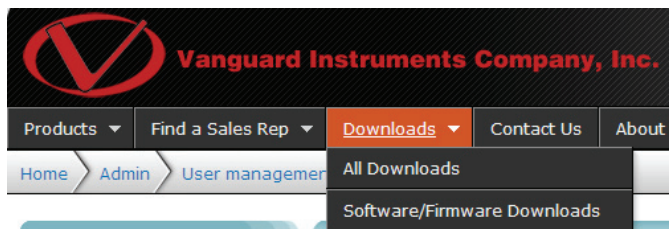

- g. The "Downloads" page will be displayed listing all Vanguard products along with the related firmware, software, and user's manuals. Click on any of these items to download them.



**Vanguard Instruments
Company, Inc.**

1520 S. Hellman Ave • Ontario, CA 91761 • USA

Phone: 909-923-9390 • Fax: 909-923-9391

www.vanguard-instruments.com

Copyright © 2012 by Vanguard Instruments Company, Inc.

CT-3500 S2 User's Manual • Revision 1.0 • July, 2012 • TA