

AIRDATA™ MULTIMETER ADM-850

ELECTRONIC MICROMANOMETER

AIR FLOW • VELOCITY • PRESSURE • TEMPERATURE

OPERATING INSTRUCTIONS



Shortridge Instruments, Inc.

7855 East Redfield Road / Scottsdale, Arizona 85260-3430

Phone (480) 991-6744 • Fax (480) 443-1267

www.shortridge.com

CONTENTS

1.0 INTRODUCTION	1
2.0 SPECIFICATIONS	2
3.0 EXTERNAL FEATURES	4
3.1 KEYPAD	4
3.2 FEATURES ON SIDES AND BACK OF METER	4
4.0 DISPLAY MESSAGES AND PROMPTS	6
4.1 READ PROMPTS	6
4.2 MEASUREMENT READOUTS	6
4.3 FUNCTION READOUTS	7
5.0 USING THE AIRDATA MULTIMETER	10
5.1 SPEED-READ FEATURE	10
5.1.1 SPEED-READ OPERATION	10
6.0 VELOCITY MEASUREMENT	11
6.1 PITOT TUBE VELOCITY MEASUREMENT	11
7.0 PRESSURE MEASUREMENT	13
7.1 DIFFERENTIAL PRESSURE	13
7.1.1 PITOT TUBE "VELOCITY PRESSURES"	13
7.1.2 PITOT TUBE "STATIC PRESSURES"	13
7.1.3 PITOT TUBE "TOTAL PRESSURES"	13
7.1.4 STATIC PRESSURE PROBES	13
7.2 ABSOLUTE PRESSURES	14
8.0 TEMPERATURE MEASUREMENT	15
8.1 TEMPROBE	15
8.2 AIRDATA MULTITEMP	15
9.0 AIR FLOW MEASUREMENT	17
9.1 FLOWHOOD FUNCTION	17
9.2 BACKPRESSURE COMPENSATION	17
10.0 FLOWHOOD ASSEMBLY	18
10.1 UNPACKING	18
10.2 FRAME CHANNELS	18
10.3 FABRIC TOPS	18
10.4 SUPPORT ASSEMBLY	18
10.5 HANDLE	19
11.0 FLOWHOOD OPERATING PROCEDURE	24
11.1 AIR FLOW - NONBACKPRESSURE COMPENSATED READINGS	24
11.2 AIR FLOW - BACKPRESSURE COMPENSATED READINGS	24
11.2.1 ERROR	25
12.0 SPECIAL BALANCING PROCEDURES	26
12.1 PROPORTIONAL BALANCING	26
12.2 LARGE RETURN AIR GRILLES	26
12.3 KITCHEN EXHAUST HOODS	26
12.4 CONSTANT VOLUME CONTROLLERS	26
12.5 LINEAR SLOT DIFFUSERS	26
12.6 SIDEWALL REGISTERS	26
12.7 14"x14"x14" SHORT TOP SET	27
12.8 SYSTEM PROBLEMS	27
13.0 CORRECTION FACTORS AND CONVERSION FORMULAS	28
13.1 BAROMETRIC PRESSURE DENSITY CORRECTION - LOCAL DENSITY	28
13.2 BAROMETRIC PRESSURE DENSITY CORRECTION - STANDARD DENSITY	28
13.2.1 STANDARD DENSITY - TEMPROBE USED	28
13.2.2 STANDARD DENSITY - TEMPROBE NOT USED	28
13.3 TEMPERATURE DENSITY CORRECTION	28
13.4 RELATIVE HUMIDITY CORRECTION	28

13.5 HOT WIRE ANEMOMETER VERSUS AIRDATA MULTIMETER	29
14.0 METER ACCURACY FIELD TESTING	30
14.1 METER ZERO FUNCTION	30
14.2 DIFFERENTIAL PRESSURE FUNCTION	30
14.3 ABSOLUTE PRESSURE FUNCTION	30
14.4 AIR FLOW ACCURACY	30
14.5 DUCT TRAVERSE COMPARISONS, INCLINED MANOMETER, MICROMANOMETER	30
14.6 DUCT TRAVERSE USING THE AIRDATA MULTIMETER	31
14.7 BACKPRESSURE COMPENSATED COMPARISON READINGS	31
14.8 NONBACKPRESSURE COMPENSATED COMPARISON READINGS	31
15.0 METER & FLOWHOOD MAINTENANCE	32
15.1 METER MAINTENANCE	32
15.2 FLOWHOOD MAINTENANCE	32
16.0 RECALIBRATION AND REPAIR INFORMATION	33
AIR BALANCE MANUALS & TRAINING PROGRAMS	33
WARRANTY	34
APPENDIX A - NIST VELOCITY TESTING	35
APPENDIX B - LABORATORY DIFFERENTIAL PRESSURE TEST	36
APPENDIX C - BATTERY TEST PROCEDURE	37
REPLACEMENT PARTS LIST	39
ADM-850 INDEX	41

Copyright © Shortridge Instruments, Inc., 2009. All rights reserved. This information may not be reproduced or duplicated in any manner, or for any purpose, without permission in writing from Shortridge Instruments, Inc. Addendums or revisions made to this manual after July 2009 may be found at www.shortridge.com.

ILLUSTRATIONS

3.1 ADM-850 METER FRONT AND BACK	5
6.1 PITOT TUBE	11
7.1 STATIC PRESSURE PROBE	13
8.1 ADT442 TEMPROBE	15
8.2 AIRDATA MULTITEMP	16
10.1 FRAME STORAGE	20
10.2 FLOWHOOD IN CASE	20
10.3 FLOWHOOD ASSEMBLY	21
10.4 2X2 FRAME ASSEMBLY	22
10.5 1X4 FRAME ASSEMBLY	22
10.6 2X4 FRAME ASSEMBLY	22
10.7 1X5 FRAME ASSEMBLY	23
10.8 3X3 FRAME ASSEMBLY	23

1.0 INTRODUCTION

You will find these instructions much easier to follow if you have the meter in front of you as you read through them. You can note the various connections and press the keys, observing the displayed results as you read through the various procedures. The operation of the meter is quite simple and straightforward, as will become apparent after a little practice.

The AirData Multimeter ADM-850 performs the following essential functions. This meter measures air velocity when used with a Dwyer Series 160 standard pitot tube and automatically corrects for density variations due to local barometric pressure. The meter also automatically corrects for density variations due to local temperature if the TemProbe is connected.

NOTE: The ADM-850 AirData Multimeter is NOT designed to be used with the AirFoil probe or the VelGrid. Velocity readings taken using an ADM-850 AirData Multimeter and an AirFoil probe or a VelGrid will NOT be correct.

When used with the Series 8400 FlowHood Kit, this meter measures air flow and compensates for air density and backpressure effects, allowing direct air flow readings.

Accurate differential pressure measurements can be obtained using static pressure probes, pitot tubes, or any direct pressure source. Temperature and absolute pressure measurements can be taken over a wide range.

Internal calibration and zeroing of the AirData Multimeter are fully automatic. No external adjustments are ever needed. This instrument is extremely tolerant of overpressure, and is unaffected by position or by ambient temperatures from 40° F to 140° F.

It is recommended that the AirData Multimeter kit be returned to the factory at least every two years for recalibration and software update. This preventive maintenance program will assure that the original accuracy of the meter is maintained throughout the life of the meter.

2.0 SPECIFICATIONS

AIR VELOCITY: Measured in feet per minute (fpm), or meters per second (m/s), corrected for local air density. The measurement range is 25 to 29,000 fpm with a Dwyer Series 160 standard pitot tube. Accuracy is $\pm 3\%$ of reading ± 7 fpm from 50 to 8000 fpm. Pitot tube velocity readings from 8000 fpm to 29,000 fpm are based on compressible isentropic flow theory and are not certified NIST traceable.

NOTE: The ADM-850 AirData Multimeter is NOT designed to be used with the AirFoil probe or the VelGrid. Velocity readings taken using an ADM-850 AirData Multimeter and an AirFoil probe or a VelGrid will NOT be correct.

DIFFERENTIAL PRESSURE: Measured in inches of water column (in wc) or Pascals (Pa). The measurement range is from 0.0001 in wc to ± 60.00 in wc. Maximum safe pressures are 20 psid (900% full scale) and 60 psia common mode. Accuracy is $\pm 2\%$ of reading ± 0.001 in wc from 0.0500 to 50.00 in wc.

ABSOLUTE PRESSURE: Measured in inches of mercury (in Hg) or bars with reference to a vacuum. The measurement range is 10-40 in Hg. Maximum safe pressure is 60 psia. Accuracy is $\pm 2\%$ of reading ± 0.1 in Hg from 14 to 40 in Hg.

TEMPERATURE: Accuracy is $\pm 0.5^\circ\text{F}$ from 32°F to 158°F with a resolution of 0.1°F using the ADT442, ADT443, ADT444, ADT445 or ADT446 TemProbes. Meter will display readings from -67.0°F to 250.0°F . Safe exposure range for TemProbe is -100°F to 250°F . Do not expose the plastic base of the TemProbe or the extension wand to temperatures above 200°F .

AIR FLOW: Measured in cubic feet per minute (cfm) or litres per second (L/s), corrected for local air density. This function requires the use of the Series 8400 Backpressure Compensating FlowHood kit. The measurement range is 25 to 2500 cfm supply and 25 to 1500 cfm exhaust. Accuracy is $\pm 3\%$ of reading ± 7 cfm from 100 to 2000 cfm (nonbackpressure compensated readings).

NOTE: The FlowHood may require the development and use of correction factors when used on swirl diffusers, or on other types of diffusers with uneven air throw. The FlowHood may not be appropriate for use on small supply outlets at high jet velocities or "nozzle" type outlets. These outlets cause an extreme concentration of air velocity on portions of the flow sensing grid. The FlowHood readings may be inaccurate under such conditions.

Consideration must be given to other system components, such as may be encountered on some **single** supply air outlet applications, where the FlowHood's slight backpressure may directly affect fan performance.

AIR DENSITY CORRECTION: The air density correction range is 14-40 in Hg and 32°F to 158°F for correction of air flow and velocity measurements. The readings represent **local density** air flow or velocity corrected for the density effects of temperature and absolute pressure.

RESPONSE TIME: Five seconds or less at pressures greater than .002 in wc (180 fpm), and up to eight seconds at less than .0003 in wc (70 fpm). SPEED-READ mode provides continuous readings in as little as two second intervals (NOTE: Accuracy specifications do not apply).

READOUT: Eight digit, 0.5 inch, liquid crystal display (LCD).

METER HOUSING: High impact, molded, "T" grade ABS.

METER WEIGHT: 36 ounces (1.02 kg), including batteries.

SIZE: 6.0" x 6.4" x 2.7" (15.2 x 16.3 x 6.9 cm).

BATTERY LIFE: Normally two working days of heavy use, or 3000 readings per charge. A set of rechargeable type AA NiCad batteries is supplied in each meter. Batteries may be recharged up to 500 times before replacement.

If rechargeable batteries are not available in a field situation, the batteries may be replaced with 12 non-rechargeable "AA" pen cell batteries. **WARNING:** Do not plug the charger in if **any** non-rechargeable batteries are in the meter. The meter will be seriously damaged along with the batteries and charger.

BATTERY CHARGER: The battery charger requires 120V, 60Hz, 6W. Batteries recharge in a maximum of 10 hours, **and may be left on charge for an unlimited time without harm**. The temperature of the instrument during charge should be kept between 40°F and 113°F (5°C to 45°C). The meter is fully operational during recharge.

OPERATIONAL TEMPERATURE LIMITS: The specified accuracy for measurements is maintained over a meter exposure temperature range of 40°F to 140°F (5°C to 60°C).

STORAGE TEMPERATURE LIMITS: -4°F to 140°F (-20°C to 60°C).

AIR BLEED: Each pressure measurement requires a small volume of air to pass through the meter. The pressure source must be capable of supplying this volume without significant depletion to assure accurate measurements. Bleedthrough (typical) 0.0004 cu in/in wc/measurement. Quiescent bleedthrough (max) 0.0005 cu in/in wc/minute.

TUBING: The maximum recommended length of pneumatic tubing for the measurement of air flow, velocity, or differential pressure is 18 feet. Minimum tubing size is 3/16 inch, inside diameter.

3.0 EXTERNAL FEATURES

3.1 KEYPAD

Control Name	Function
ON/OFF	Power, turns meter on and off.
MODE	Sequential action for selection of all measurement modes.
UNITS	Alternate action for English or metric units.
READ	Initiate measurement. Hold to start or halt SPEED-READ function.

3.2 FEATURES ON SIDES AND BACK OF METER

BATTERY CHARGER JACK

When viewed from the front, the battery charger jack is on the right side of the meter toward the top. The battery charger plug is to be connected here.

EXTERNAL READ JACK

When viewed from the front, the external read jack is on the left side of the meter toward the top. The plug for the external thumbswitch is connected here. This feature allows the operator to trigger measurements from the FlowHood handgrip while working overhead or in awkward circumstances. The thumbswitch performs the same function as the READ key.

FLAPS JACK

The flaps jack is on the back of the meter, in the upper right hand corner. The flaps plug on the FlowHood is inserted here.

TEMPERATURE INPUT JACK

The temperature input jack is centered on the back of the meter, slightly toward the top. The flexible TemProbe sensor must be connected into this receptacle whenever temperature density correction is desired for either flow or velocity measurements. A retractile cord connects the TemProbe or the MultiTemp to the temperature input jack for remote temperature sensing.

OFF/RESET SWITCH

The OFF/RESET pushbutton switch is on the back of the meter in a recess near the upper left corner. This switch is used to reset the meter in the unlikely event that the microprocessor becomes lost in its program. This may occur if the meter is dropped, and may cause the keypad to become nonfunctional until the meter is reset. If the meter continues to fall into "lockout", it may have been damaged, and should be returned for repair.

PNEUMATIC PRESSURE INLETS

The two pneumatic pressure inlets positive (+) and negative (-) are centered on the back of the meter at the top edge. These inlets may be connected to various pressure sources for the measurement of air velocity, flow, or pressure. These sources include the FlowHood system; pitot tubes; static pressure probes; or any other pressure source not exceeding the safe limits for the meter. The negative (-) inlet senses the static pressure during flow and velocity measurements and may be used for direct absolute pressure measurements.

External Read Jack for
Pushbutton Handle Plug

8 Digit, 0.5" LCD Display


Battery Charger Jack

MODE Flow/Diff Pres/Temp/Pitot/Abs Pres

UNITS English/Metric

READ Read/Hold for Speed or Halt

ON Power On
OFF Power Off

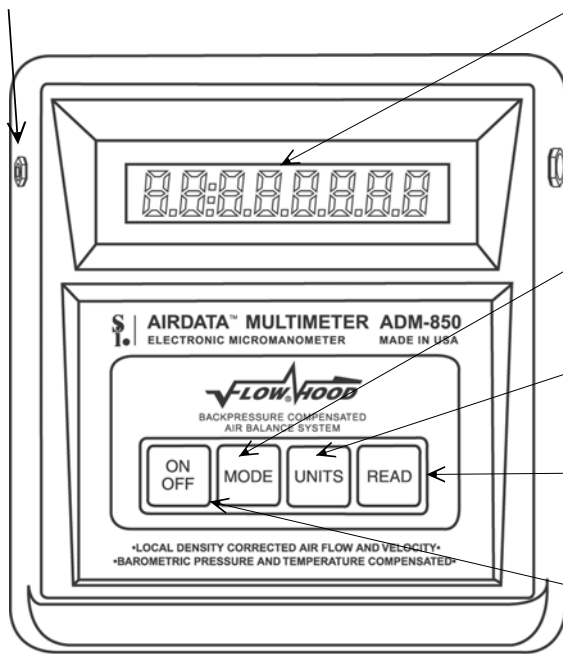

ADM-850 METER FRONT

Pushbutton Reset Switch

Positive (+) Pressure Port

Negative (-) Pressure Port

Flaps Jack for FlowHood Flaps Plug


Threaded Insert for Attachment to FlowHood
with Captive Screw

Calibration Label with Serial Number & Date

Temperature Input Jack for TemProbe,
Retractable Cord or MultiTemp

Battery Compartment Cover - Remove the 8
Small Phillips Head Screws to Test or Replace
the Batteries (12 AA NICAD)

Four Large Phillips Head Screws That Hold
the Meter Case Together - DO NOT REMOVE

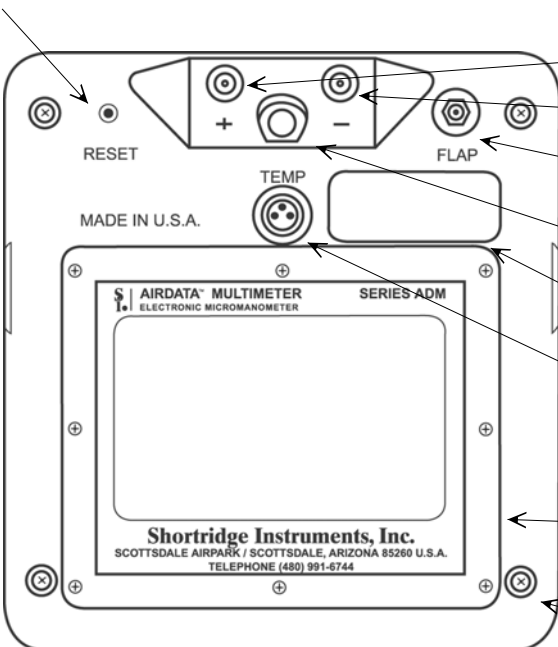

METER BACK

FIGURE 3.1 ADM-850 METER FRONT AND BACK

4.0 DISPLAY MESSAGES AND PROMPTS

4.1 READ PROMPTS

The following ten prompts all include the term READ, which is a signal for the operator to press the READ key to trigger the actual measurement.

ENGLISH UNITS

CF: READ

This display indicates that the meter has been placed in the air flow function (cfm). This signal will appear automatically upon power up if the flaps jack on the FlowHood is connected to the meter.

° F: READ

This display indicates that the meter has been placed in the temperature function (° F).

FP: READ

This display indicates that the meter has been placed in the velocity function (fpm).

Hg: READ

This display indicates that the meter has been placed in the absolute pressure function (in Hg), with reference to a vacuum.

IN: READ

This display indicates that the meter has been placed in the differential pressure function (in wc).

METRIC UNITS

BAR READ

This display indicates that the absolute pressure readings will be displayed in bars (1 bar = 100 kPa) with reference to a vacuum.

° C: READ

This display indicates that the temperature readings will be displayed in degrees Celsius (° C).

LS: READ

This display indicates that the meter has been placed in the air flow function and will read in litres per second (L/s).

≡S: READ

This display indicates that the velocity readings will be displayed in meters per second (m/s).

PA: READ

This display indicates that the differential pressure readings will be displayed in Pascals (Pa).

4.2 MEASUREMENT READOUTS

In the following twelve examples, n indicates a number in the displayed result. If no sign is displayed, the result is a positive number. A negative sign indicates a negative number.

ENGLISH UNITS

CF: ° ± nnnn

Indicates that the result represents an air flow measurement in cfm. The superscript "C" indicates that the result has been compensated for backpressure effects.

CF: ° ± nnnn

Indicates that the result represents an air flow measurement in cfm. The superscript "U" indicates that the result has not been compensated for backpressure effects.

FP: ± nnnnnn

Indicates that the displayed result represents a velocity measurement in fpm.

° F: ± nnn.n

Indicates that the displayed result represents a temperature measurement in ° F.

IN: ± nnnnn

Indicates that the result represents a differential pressure measurement in (in wc).

Hg: ± nn.n

Indicates that the result represents an absolute pressure measurement (in Hg) with reference to a vacuum.

METRIC UNITS

BAR n.nnn

Indicates that the result represents an absolute pressure measurement in bars with reference to a vacuum (1 bar = 100 kPa).

° C: ± nnn.n

Indicates that the displayed result represents a temperature measurement in ° C.

LS: ° ± nnnn

Indicates that the result represents an air flow measurement in L/s. The superscript "C" indicates that the result has been compensated for backpressure effects.

LS: ° ± nnnn

Indicates that the result represents an air flow measurement in L/s. The superscript "U" indicates that the result has not been compensated for backpressure effects.

PA: ± nnnnn

Indicates that the result represents a differential pressure measurement in Pa.

≡S: ± nnnnnn

Indicates that the displayed result represents a velocity measurement in m/s.

4.3 FUNCTION READOUTS

The following prompts and messages are listed in alphabetical order.

8.8:8.8.8.8.8.8

A sequence of eights will be flashed briefly to test the operation of the display each time the meter is turned on.

ABS PRES

This signal will be flashed each time the absolute pressure mode is selected, and also each time the READ key is pressed when the meter is in the absolute pressure mode.

CAL

When the meter is first turned ON, it will perform a self-calibration process that takes a few seconds. The display will read CAL during this period and the operating controls will be inhibited. No READ operations or function changes may be made during the CAL period. The meter will also perform a very brief CAL cycle about once every thirty seconds throughout normal operation.

CALC

This message indicates that the air velocity or flow sampling period has been completed, and that the calculations are in process. When CALC has been displayed, the velocity sensors or the FlowHood, may be removed from the measurement position without affecting the result.

CF: CORR

This message indicates that the air flow measurement being performed will be backpressure compensated.

CF: UNCORR

This message indicates that the air flow measurement being performed will not be backpressure compensated.

DIF PRES

This signal will be flashed when the differential pressure mode is selected, and also upon each subsequent operation of the READ key.

ENGLISH

This message indicates that readings will be in English units. The meter automatically starts up in English units when first turned on. Metric start-up is available if requested.

ERROR

This message advises the operator that the BACKPRESSURE COMPENSATED air flow measurement, which is in process, is invalid because the numerical ratio of the two parts of the measurement sequence exceeds predetermined limits. Normally this means, either that the operator has made a procedural error, or that a dynamic change (such as a changed damper setting) has occurred between the two parts of the BACKPRESSURE COMPENSATED air flow measurement process.

FLO-HOOD

This message will be flashed when the FlowHood mode is selected, or when the meter is first turned on if the flaps plug is connected.

HALT

This message is displayed when the SPEED-READ process has been halted by holding down the READ key.

LOCHARGE

This message indicates that the battery cells are nearing the end of their useful charge. The meter will function normally for approximately one more hour of operation before recharge is required.

LS: CORR

This message indicates that the air flow measurement being performed in litres/second will be backpressure compensated.

LS: UNCORR

This message indicates that the air flow measurement being performed in litres/second will not be backpressure compensated.

METRIC

This message indicates that readings will be displayed in metric units.

NEGPITOT

This message indicates an invalid, negative, pitot tube velocity reading. This may result from reversed tube connections to the meter, or from other conditions described in the section on VELOCITY MEASUREMENT, PITOT TUBE.

NO FLAPS

This message indicates that the flaps plug on the FlowHood has not been connected to the meter for air flow measurements. The meter senses the position of the flaps through the flaps plug.

NO PROBE

This message appears when the operator has neglected to install the TemProbe sensor prior to initiating a temperature measurement. This term is also displayed if the TemProbe, retractile extension cord or extension wand have been damaged so as to create an open circuit.

OPEN FLAP

This message indicates that the operator has attempted to perform a nonbackpressure compensated air flow measurement at greater than 500 cfm with the flaps closed. The flaps must be opened to proceed.

OVERANGE

This display indicates to the operator that the measurement being attempted is beyond the range of the meter. OVERANGE may also be displayed if internal voltage settings or linearity are out of proper range. Contact the factory if the meter continues to read OVERANGE at inappropriate times.

PITOTUBE

This signal will be flashed when the pitot tube mode is selected and also upon each operation of the READ key.

PROBE

A flashed message which appears during the actual temperature measurement while the meter is testing the TemProbe function.

READING

The meter will display READING during the air flow, velocity and differential pressure measurement period.

RECHARGE

This message signals that the battery cells have reached the end of their useful charge, and must be recharged. The meter will turn off following this display.

SPEED

The meter will display SPEED when the SPEED-READ mode is initiated by holding the READ key down throughout any measurement. SPEED is also displayed when SPEED readings are restarted from a HALT condition. NOTE: Accuracy specifications do not apply to SPEED readings.

STD 70° F

This message will be flashed during air flow or velocity measurements performed without the TemProbe. The resulting flow or velocity value will be calculated using the standard temperature (70° F). Correction for the ambient barometric pressure will still occur.

TOO HOT or TOO COLD

If the internal temperature of the meter exceeds its operational limits, it will display TOO HOT or TOO COLD and shut down. The meter must be cooled down or warmed up, as the case may be, before normal operation can resume.

If the meter has displayed OVERANGE after displaying either TOO HOT or TOO COLD, but has not shut down, this message indicates that the TemProbe sensor was being exposed to temperature levels beyond the proper operating range. If TOO HOT/OVERANGE is displayed but the meter has not shut down, the TemProbe sensor may have become short circuited.

5.0 USING THE AIRDATA MULTIMETER

The meter will flash a full set of eights to test the display each time it is turned on, and will then display CAL while performing a brief internal calibration test. If the FlowHood flaps plug is plugged into the meter, the meter will display FLO-HOOD and then CF: READ. If the flaps plug is not plugged in, the meter will display DIF PRES and then IN: READ and is then ready for differential pressure measurements. The functions for each key may be activated directly by repeatedly pressing the desired key. When the MODE key is pressed, the selected function will be briefly displayed, immediately followed by display of the two letter abbreviation for the function being used, combined with READ, for example CF: READ.

After the READ key is pressed the selected function will again be displayed during the measurement period, followed by CALC during the calculation period and then the measurement result will be displayed.

Each successive measurement is triggered by pressing the READ key, which also clears all previous data from the display. The meter always remains in the previously selected function until the mode key is pressed to change functions.

The meter will turn off automatically if it has not been used for eight consecutive minutes, except when performing measurements in the SPEED-READ mode.

5.1 SPEED-READ FEATURE

The SPEED-READ function is used for fast automatic readings. This mode may be used for all primary functions and is especially useful for proportional air balance, which requires that the damper positions be adjusted while the air flow is being measured at the outlet. One person using the FlowHood set for SPEED-READ can very quickly relay the required damper changes to another person who is adjusting the dampers. Damper adjustments must always be made on a proportional, percentage change basis when using the SPEED-READ feature, since the readings are not compensated for backpressure. (NOTE: Accuracy specifications do not apply).

SPEED-READ is also useful for monitoring or averaging any measurements that are changing rapidly, such as fluctuating or "hunting" damper or temperature controls.

The SPEED-READ function must not be used for tasks which require moving a probe or the FlowHood from one location to another. Examples of improper uses are pitot tube traverses, preliminary and final outlet readings using the FlowHood, and very low readings of building or room air pressures.

The first reading taken after moving a sensor is not valid when using SPEED-READ. At least two or three more readings would have to be taken to assure a stable readout. It is faster to take individually triggered readings whenever the process requires changing positions.

5.1.1 SPEED-READ OPERATION

Hold the READ key down until SPEED is displayed. Release the READ key immediately when SPEED is displayed and automatic fast readings will begin and continue until the sequence is interrupted by pressing the READ key until HALT is displayed. (Release the READ key immediately when HALT is displayed or the reading process will begin again). Pressing the READ key again will restart the SPEED-READ process. The SPEED-READ function is terminated by turning the meter off. The measurement mode will revert to differential pressure.

Backpressure compensated air flow measurements cannot be made in the SPEED-READ function. Also, the SPEED-READ function can not be entered directly following a change in the flaps position. This limitation is designed to prevent accidental initiation of the SPEED-READ function while backpressure compensated readings are being taken with the FlowHood.

SPEED-READ can not be entered when the flaps are closed. However, SPEED readings can be made with the flaps closed by first starting SPEED-READ with the flaps open, and then closing the flaps. This allows very low flow readings during the proportional balancing process.

6.0 VELOCITY MEASUREMENT

Air velocity measurements obtained with the AirData Multimeter are automatically corrected for the density effect of barometric pressure. The TemProbe must be used to obtain readings corrected for the density effect of temperature. If the TemProbe has not been connected to the meter, STD 70° F will be flashed during the calculation time, and all data will be processed using the standard temperature of 70° F.


NOTE: The ADM-850 AirData Multimeter is NOT designed to be used with the AirFoil probe or the VelGrid. Velocity readings taken using an ADM-850 AirData Multimeter and an AirFoil probe or a VelGrid will NOT be correct.

6.1 PITOT TUBE VELOCITY MEASUREMENT

The pitot tube is primarily used to obtain air velocity measurements in ductwork. A pitot tube is stainless steel with a 90 degree bend at one end and two connectors at a 90 degree angle located near the base. The measurement range of the AirData Multimeter with the pitot tube is 25 to 29,000 fpm. (calibration accuracy is certified to 8,000 fpm.) The stainless steel pitot tube included in the AirData Multimeter kit is suitable for use in temperatures up to 1500° F. A "traverse" of the duct is obtained by taking multiple air velocity readings at equal area locations within the duct cross-section. See the section on AIR BALANCE MANUALS AND TRAINING PROGRAMS for sources of detailed information on performing duct traverses and other air balance procedures.

Connect one of the tubing sections from the positive (+) port of the meter to the total pressure connection (in line with the main shaft) on the pitot tube and connect the negative (-) port to the static pressure connection (perpendicular to the main shaft). If the hoses are connected incorrectly the readings will show as negative air velocity and the meter will display NEGPITOT. All passages and connections must be dry, clean, and free of leaks, sharp bends and other obstructions.

After turning the meter on, press the MODE key until PITOTUBE is displayed. Use the retractile cord to connect the TemProbe to the meter. Insert the pitot tube and the TemProbe into 3/8" holes drilled into the side of the duct, being careful to align the point of the pitot tube so that it is facing directly into the airstream. If the negative (-) connection of the pitot tube is exactly parallel to the duct, the point of the pitot tube should be facing directly into the airstream. The shaft of the pitot tube is marked at one inch intervals to make it easier to control the location of the pitot tube within the duct.

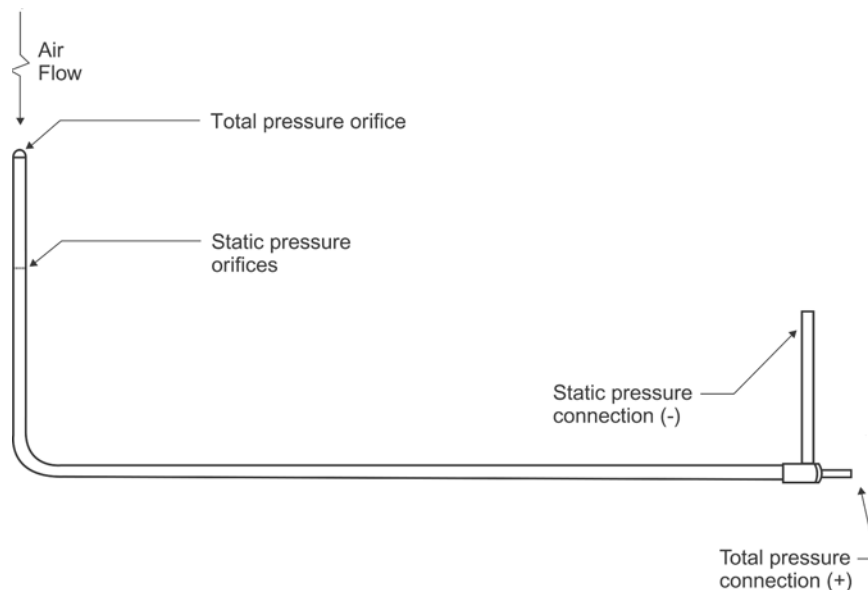

6.1 PITOT TUBE

Press the READ key to obtain the air velocity measurement. As soon as the display reads CALC, the pitot tube may be moved to the next traverse position.

The accuracy of pitot tube results depends heavily upon uniformity of air flow and completeness of the duct traverse. Careful technique is critical to good results. Pitot tubes are available in several different sizes and configurations to simplify different applications which may be encountered.

When a pitot tube is used in internally insulated ducts, small particles of fiberglass may be dislodged and become caught in the openings of the tube. This will effect the accuracy of the readings and eventually clog the tube. Remove the connections to the meter and blow compressed air through the bottom of the inside tube to discharge fiberglass particles from the tip of the pitot tube.

NEGPITOT will be displayed if the pitot tube readings are negative. This will occur if the positive (+) and negative (-) hoses have been incorrectly connected to the inlet ports of the meter; if the pitot tube has been improperly positioned in the air

stream; or if the pitot tube tip has been placed in an area of flow reversal or eddy. It is common practice, although not a purely accurate procedure, to consider negative pitot tube readings as zero in the averages of pitot tube traverse readings.

Air flow within the duct may be calculated by multiplying the average duct air velocity (fpm) by the duct area (sq ft). The resultant flow is expressed in cubic feet per minute (cfm). It is important to note that most publications assume that the pitot tube is reading velocity pressure, rather than velocity. A pitot tube used with the AirData Multimeter reads out directly in velocity when used in the PITOTUBE mode, and reads velocity pressure when used in the DIF PRES mode.

The standard pitot tube is .3125 inches in diameter and reduces the duct cross-sectional area by only 0.077 square inches in the measurement plane of the duct. This duct area reduction is less than 1% for ducts greater than three inches in diameter and does not need to be deducted in the duct area calculation.

7.0 PRESSURE MEASUREMENT

7.1 DIFFERENTIAL PRESSURE

Differential pressure measurements can be made with static pressure probes, pitot tubes, or by connecting the pneumatic tubing directly to any appropriate pressure source within the safe operating limits for the meter. The manner in which a pitot tube is connected to the meter is critical to the type of differential pressure measurement being made. The meter will display DIF PRES and read out in the same units for all types of differential pressure measurements. The operator must use care to keep track of the type of differential pressure being measured.

The positive (+) and negative (-) ports of the meter are connected as a pair to the pneumatic pressure source for differential pressure measurements. Maximum safe pressures for differential pressure measurement are 20 psid (900% full scale) and 60 psia common mode. The length of each external pneumatic tube should not exceed 18 feet of 3/16" ID tubing. The handle on the meter may be locked in various positions, allowing the meter to be set upright in order to avoid kinking the pneumatic tubing.

The meter will automatically select the differential pressure mode when first turned on if the flaps plug is not plugged in. The meter will display DIF PRES and then IN: READ. Press the READ key to obtain the pressure measurement.

The differential pressure between two rooms, or any other two areas may be obtained by connecting the tubing to the positive (+) port of the meter and leaving the negative (-) port open to the ambient air pressure. Place the end of the tubing in one area and place the meter in the other. The meter will measure the pressure differential between the two areas.

7.1.1 PITOT TUBE "VELOCITY PRESSURES"

Velocity pressures are obtained when the pitot tube is used and the meter is set to read out in differential pressure. The resulting reading is recorded as velocity pressure. Connect one of the tubing sections from the positive (+) port of the meter to the total pressure connection (in line with the main shaft) on the pitot tube and connect the negative (-) port to the static pressure connection (perpendicular to the main shaft). If the connections are reversed, the readings will be negative. Insert the pitot tube into a 3/8" hole drilled into the side of the duct, being careful to align the point of the pitot tube so that it is facing directly into the airstream. If the negative (-) connection (perpendicular to the main shaft) of the pitot tube is upstream and parallel to the duct, the point of the pitot tube should be facing directly into the airstream.

7.1.2 PITOT TUBE "STATIC PRESSURES"


Static pressures may be obtained using the pitot tube and the differential pressure mode by connecting the positive (+) port on the meter to the static pressure connection (perpendicular to the main shaft) of the pitot tube and leaving the negative (-) port exposed to the ambient pressure. Insert the pitot tube into the airstream as discussed under VELOCITY PRESSURES above. The resulting pressure differential is recorded as static pressure.

7.1.3 PITOT TUBE "TOTAL PRESSURES"

Total pressure measurements may be obtained using the pitot tube and the differential pressure mode by connecting the positive (+) port on the meter to the total pressure connection (in line with the main shaft) of the pitot tube and leaving the negative (-) port exposed to the ambient pressure. Insert the pitot tube into the airstream as discussed under VELOCITY PRESSURES above. The resulting differential pressure represents total pressure.

7.1.4 STATIC PRESSURE PROBES

Static pressures are measured with static pressure probes. These probes are brass colored and have a single tubing connection in the magnetic base. Connect the tubing from the static pressure probe to the positive (+) port on the meter. Leave the negative (-) port open to the room air. Insert the static pressure probe into a 3/8" hole drilled into the duct until the magnet is flush with the surface of the duct. Point the tip of the static pressure probe directly into the airstream. Press the READ key. The meter will read the differential between the pressure within the duct and the ambient pressure on the negative port of the meter.

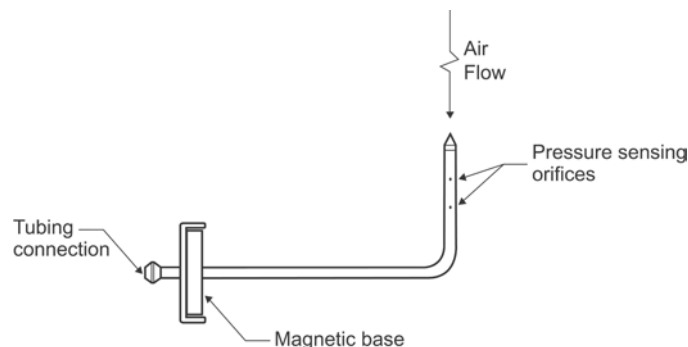

7.1 STATIC PRESSURE PROBE

7.2 ABSOLUTE PRESSURES

The absolute pressure function is intended mainly to provide automatic air density correction for velocity and flow measurements. Absolute barometric pressure measurements are obtained when the negative (-) port is open to the atmosphere and the meter is in the absolute pressure mode. The measurement range is 10-40 in Hg.

Specific absolute pressure source measurements may be obtained by connecting the pressure source directly to both the positive (+) and negative (-) ports (in common) of the meter. Press the MODE key until ABS PRES is displayed. The meter will then display Hg: READ (or BAR READ). Press the READ key to take a reading.

CAUTION

If an absolute pressure source is likely to be greater than 60 in Hg (30 psia), the pressure source must be connected in common to both the positive (+) and negative (-) meter ports simultaneously. This avoids excessive differential pressure input which will damage the differential pressure transducer. Maximum safe pressure is 60 psia common mode and 20 psi differential pressure.


The absolute pressure measuring accuracy should be checked regularly. Readings taken with the negative port (-) open to the atmosphere should be within $\pm 2\%$ of the actual barometric pressure to assure rated accuracy of density corrected flow and velocity readings.

NOTE: Weather service or airport reports of barometric pressure have usually been adjusted for altitude, so the pressure can be used for altimeter adjustment. The barometric pressure announced on television or radio stations is generally obtained from weather service reports. This altitude corrected barometric pressure must **not** be used in density correction equations for comparison with a FlowHood. An estimation of the actual barometric pressure may be obtained by deducting approximately 1.0 in Hg for each 1000 feet above sea level.

8.0 TEMPERATURE MEASUREMENT

8.1 TEMPROBE

The TemProbe temperature probe is used for temperature measurements. The TemProbe may be plugged directly into the temperature input jack on the back of the meter. Since this receptacle is keyed, the plug of the TemProbe sensor must be correctly aligned for proper insertion. The release button on the side of the TemProbe must be pressed to disconnect the TemProbe from the meter.

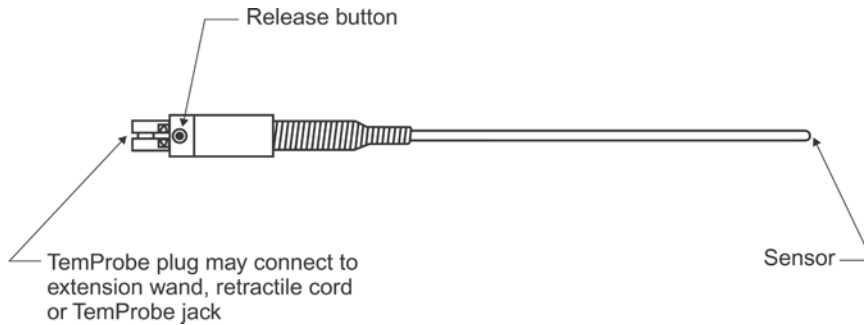

8.1 ADT442 TEMPROBE

After turning the meter on, press the MODE key until ° F: READ is displayed. Then, using the retractile cord if necessary, place the TemProbe sensor in the medium to be sampled. If the TemProbe is not installed on the meter, or if it is open circuited (defective), the display will read NO PROBE.

Accuracy is $\pm 0.5^\circ \text{F}$ from 32°F to 158°F with a resolution of 0.1°F using the ADT400 Series TemProbes. Measurement range for the ADT446 TemProbe is -20°F to 180°F and -67.0°F to 250.0°F for all the other ADT400 Series TemProbes. Meter will display OVER TEMP or UNDER TEMP if the probe is exposed to temperatures beyond this range. The maximum recommended safe exposure range is -100°F to 250°F and the probe accuracy may be effected by exposure beyond this range. Do not expose the plastic base of the TemProbe or the extension wand to temperatures above 200°F .

NOTICE: The use of temperature cable extenders reduces the meter reading by a non-linear degree depending on the combination of cable type, length and TemProbe temperature. The offset correction must be determined by comparing readings taken with and without the extender cables at the temperature(s) to be measured.

8.2 AIRDATA MULTITEMP

The MT-440K MultiTemp comes as a unit with six insertion probes, two surface probes, one eight-position switch, and a padded carrying case. Plug the single cord on the bottom edge of the MultiTemp into the temperature input jack on the back of the AirData Multimeter. Up to eight temperature probes (each with a 12' cord) can be connected into the eight small, numbered temperature input jacks on the top edge of the switch box. The jack numbers correspond to the eight switch point numbers surrounding the switch.

Place each of the temperature probes in the system as required and allow the probe temperatures to stabilize. A typical system testing application is shown in Figure 8.2. Set the meter for the temperature function as discussed under USING THE AIRDATA MULTIMETER. Set the MultiTemp for switch position #1 and take a reading for the probe connected to temperature input jack #1. Turn the switch to switch position #2 and take a reading for temperature jack #2. Continue for as many of the eight temperature jacks as needed.

Additional points may be measured in the same measurement sequence by using more than one MultiTemp switch unit connected in series (piggybacking). Reading of 64 temperature points would take about two minutes (after temperature probes have stabilized).

The temperature probes used with the MultiTemp and AirData Multimeter are typically interchangeable to within 0.4°F . These probes may be used in any liquid or gas compatible with stainless steel. Typical uses include: wet or dry bulb air temperatures; thermometer wells; "Pete's" plugs; or direct immersion. Some applications include: humidity control systems; direct expansion A/C systems; outside air adjustment; hot water heating; chilled water; condenser water; and many other circulating process liquid systems. The surface probes may be used to measure pipeline surface temperatures when piping systems do not have thermometer wells. These probes may also be used as fast acting air probes.

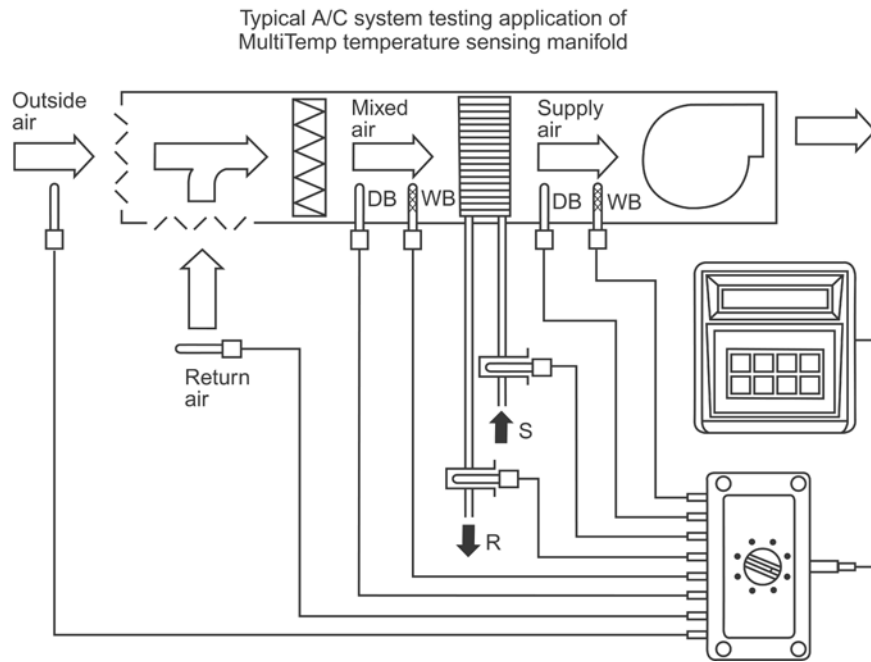


FIGURE 8.2 AIRDATA MULTITEMP

9.0 AIR FLOW MEASUREMENT

9.1 FLOWHOOD FUNCTION

The AirData Multimeter uses the Series 8400 FlowHood Kit for backpressure compensated measurement of air flow. The FlowHood unit captures and directs the air flow from an outlet, or inlet, across the highly sensitive flow sensing manifold within the FlowHood base. This manifold simultaneously senses the total pressure, and the static pressure, at sixteen precision orifices spaced at the correct representative measurement points for the known cross-sectional area of the FlowHood base. The sensed total pressure and static pressure are combined to a single differential pressure, which is transmitted to the meter for conversion to direct air flow readout.

The FlowHood is a much more convenient alternative to time consuming multiple velocity readings across air diffusers, as this instrument eliminates the calculations necessary to convert the average velocity into air flow.

Air flow readings taken using the AirData Multimeter are automatically corrected for the density effect due to barometric pressure. If the temperature probe has been installed during the measurement, the air flow reading is further corrected for the density effect due to the temperature of the air stream, and the result is corrected for local air density. If flow measurements are initiated without the temperature probe, STD 70° F will be flashed on the display immediately prior to the display of the air flow reading. The flow is calculated using an assumed standard temperature of 70° F.

NOTE: The FlowHood may require the development and use of correction factors when used on swirl diffusers, or on other types of diffusers with uneven air throw. The FlowHood may not be appropriate for use on small supply outlets at high jet velocities or "nozzle" type outlets. These outlets cause an extreme concentration of air velocity on portions of the flow sensing grid. The FlowHood readings may be inaccurate under such conditions.

Consideration must be given to other system components, such as may be encountered on some **single** supply air outlet applications, where the FlowHood's slight backpressure may directly affect fan performance.

9.2 BACKPRESSURE COMPENSATION

The air flow delivery of a supply or return outlet will be reduced to some variable degree whenever any capture hood device is placed over the outlet. The degree of flow reduction is a function of the capture hood resistance combined with the outlet resistance for a given air flow. A duct velocity traverse is often used as a reference air delivery test to determine the "average" backpressure correction factor for a particular system. This "average" correction factor does not specifically apply to each outlet, but only to the average outlet for that system. This method, commonly used in the air balance industry, may result in significant inherent errors, particularly in flow readings taken at low resistance outlets, and also on the larger, more efficient, low resistance, ducted or "extended plenum" types of air delivery systems.

The FlowHood air balance system provides backpressure compensated air flow measurement. This capability allows the operator to determine the flow that is passing through an air terminal without the added pressure loss caused by the FlowHood System. The backpressure compensated flow value is obtained through a two part measurement performed at each duct terminal, using the FLAPS feature of the FlowHood unit. The backpressure compensated measurement is always performed following a required preliminary nonbackpressure compensated measurement taken with the flaps open.

10.0 FLOWHOOD ASSEMBLY

10.1 UNPACKING

The FlowHood case has been specifically designed for the most efficient storage and handling of the FlowHood unit and its accessories. Note the arrangement of the various items as you unpack the unit. Especially note the placement of the foam cushioning around the instrument, and the orientation of the meter face toward the side of the case. The FlowHood should be packed in exactly the same manner whenever it is returned for recalibration. The foam packing and carton should be saved for this purpose.

The base assembly and 2'x2' top assembly will arrive already assembled as a unit and packed as shown in Figure 10.2. The handle assembly, accessory tops, and support dowels are enclosed in the built-in storage compartment at the rear of the carrying case. The frame channels for the accessory top assemblies are stored at the bottom of the carrying case beneath the frame storage retainers as shown in Figure 10.1. The top support assembly is stored in the top of the base assembly just above the grid. The legs have been folded upward, and the curved sections at the bottom of the legs have been inserted into the first and the third holes of the corner tubes on the base. The head of the support assembly should be positioned toward the back of the base assembly. The four spring rods are positioned downward, so that they do not directly contact the flow sensing grid. Foam packing, cloth skirts and accessories should not be stored on top of the grid.

10.2 FRAME CHANNELS

FlowHood system kits include frames for up to six standard top sizes. Custom top sizes are available upon request. The 2'x2' and 14"x14" top frames are assembled and stored as complete units. The 2'x4', 1'x4', 1'x5', and 3'x3' frames use interchangeable parts to construct any of the four sizes. Refer to Figures 10.4 through 10.8 to determine the frame channels needed to assemble any of the standard size frames. Each frame corner section utilizes an eyelet and slot arrangement which self-locks into a similar eyelet and slot on the corresponding frame channel when the two pieces are slid together. Side extension channels are joined together by a thumbnut and splice angle arrangement.

The individual frame pieces are stamped with a frame number, as shown circled below. A corresponding red part-number label is glued to each frame piece.

- 1'x4' Use two part no. 141 ①, two part no. 142 ②, and two part no. 143 ③ frames.
- 2'x4' Use two part no. 141 ①, two part no. 142 ②, and two part no. 244 ④ frames.
- 1'x5' Use two part no. 141 ①, two part no. 142 ②, two part no. 143 ③ and two part no. 155 ⑤ frames.
- 3'x3' Use four part no. 141 ①, and four part no. 336 ⑥ frames.

Frame pieces should be stored in the frame storage retainers at the bottom of the carrying case when not being used. This will help to avoid damage or loss.

10.3 FABRIC TOPS

The top size has been stamped on each FlowHood fabric top (the 2'x2' top has been imprinted with the FlowHood logo). Each top is attached to its matching frame assembly by pressing the corded hem of the top into the U-shaped retention channels on the outside of the frame assembly. After the top is attached to the frame assembly, the similarly corded hem on the lower edge of the fabric top is pressed into the retention channels on the upper edge of the base assembly. The seams of the fabric top must always be placed at the corners of both the frame and base assemblies.

10.4 SUPPORT ASSEMBLY

The top support assembly and support dowels are assembled as shown in Figure 10.3. Position the support assembly so that the spring rods are at the top. Swing the long rods around and down, into the position shown, and insert the ends of the rods into the center hole of the corner tubes of the FlowHood base. The rod ends may be moved upward or downward as needed to control the tightness of the fabric top. The support dowels can now be slid over the ends of the spring rods.

The location and correct combinations of frames, support dowels, dowel extenders and frame support cups to be used with each size are shown in Figures 10.4 through 10.8. The 8.5" dowel extenders are used with the 23.5" fiberglass support dowels when necessary to adjust for variations in frame size.

The 2'x2', 2'x4' and 1'x4' tops do not require dowel extenders. When using the 2'x2' frame, insert the support dowel end pins into each corner bracket of the 2'x2' frame assembly (see Figure 10.4).

The dowel end pins are inserted into the outer set of frame support cups when assembling a 1'x4' top and into the inner set when assembling a 2'x4' top as shown in Figures 10.5 and 10.6. The 1'x5' top requires an 8.5" dowel extender at the bottom of each support dowel. The dowel end pins are to be inserted into the inner set of frame support cups as shown in Figure 10.7.

The 3'x3' top requires dowel extenders added to both the top and bottom of the support dowels. The dowel end pins are to be inserted into the frame corner brackets as shown in Figure 10.8.

Each frame piece has been labeled to indicate positioning of the support dowels for different frame sizes. When the top assembly is complete, the springs on the short rods of the top support assembly should be compressed to approximately 50% of normal extension.

10.5 HANDLE

Attach the handle assembly to the handle plate using the knob type screw provided with the handle.

SEE THE NEXT FOUR PAGES FOR DIAGRAMS OF CORRECT METHOD OF
ASSEMBLING STANDARD FLOWHOOD TOPS AND FRAME SETS.

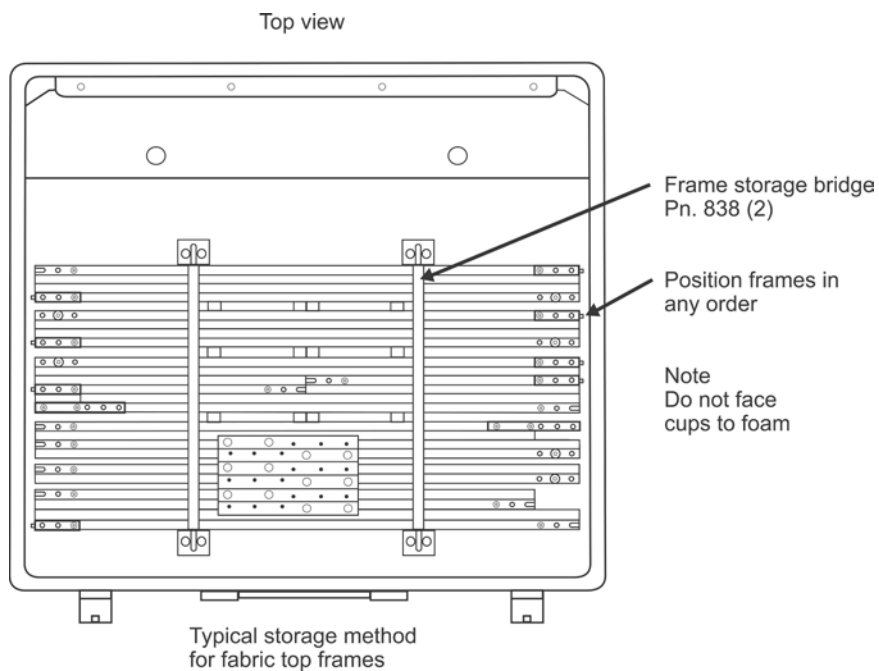


FIGURE 10.1 FRAME STORAGE

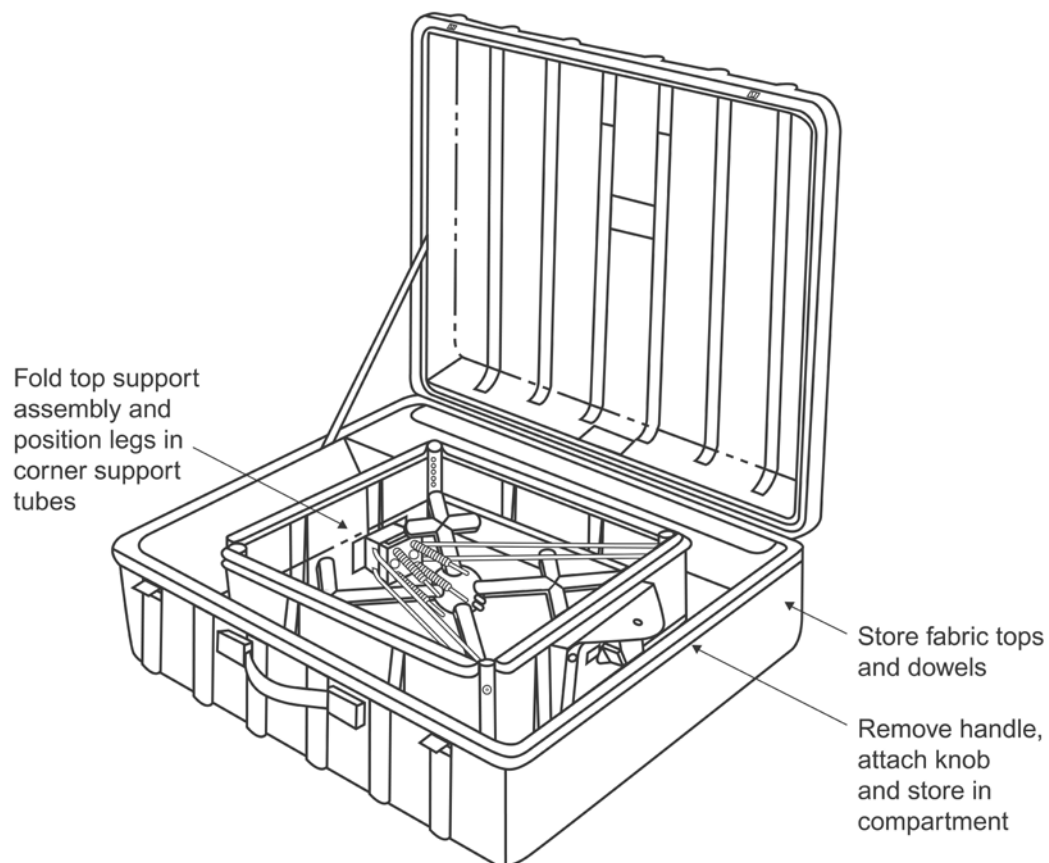


FIGURE 10.2 FLOWHOOD IN CASE

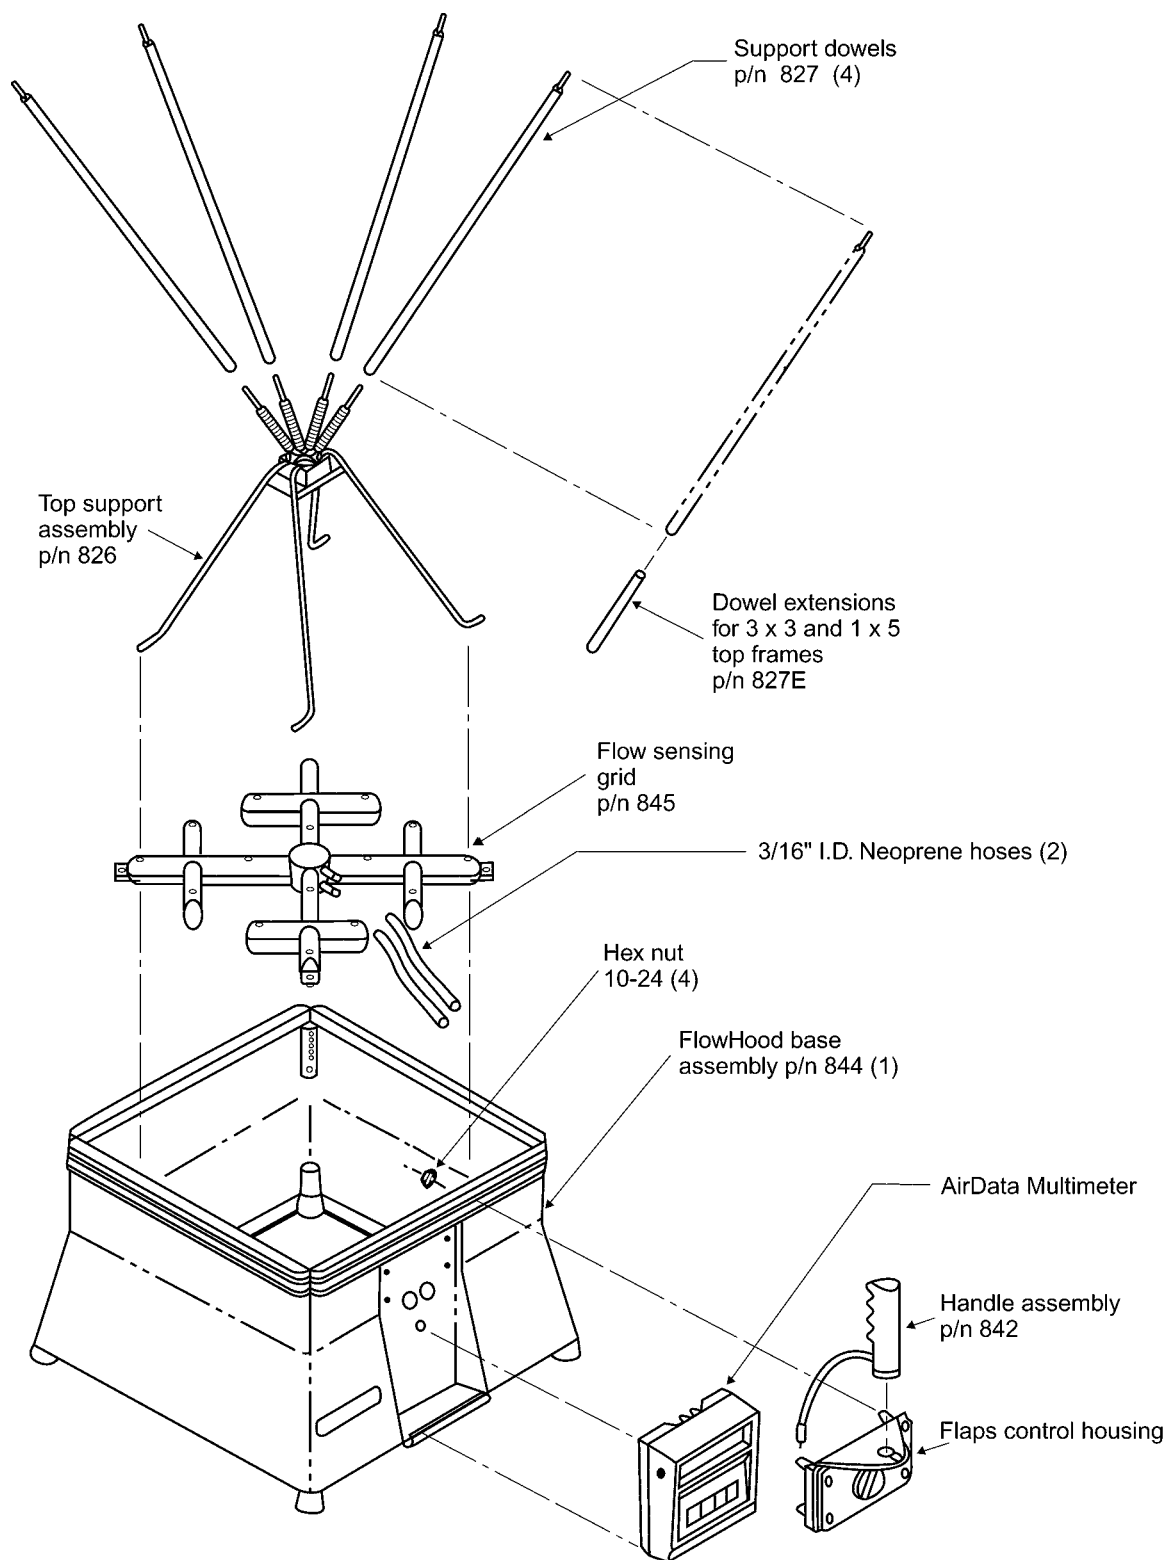


FIGURE 10.3 FLOWHOOD ASSEMBLY

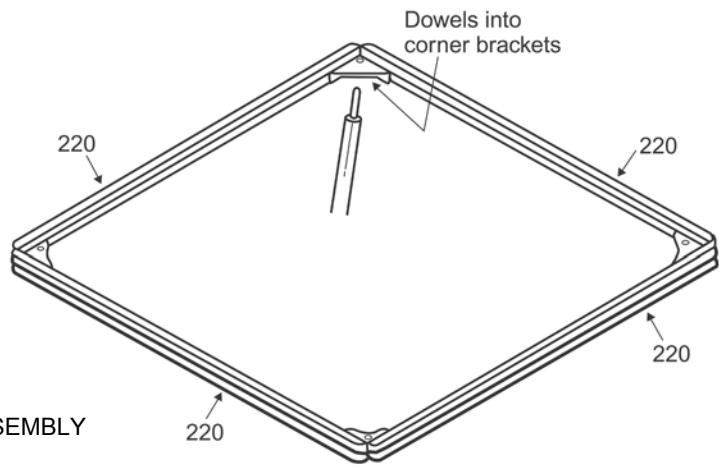


FIGURE 10.4 2X2 FRAME ASSEMBLY

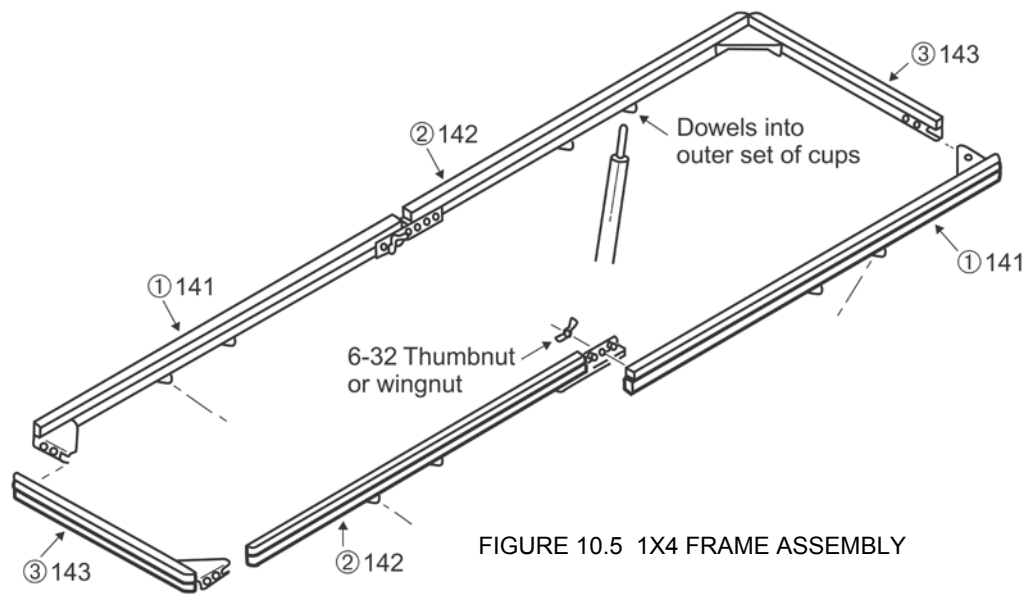


FIGURE 10.5 1X4 FRAME ASSEMBLY

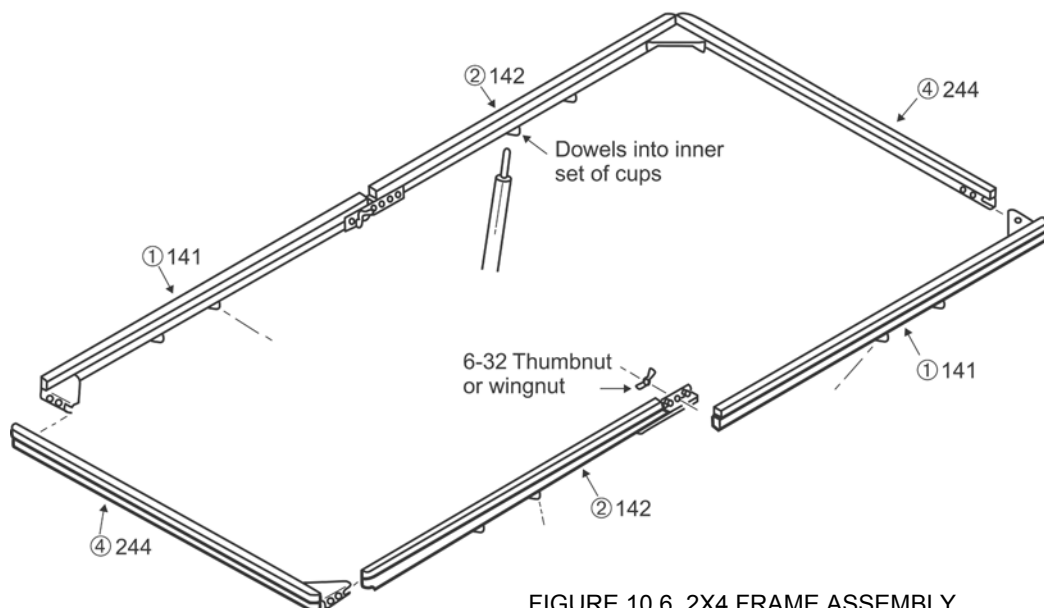


FIGURE 10.6 2X4 FRAME ASSEMBLY

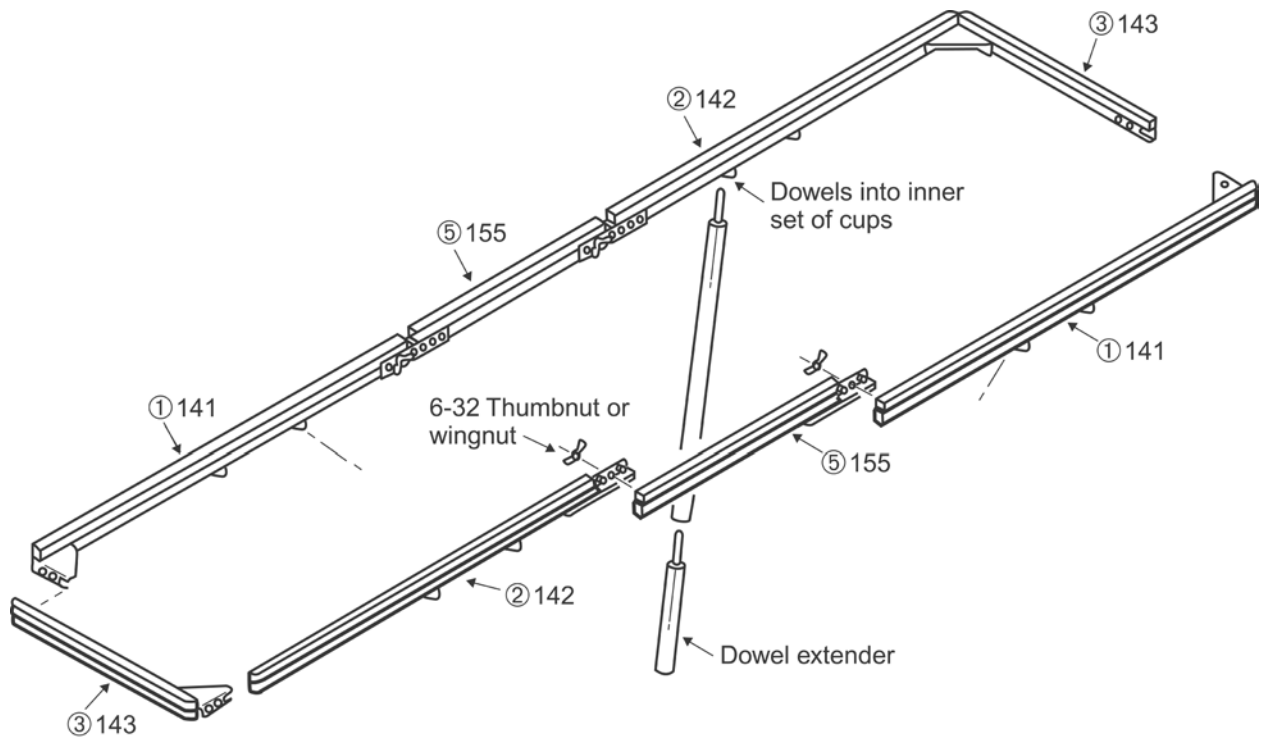


FIGURE 10.7 1X5 FRAME ASSEMBLY

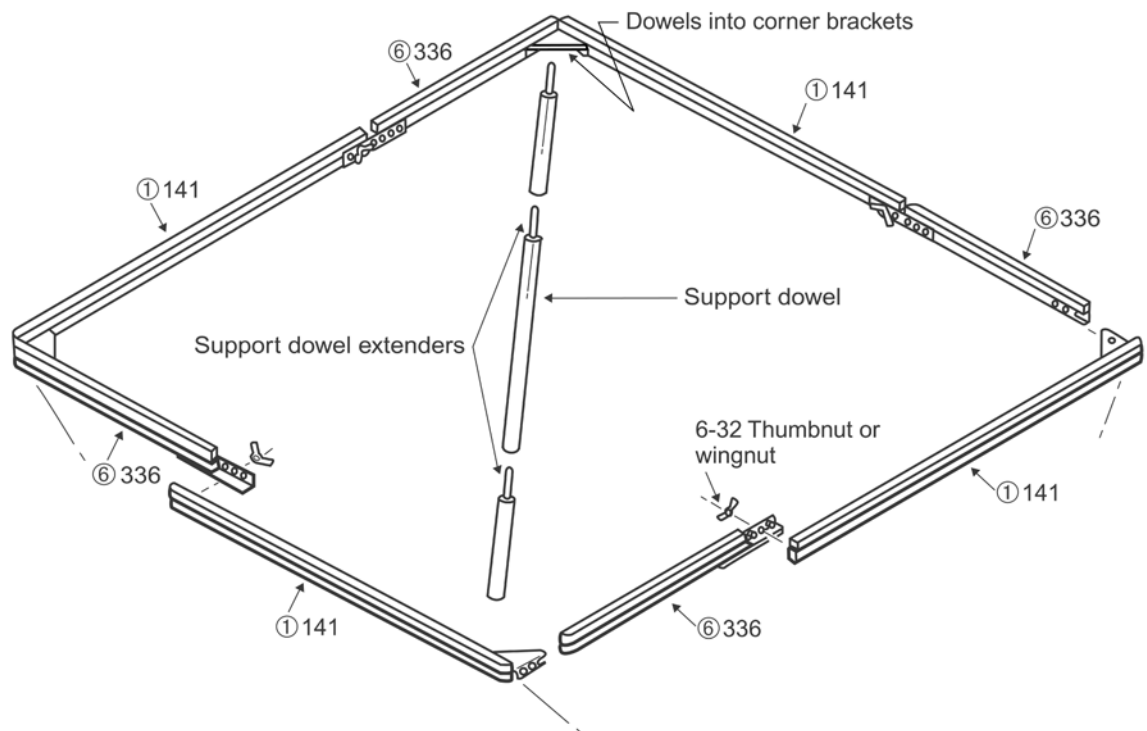


FIGURE 10.8 3X3 FRAME ASSEMBLY

11.0 FLOWHOOD OPERATING PROCEDURE

The meter handle should be removed from the AirData Multimeter by unscrewing the captive fasteners on the sides. The meter is inserted into the recess in the FlowHood base, using the captive fastener inside the base to secure it. The two pneumatic tubes from the flow sensing grid attach to the pneumatic inlets on the meter. The tube from the top side of the grid connects to the positive (+) pneumatic inlet on the meter; it is very important that these connections are not reversed, since this will cause invalid flow measurements. The flaps plug inserts into the flaps jack on the back of the meter.

The thumbswitch plug connected to the handgrip is inserted into the external read jack on the left side of the meter. The TempProbe sensor is plugged into the temperature input jack on the back of the meter through the cutout designed into the FlowHood base.

CAUTION

Avoid possible damage by removing all three electrical connections and both pneumatic connections before removing the meter from the FlowHood base.

After being turned on, the meter will flash a full set of eights to test the display, and then pass through a brief CAL phase. The display will then read FLO-HOOD, followed by CF: READ. After the operator presses the READ key, either CF: UNCORR or CF: CORR will be displayed during the measurement period. CALC will be displayed during the brief calculation period, followed by the results. Each subsequent measurement is triggered by pressing the READ key. Pressing the READ key also clears all previous data from the registers and the display. The meter will automatically turn off if not used for eight consecutive minutes.

Place the FlowHood over the outlet (or inlet) diffuser or grille, so as to capture and direct the air flow through the FlowHood base. The foam gasket around the edge of the top assembly should be firmly pressed against the ceiling or the edges of the diffuser. Air flow through the unit should not be blocked or influenced by any object within one foot of the FlowHood base. The unit should be supported with both hands, one on the handle, and the other at any convenient point on the outside of the base. Set the flaps control knob to the open position.

Press the READ key or the thumbswitch on the FlowHood handle and the reading will be displayed directly in cfm or litres/sec. A negative number indicates that the air flow is being exhausted through a return outlet (or that the hoses are crossed). A second reading with the flaps closed will be necessary to determine the backpressure compensated air flow.

SAFETY NOTICE

When using the FlowHood to test air flow at ceiling outlets, be certain that you can safely raise and support the unit during the measurement process. This is especially important when working on a ladder.

11.1 AIR FLOW - NONBACKPRESSURE COMPENSATED READINGS

See Section 9.2 BACKPRESSURE COMPENSATION for a general discussion of backpressure and its effect on any capture hood device before using the FlowHood for nonbackpressure compensated readings.

This technique measures air flow without compensating for FlowHood induced backpressure. This method is used for both supply and return outlets.

After the meter and all of its connections have been attached to the FlowHood, as described previously, set the flaps control knob to the open position. Place the FlowHood over the outlet (or inlet) diffuser or grille. Wait two or three seconds to allow the air flow to stabilize, and then press the READ key or the thumbswitch on the FlowHood handle. The displayed result will represent the flow value of the outlet while the FlowHood is in place. This flow reading will generally be somewhat less than the actual flow, due to the backpressure effect of the FlowHood.

11.2 AIR FLOW - BACKPRESSURE COMPENSATED READINGS

Air flow through an outlet (or inlet) is reduced to some degree by any capture hood device placed over the opening. Correction curves had traditionally been used to provide an average correction factor for the backpressure effects at different air flows. This method measures air flow with compensation for the FlowHood induced backpressure automatically calculated into the displayed result.

Backpressure compensation requires two readings in immediate sequence. The first reading is the flaps open reading discussed above. The second reading is done with the flaps closed. The meter automatically determines the required backpressure compensation calculated from the relationship between the two readings and displays the compensated result. A backpressure compensated reading must always be immediately preceded by a nonbackpressure compensated (flaps open) reading at the same location. The meter will register incorrect readings if the CF: UNCORR reading is taken at another time or any other location. Any adjustments or changes to the air flow system between the two measurements will result in inaccurate results.

This technique is used for both supply and return outlets. Backpressure compensated readings may be performed at any flow rate, but are usually unnecessary at flows less than 100 cfm.

First, perform the nonbackpressure compensated portion of the measurement with the flaps open, as described above. Close the flaps when the meter displays CALC. When the first reading is displayed, press the READ key to take the second (backpressure compensated) reading. If necessary, the FlowHood may be removed from the outlet in order to close the

flaps. Reposition the FlowHood as before, and wait two or three seconds for the flow to stabilize before taking the second reading. The FlowHood may be removed from the outlet as soon as CALC is displayed. The compensated reading will be displayed within two seconds.

11.2.1 ERROR

The meter may display ERROR following a backpressure compensated measurement in which the numerical ratio of the two parts of the measurement sequence exceeds predetermined limits. Normally, this indicates that the operator has made a procedural error, or that a dynamic change (such as a changed damper setting) has occurred between the two parts of the backpressure compensated measurement process. ERROR may also be displayed as the result of measurements taken at extremely low resistance outlets (less than .003 in wc @ 500 cfm). These outlets are not suitable for the backpressure compensation method, and may require other means of air flow measurement.

12.0 SPECIAL BALANCING PROCEDURES

12.1 PROPORTIONAL BALANCING

Backpressure compensated readings should be taken during the preliminary survey of the entire system with all dampers fully open, and also during the final readings after balancing is complete. Nonbackpressure compensated readings require less time and are usually adequate for the proportional balancing of outlets (see Section 5.1 SPEED-READ).

12.2 LARGE RETURN AIR GRILLES

Fan systems such as package air conditioning units or fan coil units may have only one main return air inlet. This is common in residential air conditioning systems ranging from two tons to 7 ½ tons of cooling capacity. The rated air delivery range is 800 to 3000 cfm. The FlowHood may be used to measure the return air flow if special attention is paid to avoiding excessive restriction of the air flow. The flow restriction is kept to a minimum by taking readings in two or more segments. For instance, if the return air grille is 30" x 24" and rated flow is 2400 cfm, read each half of the grille (15" x 24") using backpressure compensation. The sum of the backpressure compensated readings taken on each half is the total air flow through the return air grille. Keep in mind that this flow measurement represents only the flow at the return air grille. The total air flow at the fan includes return air duct leakage and possible outside air intake.

The reading for each portion of the grille would be even less restrictive and thereby more accurate if the 1'x 4' top were used on the FlowHood. The air flow could then be measured in three segments along the 30" dimension, with the excess length of the 48" top overlapping onto the ceiling. The 30" dimension of the grille could be broken into 9", 12" and 9" segments using the 12" width of the 1'x 4' FlowHood top. This procedure is also useable on large supply or discharge grilles and diffusers.

12.3 KITCHEN EXHAUST HOODS

Exhaust fan delivery of room temperature air in kitchens is reduced substantially when the cooking surfaces, ovens, broilers and fryers are heated to normal working temperatures. This is caused by the significant reduction in air density which occurs during the change from cool set-up to heated working conditions.

A fan which was set to deliver 5000 cfm at 75° F intake air will actually deliver only about 4610 cfm of the **75° F room air** when the air is heated to 140° F in the exhaust hood. It is very important that a kitchen system balance be confirmed by measurements for air flow, room pressure, and actual makeup air, while the cooking devices are at their normal working temperatures.

12.4 CONSTANT VOLUME CONTROLLERS

The backpressure compensation process requires special attention when used to measure air flow at individually controlled constant volume air terminals. The nonbackpressure compensated and the backpressure compensated air flow readings should be essentially equal for fast acting constant volume air terminals. The controller responds to the additional backpressure and maintains the preset air flow. If the controller is slow acting, the FlowHood must be held in place long enough for the controller to reattain the set point.

Master and slave, volume controlled outlets often do not interact favorably with the FlowHood backpressure compensation function. Air delivery measurement for this type system should be performed using a nonbackpressure compensated measurement.

12.5 LINEAR SLOT DIFFUSERS

Linear slot diffusers deliver supply air in a sheet or air curtain that tends to follow the side of the cloth transition as it flows to the FlowHood base. This can result in an extremely uneven velocity distribution across the flow sensing grid when the flaps are open. The air flow is more evenly distributed across the flow sensing grid when the flaps are closed.

Linear slot diffuser readings at less than 100 cfm per lineal foot of diffuser should be taken with the FlowHood flaps closed. The AirData Multimeter will permit flaps closed, nonbackpressure compensated readings up to 500 cfm. In most cases, the FlowHood backpressure effect on linear slot diffusers is not significant. Accurate readings can normally be obtained with flaps open readings on linear diffusers sized for more than 100 cfm per lineal foot.

The tendency of a sheet of air to cling to, or follow the side of the FlowHood top, can be reduced by using a top width dimension that is as close as possible to the outlet width. Special transition tops can be constructed of corrugated cardboard and duct tape. Custom dimension, cloth and frame top sizes may be ordered from our factory. A commonly used size is 5.25"x 47" with a 4.25"x 46" inside frame dimension.

12.6 SIDEWALL REGISTERS

The FlowHood may be used to measure air delivery of supply registers using the standard 30" length, 2'x2' top or larger top sizes. It is best if the top dimensions closely match the outlet size to assure even air flow across the flow sensing grid. Exact matching of hood size to the outlet size is not practical in most cases.

The standard 30" length top sizes may be used with equal accuracy on supply or return air outlets. However, small supply outlets at high jet velocity, "punkah" diffusers or nozzle type outlets may cause an extreme concentration of air velocity on portions of the flow sensing grid. The FlowHood readings will be inaccurate under such conditions.

Reading accuracy is improved by adjusting the register deflection blades to a four-way spreading pattern before starting the measuring and balancing process. The deflection can then be readjusted for the desired deflection pattern after the final balancing and readings are completed. Resetting deflection patterns after air balance usually has little effect on the air delivery. Special top sizes may be ordered from our factory. The most popular size for sidewall outlets is 1'x 2' (13"x 25" outside dimension).

12.7 14"x14"x14" SHORT TOP SET

This short top design is intended for use on return or exhaust air outlets. The use of this top size on deflection type supply outlets such as multiblade diffusers or registers with the blades set for a spreading pattern is not recommended. The 14"x14"x14" top is too short to provide the attenuation of the jet velocities necessary to even-out the air flow over the flow sensing grid and readings will not be reliable.

Reasonable accuracy can only be obtained on supply outlets when using the short top set if the outlet is at least 12" x 12" with no air deflection, such as a perforated plate, bar grille, egg crate grille, or unfinished opening.

12.8 SYSTEM PROBLEMS

If the measured air delivery is less than expected, check the meter functions first, as described in section 14.0 METER ACCURACY FIELD TESTING. If the meter is functioning properly, check significant sources of error such as: duct leakage; loose outlet connections; missing or loose end caps; belt slippage; backward fan rotation; closed or partially closed dampers of any type; dirty filters or coils; foreign material caught in turning vanes or fan wheels or other locations where obstructions can occur; square elbows without turning vanes; radical duct transitions; and any other situations where faulty system design or installation errors can cause inadequate air delivery.

13.0 CORRECTION FACTORS AND CONVERSION FORMULAS

13.1 BAROMETRIC PRESSURE DENSITY CORRECTION - LOCAL DENSITY

The ADM-850 AirData Multimeter automatically corrects air flow and velocity readings to represent local density cfm or fpm as affected by barometric pressure.

13.2 BAROMETRIC PRESSURE DENSITY CORRECTION - STANDARD DENSITY

Standard density air flow or velocity is calculated as if the same mass flow (lb/min) existed at standard conditions (29.92 in Hg & 70° F). Standard density (mass flow equivalent) results may be obtained by using one of the following conversion formulas:

13.2.1 STANDARD DENSITY - TEMPROBE USED

If the TemProbe was used during the measurement, the conversion formula for standard density is:

$$\frac{\text{STANDARD DENSITY FLOW OR VELOCITY (mass flow equivalent)}}{\text{local density flow or velocity}} = \left(\frac{P_b}{29.92} \right) \times \left(\frac{530}{460 + ^\circ F} \right)$$

Where: P_b = local barometric pressure (in Hg)
 $^\circ F$ = measured temperature of the airstream

13.2.2 STANDARD DENSITY - TEMPROBE NOT USED

If the TemProbe was not used during the measurement, the conversion formula is:

$$\frac{\text{STANDARD DENSITY FLOW OR VELOCITY (mass flow equivalent)}}{\text{local density flow or velocity}} = \left(\frac{P_b}{29.92} \right) \times \sqrt{\frac{530}{460 + ^\circ F}}$$

Where: P_b = local barometric pressure (in Hg)
 $^\circ F$ = measured temperature of the airstream

13.3 TEMPERATURE DENSITY CORRECTION

Air flow and velocity readings are density corrected for the effect of temperature if the TemProbe temperature sensor is used during flow or velocity measurements. If the temperature probe is not used, the meter calculates the air density using an assumed temperature of 70° F. If the TemProbe sensor was not used during an air flow measurement, the displayed reading must be corrected for the density effect of temperature as follows:

$$\frac{\text{LOCAL DENSITY FLOW OR VELOCITY (true velocity or flow)}}{\text{flow or velocity reading (taken in local density mode)}} = \sqrt{\frac{460 + ^\circ F}{530}}$$

Where: $^\circ F$ = measured temperature of airstream.

13.4 RELATIVE HUMIDITY CORRECTION

The ADM-850 AirData Multimeter does not correct for the density effects of relative humidity on air flow and velocity readings. The effect of minor variations in relative humidity on local air density (and therefore on flow and velocity readings) is relatively small under normal room temperature conditions. The density effect of relative humidity at higher temperatures and higher relative humidities may be more significant.

Local air density velocity and flow readings may be corrected for the density effects of relative humidity using the formula shown below. This calculation requires the use of the vapor pressure, which must be looked up on a Dew Point/Vapor Pressure conversion chart. The dew point may be measured directly using a very accurate dewpointer. Psychrometric charts are also available for determining the dew point and may be used if the ambient temperature and relative humidity are known. Note: If the vapor pressure is in metric units, the barometric pressure must also be in metric units. Many Dew Point/Vapor Pressure conversion charts are in metric units.

Local air density velocity readings may be corrected for relative humidity using the following formula.

$$\text{VELOCITY}_{\text{moist air}} = \left(\frac{P_b \times V_{\text{dry}}}{P_b - P_{\text{vapor}}} \right)$$

Where: P_b = local barometric pressure
 V_{dry} = velocity corrected for local density (temperature and barometric pressure)
 P_{vapor} = vapor pressure

Local air density air flow readings may be corrected for relative humidity using the following formula.

$$FLOW_{moist\ air} = \left(\frac{P_b \times F_{dry}}{P_b - P_{vapor}} \right)$$

Where: P_b = local barometric pressure
 F_{dry} = air flow corrected for local density (temperature and barometric pressure)
 P_{vapor} = vapor pressure

13.5 HOT WIRE ANEMOMETER VERSUS AIRDATA MULTIMETER

The ADM-850 AirData Multimeter measures local density **true** air velocity. This is in contrast to thermal anemometers or "hot wire" instruments which measure mass flow (mass flux/unit time). Mass flow represents the number of molecules of air flowing past a given point during a given time. Mass flow only represents **true velocity** when measured at standard sea level conditions of 29.92 in Hg and 70° F (0.075 lbs/cu ft). Hot wire, mass flow, "velocity" readings at density conditions other than standard **must** be corrected for local air density conditions if these results are to represent true air velocity.

Local density velocity readings taken with the ADM-850 AirData Multimeter may be compared with hot wire anemometer readings if the hot wire readings are corrected for local air density conditions to obtain true air velocity results.

The precise method for calculating local density corrected air velocity from measurements taken with a **hot wire anemometer** requires the use of the following equation:

$$TRUE\ AIR\ VEL\ (LOCAL) = \frac{velocity\ measured\ (hot\ wire)}{P_b} \times \left(\frac{29.92}{P_b} \times \frac{460 + ^\circ F}{530} \right)$$

Where: P_b = local barometric pressure (in Hg)
 $^\circ F$ = temperature of airstream

14.0 METER ACCURACY FIELD TESTING

14.1 METER ZERO FUNCTION

Take several readings with the meter set for air flow or velocity, with no air passing through the FlowHood unit. The meter should display zero readings, but may occasionally show a low reading such as 25 cfm. An occasional positive or negative reading is random electronic "noise" and may be disregarded.

If the zero test readings tend to be either positive or negative and greater than 25 cfm, the zero bias indicated will affect the accuracy of low air flow measurements. Check for any obstruction of meter connections and clean if needed.

Be sure that there is no moisture or condensation in the meter or meter connections. If the meter has been exposed to water or high humidity, followed by rapid cooling, water may have condensed inside the meter. In this event, the meter should be placed in a warm dry atmosphere (between 80° F and 130° F) for 24 hours. Afterward, the batteries will need to be recharged for 10 hours at a temperature less than 113° F. If a zero bias or other problem persists, call the factory for advice.

14.2 DIFFERENTIAL PRESSURE FUNCTION

Check the DIF PRES function zero accuracy by taking a reading with both meter ports open to the atmosphere. Be sure the ports are not exposed to a draft. The reading should be 0.0000 in wc $\pm$ 0.0001 in wc.

Check the differential pressure reading accuracy by using the AirData Multimeter to measure a static pressure source at approximately the following pressures: 0.1250 in wc; 2.000 in wc; 30.00 in wc. Confirm the pressure readings by comparison with an appropriately accurate inclined manometer at the 0.1250 and 2.000 in wc differential. The 30.00 in wc differential may be checked using a U-tube and distilled water.

Since the AirData Multimeter passes a very small sample of the air through the meter during each measurement (see SPECIFICATIONS), it should be connected to the pressure source independently of any other meter, manometer, or U-tube. To avoid pulsation or "cross talk" through the pressure source tubing, use shutoff valves to isolate the AirData Multimeter and the reference pressure gage. The pressure source must be self-replenishing, such as a pressure drop across a needle valve, orifice, or orifice plate.

14.3 ABSOLUTE PRESSURE FUNCTION

Confirm the accuracy of the absolute pressure correction by taking a reading with the meter ports open to the atmosphere and compare the reading with the actual barometric pressure. The reading should be within $\pm$ 2% (approximately .5 in Hg) of the actual barometric pressure to maintain the specified accuracy of velocity and air flow density correction.

NOTICE: Weather service or airport reports of barometric pressure have usually been adjusted for altitude, so the pressure can be used for altimeter adjustment. The barometric pressure announced on television or radio stations is generally obtained from weather service reports. This altitude corrected barometric pressure must not be used in density correction equations for comparison with the AirData Multimeter. An estimation of the actual barometric pressure may be obtained by deducting approximately 1.0 in Hg for each 1000 feet above sea level.

CAUTION

Testing of absolute pressures greater or less than local barometric pressure must be performed with the reference pressure applied to the positive (+) and the negative (-) parts at the same time. This precaution avoids excessive pressure input to the differential pressure transducer.

14.4 AIR FLOW ACCURACY

Air flow accuracy is confirmed by comparing a very careful pitot tube traverse with the results obtained using the FlowHood. An accurate inclined manometer, micromanometer, or AirData Multimeter may be used for the duct traverse. An inclined manometer used for the duct traverse should have minor scale divisions of .005 in wc or less, and should have direct velocity markings down to at least 400 fpm. The accuracy of the comparison test will depend on both the accuracy of the duct velocity traverse, and of the air flow calculated from the traverse velocity results.

A multipoint pitot tube traverse is performed on a supply duct which serves a single supply diffuser. The pitot tube should be a type approved by the NPL (National Physics Laboratory, U.K.) or AMCA (Air Moving and Conditioning Association, U.S.). The duct velocity should be at least 800 fpm; the duct should be properly sealed and taped; and the connection to the diffuser should be airtight. The duct traverse location should have straight duct for six to eight duct diameters upstream, and three to four diameters downstream. For example, a one foot diameter duct requires eight feet of straight duct upstream and four feet downstream.

14.5 DUCT TRAVERSE COMPARISONS, INCLINED MANOMETER, MICROMANOMETER

An inclined manometer or standard micromanometer does not correct for density effects due to barometric pressure or temperature. The density correction necessary for duct traverse readings which are to be compared with FlowHood readings taken with the TemProbe in place is as follows:

$$\text{LOCAL DENSITY FPM (true air velocity)} = \text{MANOMETER FPM (duct velocity)} \times \sqrt{\frac{29.92}{P_b}} \times \frac{460 + ^\circ F}{530}$$

Where: P_b = local barometric pressure (in Hg)
 $^\circ F$ = temperature of measured air stream

If the TemProbe is not attached during the flow measurement, the FlowHood meter will assume standard 70° F conditions (as do the inclined manometer and the standard micromanometer). In this case, it is not necessary to correct the duct traverse velocity for the density effect due to temperature. However, since the electronic FlowHood automatically corrects for the density effect of barometric pressure, the duct traverse readings must be corrected as follows:

$$\text{LOCAL DENSITY FPM (corrected for } P_b \text{ only)} = \text{MANOMETER FPM (duct velocity)} \times \sqrt{\frac{29.92}{P_b}}$$

Where: P_b = Local barometric pressure (in Hg)

14.6 DUCT TRAVERSE USING THE AIRDATA MULTIMETER

No corrections for density are necessary when the AirData Multimeter is used with a pitot tube for the comparison pitot tube traverse, if use of the TemProbe is consistent during both the air flow measurement using the FlowHood and the velocity measurement using the AirData Multimeter and pitot tube. This means that, if the TemProbe is used, it must be used for both types of measurements.

If the TemProbe is not used for either the flow or velocity measurement, it must not be used for the other type of measurement. In this case, both sets of measurements will be calculated using standard 70° F conditions.

14.7 BACKPRESSURE COMPENSATED COMPARISON READINGS

Perform a multipoint pitot tube traverse of a supply duct which serves a single supply diffuser. Calculate the air flow with careful attention to all of the factors discussed in this section. A backpressure compensated reading on this same diffuser should be within $\pm 5\%$ of the air flow calculated from this traverse.

14.8 NONBACKPRESSURE COMPENSATED COMPARISON READINGS

After determining the air delivery by duct traverse, measure and record the duct centerline velocity, both with and without the FlowHood (flaps open) in place. (A reduction in the duct centerline velocity when the FlowHood is placed over the diffuser, is caused by the flow resistance (backpressure) of the FlowHood).

A flaps open, nonbackpressure compensated FlowHood reading on this same diffuser should be within $\pm 3\%$ of $FLOW_2$ (calculated from the ratio of the two centerline readings).

$FLOW_2$ is obtained from the following calculation:

$$FLOW_2 = FLOW_1 \times \left(\frac{\text{duct centerline velocity (with FLOWHOOD)}}{\text{duct centerline velocity (without FLOWHOOD)}} \right)$$

Where: $FLOW_1$ = flow calculated from duct traverse
 $FLOW_2$ = flow in duct with FlowHood in place (flaps open)

15.0 METER & FLOWHOOD MAINTENANCE

15.1 METER MAINTENANCE

The AirData Multimeter is a precision instrument designed for long term field use if given reasonable care and maintenance. The meter and accessories should be kept reasonably clean, and should be stored in the protective case when not in use. The meter case and internal components are rugged, and well able to withstand normal handling. Continued rough handling will eventually cause damage.

The meter case is water resistant, but is not waterproof. Do not use the meter in conditions where liquids or corrosive gases might enter the case or pneumatic inlets.

Do not use or store the meter in temperatures outside the specified ranges. The meter may seem to tolerate summertime storage in such places as the trunk of a vehicle, but battery life and other functions will eventually deteriorate.

Battery life will be prolonged if the batteries are periodically permitted to discharge until the display registers LOCHARGE or RECHARGE. The battery charger cord should be coiled in gentle loops rather than wound tightly around the body of the charger transformer. This will greatly extend the life of the charger cord.

CAUTION

When replacing the batteries, be very careful to insert each cell in its indicated position for polarity. The polarity position marking for each cell is embossed in the housing beneath each cell position. Take note that the cells are not all oriented in the same way. Failure to observe proper cell positioning can result in severe damage to the meter.

If rechargeable batteries are not available in a field situation, the batteries may be replaced with 12 non-rechargeable, alkaline "AA" pen cell batteries. **WARNING:** Do not plug the charger in if any non-rechargeable batteries are in the meter. The meter will be seriously damaged along with the batteries and charger.

Any attempt to service or repair anything inside the meter will void the warranty and may cause serious damage to the sensitive electronic components.

The AirData Multimeter should be returned to the factory at least every two years for recalibration, maintenance, and software update. This will keep the meter up to date with ongoing improvements and new features as they develop. This preventive maintenance program will assure that the original accuracy of the meter is maintained throughout the life of the meter.

15.2 FLOWHOOD MAINTENANCE

The flow sensing grid in the FlowHood unit is constructed of high impact ABS plastic. It can be damaged if subjected to physical abuse or excessive stress. Accurate air flow measurements are dependent on the integrity of this grid. Even a hairline crack will effect the results. The grid should not be exposed to temperatures in excess of 140° F for extended periods, or 160° F for five minutes. Do not lay anything on the grid or interfere with the tension of the support springs.

Check the flow sensing grid periodically for damage, poor connections to the meter, or an accumulation of dirt or dust particles. The grid may be cleaned by wiping carefully with alcohol. Care must be taken to avoid knocking dirt or dust particles into the grid orifices.

The top support assembly, consisting of the aluminum rod structure that supports the cloth skirt and frame assembly, should be stored folded with the ends of each pair of legs inserted into the top and middle holes of the two front base corner tubes. The head of the assembly should be toward the back of the base assembly. The four spring rods should be positioned downward to avoid applying pressure to the flow sensing grid.

The fabric tops should be washed periodically in cool water with a mild detergent. The tops must be air dried as heat may cause the fabric to shrink. Excessive dirt build up should be avoided. The tops must be air dried only, as heat may cause the fabric to shrink. Reasonable care will prolong the life of the fabric tops. Sharp objects or corners can puncture the fabric and affect the accuracy of the readings.

16.0 RECALIBRATION AND REPAIR INFORMATION

If an apparent problem develops with the AirData Multimeter or accessories, contact the factory, specifying the model number, and details of the difficulty. Return the unit (in original carton and packing) to the factory, transportation prepaid. The repair Purchase Order and description of the problem should be enclosed in a packing slip on the outside of the shipping container. If the unit is no longer under warranty, regular repair charges will apply. An estimate of the cost will be furnished before repairs begin unless the customer specifies otherwise.

The complete meter kit and all accessories should be returned to the factory for recalibration and repair. If just the meter must be returned for repair, the meter should be individually wrapped in several layers of foam padding, and shipped in a carton approximately 12"x12"x8" with sufficient additional cushioning to fill the carton. Do not use spray foam. Spray foam can damage the meter, and it is possible to "lose" a meter in a chunk of spray foam.

Ship directly to: Shortridge Instruments, Inc.
 7855 E. Redfield Rd.
 Scottsdale, Arizona 85260
 Attention: Recalibration and Repair Dept.
 Telephone: (480) 991-6744 Fax: (480) 443-1267
 www.shortridge.com

AIR BALANCE MANUALS & TRAINING PROGRAMS

Several publications are available from the following organizations.

Associated Air Balance Council (AABC)
1518 K Street NW
Washington, DC 20005
(202) 737-0202 • FAX (202) 638-4833 • www.aabchq.com

AABC offers membership, training programs and certification to air balance firms.

National Environmental Balancing Bureau (NEBB)
8575 Grovemont Circle
Gaithersburg, MD 20877-4121
(301) 977-3698 • FAX (301) 977-9589 • www.nebb.org

NEBB offers membership training programs and certification for contractors, engineers, and others.

Sheet Metal and Air Conditioning Contractors National Association Inc. (SMACNA)
4201 Lafayette Center Drive
Chantilly, VA 20151-1209
(703) 803-2980 • FAX (703) 803-3732 • www.smacna.org

SMACNA offers Technical Manuals and Standards Publications

WARRANTY

The seller warrants to the Purchaser that any equipment manufactured by it and bearing its name plate to be free from defects in material or workmanship, under proper and normal use and service, as follows: if, at any time within one (1) year from the date of shipment, the Purchaser notifies the Seller that in his opinion, the equipment is defective, and returns the equipment to the Seller's originating factory, prepaid, and the Seller's inspection finds the equipment to be defective in material or workmanship, the Seller will promptly correct it by either, at its option, repairing any defective part or material, or replacing it free of charge, and return shipped lowest cost transportation prepaid (if Purchaser requests premium transportation, Purchaser will be billed for difference in transportation costs). If inspection by the Seller does not disclose any defect in material or workmanship, the Seller's regular charges will apply. This warranty shall be effective only if use and maintenance is in accordance with our instructions and written notice of a defect is given to the Seller within such period. THIS WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER WARRANTIES, WRITTEN, ORAL OR IMPLIED, SPECIFICALLY, WITHOUT LIMITATION, THERE IS NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PURPOSE. The liability of the Seller shall be limited to the repair or replacement of materials or parts as above set forth.

LIMITATION OF LIABILITY

The Seller shall not be liable for any claim or consequential or special loss or damage arising or alleged to have arisen from any delay in delivery or malfunction or failure of the equipment. The Seller's liability for any other loss or damage arising out of or connected with the manufacture or use of the equipment sold, including damage due to negligence, shall not in any event exceed the price of the equipment supplied by us.

Shortridge Instruments, Inc. reserves the right to make changes at any time, without notice, in prices, colors, materials, specifications and models, and also to discontinue models.

APPENDIX A - NIST VELOCITY TESTING

The AirData Multimeter is primarily an electronic micromanometer which measures pressures very accurately. The velocity pressure generated by the various probes is used to calculate and display air velocity and air flow. Confirmation of the meter pressure measurement accuracy is fairly simple using NIST traceable transfer standard gages.

The testing of the meter with various velocity probes, however, is not as straight forward. Velocity accuracy testing requires the use of a fairly large wind tunnel to reduce boundary layer and wall effects. The wind tunnel must provide a very flat velocity profile and a range from 50 to 9000 fpm.

Such a facility does exist at NIST and can provide directly traceable testing and certification.

National Institute of Standards and Technology
Rt. #1-270 & Quince Orchard Road, Bldg. 230
Fluid Mechanics Bldg.
Gaithersburg, MD 20899
Phone: (301) 975-5947

RECOMMENDED TEST PROCEDURES

The AirData Multimeter automatically corrects air velocity and flow readings for the density effects of barometric pressure and temperature. Readings will be corrected to local density true air speed unless standard density, mass flow readout is specifically selected. No such selection is required, since the NIST velocity correction is normally for local air density. The AirData Multimeter does not correct air velocity readings for relative humidity.

The AirData Multimeter TemProbe and extension cord must be plugged into the meter and placed in the wind tunnel airstream to correct the readings for the density effect of variations in temperature. Record the AirData Multimeter temperature and absolute (barometric) pressure reading at the beginning and end of each probe test range. These readings must fall within the specified tolerances to allow velocity testing.

The hose lengths connecting the probes to the AirData Multimeter should not exceed 15 feet of 3/16" ID flexible tubing.

The air velocity test points should be preselected to provide data over the full range of each probe, with additional test points at the velocities of most interest for a given application. Suggested test points might include:

Pitot tube:

50, 75, 100, 150, 200, 300, 500, 1000, 1500, 2000, 2500, 3000, 4000, 5000, 6000, 8000 fpm

AirFoil probe:

50, 75, 100, 150, 200, 300, 500, 750, 1000, 1500, 2000, 2500, 3000, 4000, 5000 fpm

VelGrid:

50, 75, 100, 150, 200, 250, 300, 500, 1000, 1500, 2000, 2500 fpm

NIST LASER DOPPLER VELOCIMETER WIND TUNNEL TESTING

The AirData Multimeter probes **must** be positioned at the wind tunnel centerline.

Select the automatic storage mode on the AirData Multimeter. When the air velocity has stabilized, begin the AirData Multimeter velocity sampling interval. The AirData Multimeter must be taking readings throughout the LDV sampling period. The simultaneous sampling period must be long enough for the AirData Multimeter to obtain the average of at least 10 readings at velocities less than 200 fpm. Record the LDV and AirData Multimeter averages for each test measured velocity.

The tests described above are extensive and relatively expensive. The expense of obtaining such traceability is justifiable when a transfer standard meter and probes are designated as a "Sheltered Set". This "Sheltered Set" should only be used to verify the accuracy of instruments which are used in the field.

APPENDIX B - LABORATORY DIFFERENTIAL PRESSURE TEST

Some applications such as Nuclear Power Plants, Health Care Facilities and Clean Rooms require more frequent instrument calibration testing and accuracy verification. Calibration services and documentation is available at Shortridge Instruments, Inc. However, if interim calibration tests are required at your own metrology department or at an independent laboratory, the following information will be helpful.

The reference pressure source may be very accurately controlled by using two deadweight test units that are set up with different pressures of precisely the desired test differential pressure. These testers must be carefully adjusted to an accurate equal base pressure of approximately 3 psi before adding weight to one unit to generate the required differential pressure.

The AirData Multimeter should be tested at a minimum of three pressures:

0.1250 in wc	≈	(31 Pa)
2.000 in wc	≈	(500 Pa)
30.000 in wc	≈	(7500 Pa)

If more test points are required, the following schedule is recommended:

0.0500 in wc	≈	(12 Pa)
0.1250 in wc	≈	(31 Pa)
0.2250 in wc	≈	(56 Pa)
0.2700 in wc	≈	(67 Pa)
2.000 in wc	≈	(500 Pa)
3.600 in wc	≈	(900 Pa)
4.400 in wc	≈	(1,100 Pa)
27.00 in wc	≈	(6,750 Pa)
50.00 in wc	≈	(12,500 Pa)

Refer to Section 14.2 DIFFERENTIAL PRESSURE FUNCTION under Section 14.0 METER ACCURACY FIELD TESTING of this manual for additional information.

APPENDIX C - BATTERY TEST PROCEDURE

Insufficient battery charge (entire set or individual cells) can cause the meter to display garbled messages or "TOO HOT", "TOO COLD", "RECHARGE" or other messages. This garbled display usually is seen when the meter is just turned on and the supply voltage drops so fast that the meter gets lost. The following tests should be performed before you call or return the meter.

1. Check the battery charger transformer. The output should be 24 to 30 volts AC with 115 volt, single phase input. Be sure the charger is plugged into a live outlet.
2. Does the meter function properly while the charger is attached and plugged-in? If so, a bad battery cell is likely. Allow ten minutes for minimum charging to take effect before testing meter function.
3. Place the meter face down with the air connectors turned away from you. Remove the battery compartment cover by unscrewing the (8) small phillips head screws. Check the battery clips. Remove the batteries and respring the clips to provide proper contact pressure with the ends of the batteries.

Be sure to reinstall the batteries in the proper orientation as shown in the compartment. Turn the meter on to see if the problem display still exists. If the problem persists, test the positive (+) and negative (-) charging circuits as follows:

- a. Measure the DC voltage of the upper half (positive)(+) (6 cells) of the battery set by placing your DC voltmeter common (ground) probe at the left center battery clip and the other probe at the upper right corner battery clip. The voltage should be between 6.6 volts and 7.8 volts DC.

This voltage should rise when the charger is plugged in and should fall when the charger is unplugged.

- b. If the voltage does not rise and fall with the changes in charger input, then the charging circuit in the meter is not working and the meter must be returned to the factory for repair.
 - c. Test the lower (negative)(-) half of the battery set in the same manner described above by placing the voltmeter probes at the left center battery clip and at the lower right corner battery clip.
4. Check each battery cell voltage with the charger unplugged and with the meter turned on (if it will stay turned on).

Each cell should have a voltage of 1.1 to 1.3 volts. If you find one or two very low cells, they may be weak cells and may need to be replaced. If most of the cells are less than 1.1 volts, it is possible that all are near the end of the discharge cycle and just need to be recharged.
 5. Replace weak or low capacity battery cells with rechargeable cells of the same capacity (milliamphr) as the existing cells. If the same capacity cells are not available, replace all 12 cells with new batteries. See the section titled METER MAINTENANCE.
 6. If the problem is not corrected through these procedures, please return the meter to our factory for repair and calibration services.

PROLONGING BATTERY LIFE

It is best to use the NiCad batteries until the meter displays RECHARGE at least once per month. This can be accomplished at the end of the work week by running the meter continuously until the batteries run down. The meter will stay on if left in "SPEED-READ". The meter will shut-off automatically when RECHARGE is displayed. Be sure to put the meter back on charge, so that full charge will be attained for the next week's work.

WARNING: Do not plug in the charger if **ANY** nonrechargeable batteries are in the meter.

BATTERY RECYCLING



RECYCLE
1-800-822-8837

The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates Shortridge Instruments, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC® program provides a convenient alternative to placing Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-822-8837 for information on Ni-Cd battery recycling and disposal bans/restrictions in your area. Shortridge Instruments, Inc. involvement in this program is part of our commitment to preserving our environment and conserving our natural resources.

REPLACEMENT PARTS LIST

Part no	No reqd per set	Description
ADM-850M	1	AirData Multimeter
PS8201	1	Battery charger
AA-NICAD	12	Rechargeable Ni-Cd batteries
ADT442	1	TemProbe temperature probe - 4" x 1/8" diameter
TRC16	1	Temperature retractile cord - 1'x 6'
TEW19	1	Temperature extension wand 19"
A-303	2	Static pressure tip
160-18	1	Pitot tube - 18" length
NT316	1	3/16" ID Neoprene tubing, two 5' lengths
AFP18	1	AirFoil probe, 18" length (24", 36" or 48" available)
MC84	1	Fitted foam-lined carrying case
IM-850	1	Instruction manual - ADM-850

8400 FLOWHOOD

844	1	FlowHood base assembly with flaps
845	1	Flow sensing grid
826	1	Top support assembly
842	1	Pushbutton handle assembly
827	4	Support dowels
838	2	Frame storage bridge
829	1	Carrying case

2' x 2' TOP (61 x 61 cm)

220	4	Side channel (type 7)
2x2F	1	Complete frame assembly (all of above)
2x2S	1	Cloth skirt (24" x 24")
2x2T	1	2x2 top set complete

1' x 4' TOP (33 x 119.4 cm)

141	2	Side channel (type 1)
142	2	Side channel (type 2)
143	2	End channel (type 3)
1x4F	1	Complete frame assembly (all of above)
1x4S	1	Cloth skirt (13" x 47")
1x4T	1	1x4 top set complete

2' x 4' TOP (63.5 x 119.4 cm)

141	2	Side channel (type 1)
142	2	Side channel (type 2)
244	2	End channel (type 4)
2x4F	1	Complete frame assembly (all of above)
2x4S	1	Cloth skirt (25" x 47")
2x4T	1	2x4 top set complete

1' x 5' TOP (33 x 152.4 cm)

141	2	Side channel (type 1)
142	2	Side channel (type 2)
143	2	End channel (type 3)
155	2	Side extender (type 5)
1x5F	1	Complete frame assembly (all of above)
1x5S	1	Cloth skirt (13" x 60")
827E	4	Support dowel extenders
1x5T	1	1x5 top set complete

REPLACEMENT PARTS LIST (continued)

Part no	No reqd per set	Description
3' x 3' TOP (91.4 x 91.4 cm)		
141	4	Side channel (type 1)
336	4	Side channel (type 6)
3x3F	1	Complete frame assembly (all of above)
3x3S	1	Cloth skirt (36" x 36")
827E	8	Support dowel extenders
3x3T	1	3x3 top set complete
14" x 14" TOP (35.6 x 35.6 cm)		
111	4	Replacement side channel (14" length)
14x14F	1	Complete frame assembly
14x14S	1	Cloth skirt (14"x14"x14" height)
827E	4	Support dowel extenders
14x14T	1	14"x14"x14" top set complete

Special top sizes and combinations are available on request. Maximum perimeter length is 14 feet.

ADM-850 INDEX

8.8:8.8.8.8.8	7	handle assembly	19
AABC	33	Hg: READ	6
ABS PRES	7	Hg: $\pm$ nn.n	6
absolute pressure	2, 14, 30	hot wire anemometer	29
accuracy	2	IN: READ	6, 13
Air Balance Manuals	33	IN: $\pm$ nnnnn	6
air density correction	2, 14	internal calibration	1, 10
air flow	2, 24, 26, 28, 29		
air flow accuracy	30	keypad	4, 5
air flow measurement	17	kitchen exhaust hoods	26
air velocity	2, 29		
air velocity measurements	11	large return air grilles	26
AirData Multimeter	10	linear slot diffusers	26
AirData MultiTemp	15	local air density	28, 29
APPENDIX A	35	local density correction	28
APPENDIX B	36	LOCHARGE	8
Associated Air Balance Council	33	LS: c $\pm$ nnnn	7
		LS: CORR	8
backpressure compensated comparison readings	31	LS: READ	6
backpressure compensated readings	17, 24	LS: u $\pm$ nnnn	7
BAR n.nnn	7	LS: UNCORR	8
BAR READ	6		
barometric pressure	14, 17, 28-30	mass flow	29
Batteries	38	meter accuracy field testing	30
battery charger	2	meter housing	2
battery charger jack	4, 5	meter zero function	30
battery life	2	metric	8
BATTERY TEST PROCEDURE	37	metric units	6
		MODE	4
CAL	7, 24	MultiTemp	15
CALC	7, 24		
captive fastener	24	National Environmental Balancing Bureau	33
capture hood resistance	17	NEBB	33
CF: c $\pm$ nnnn	6	NEGPITOT	8, 11
CF: CORR	7	NO FLAPS	8
CF: READ	6, 24	NO PROBE	8
CF: u $\pm$ nnnn	6	nonbackpressure compensated comp readings	24, 31
CF: UNCORR	7	nonbackpressure compensated readings	26
charge	4	nozzle type outlets	26
constant volume controllers	26		
correction factors	28	OFF/RESET	4
		ON/OFF key	4, 5
damper adjustments	10	OPEN FLAP	8
density correction	2, 28, 29	operational temperature limits	2
density effect	17	orifice plate	30
density effects	28	OVER TEMP	15
dewpoint	28	OVERANGE	8
DIF PRES	7, 13		
differential pressure	2, 13	PA: READ	6
differential pressure function	30	PA: $\pm$ nnnnn	7
display messages and prompts	6	pitot tube	13
dowel extenders	18	PITOTUBE	8, 11
		pneumatic pressure inlets	4
English	7	pneumatic tubing	13
English units	6	pressure measurement	13
ERROR	7, 25	PROBE	8
external features	4	proportional balancing	10, 26
external read jack	4	Psychrometric charts	28
fabric tops	18	READ	4, 6
flaps	4, 10	readout	2
flaps jack	4, 5, 24	recalibration	1
flaps plug	4, 10	RECHARGE	8
FLO-HOOD	7, 24	relative humidity	28
flow sensing grid	18	relative humidity correction	28
FlowHood	17, 24	replacement parts list	39, 40
FlowHood assembly	18	reset switch	5
FP: READ	6	response time	2
FP: $\pm$ nnnnnn	6		
frame channels	18	safety notice	24
frame pieces	18	Sheet Metal and Air Conditioning Contractors	33
		short top set	27
HALT	8, 10	sidewall registers	26

SMACNA	33
special balancing procedures	26
special top sizes	27
SPEED	8
SPEED-READ	8, 10
standard density	28
static pressure probes	13
STD 70° F	8, 17
storage temperature limits	2
support dowels	39
system problems	27
temperature	2, 17
temperature density correction	28
temperature input jack	4, 5
temperature measurement	15
TemProbe	11, 24
thermal anemometers	29
thumbswitch plug	24
TOO HOT or TOO COLD	8
top support assembly	18
tubing	3
UNDER TEMP	15
UNITS	4
vapor pressure	28
velocity measurement	11
volume controlled outlets	26
WARRANTY	34
weather service reports	30
zero bias	30
zeroing	1
° C: READ	6
° C: ± nnn.n	7
° F: READ	6
° F: ± nnn.n	6
≡S: READ	6
≡S: ± nnnnnn	7