


Keysight Technologies

CX3300 Current Waveform Analyzer

Quick Operation Guide


How to apply a Measurement Function

1. Apply a Measurement Function (“+width” in this case)
 - 1-1. Click the “Measurement” icon on the Tool Palette.
 - 1-2. Drag and drop the “+width” icon onto the target.

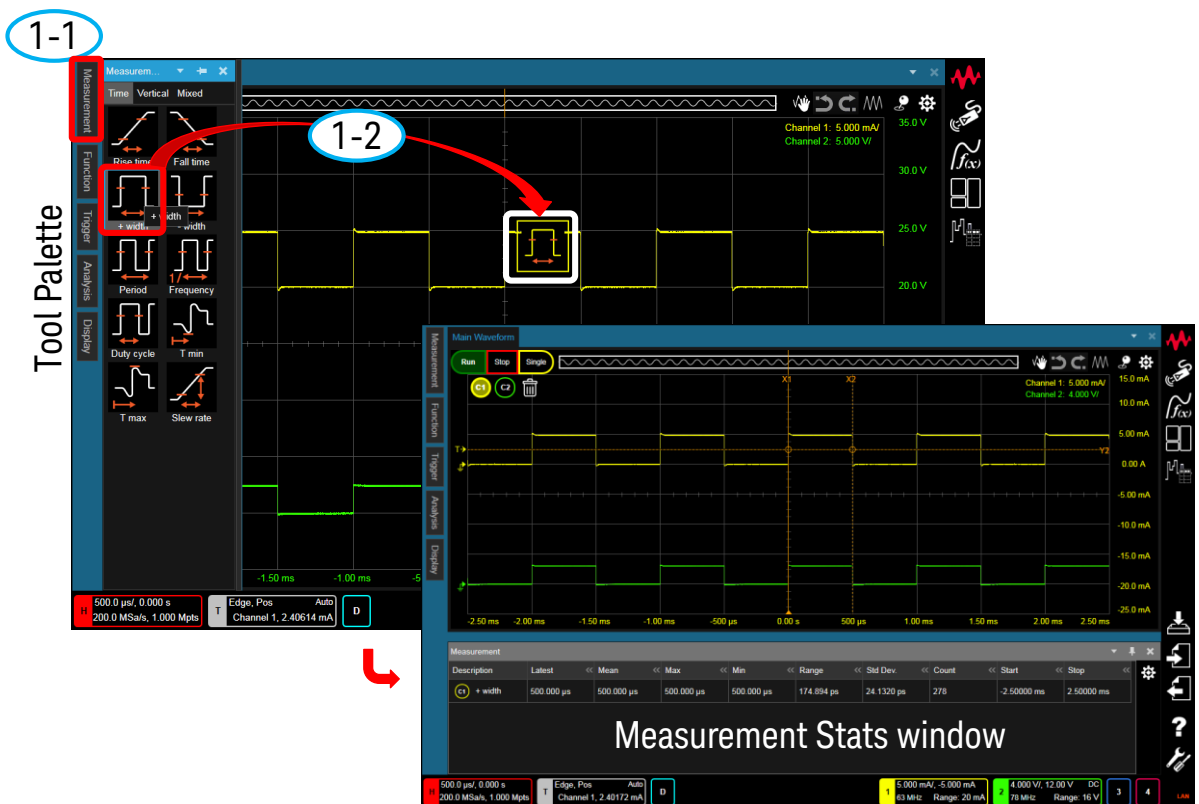


Next page

- For more detailed conditions, open the Measurements pane by clicking the Setting icon on the Measurement Stats window and change the settings.

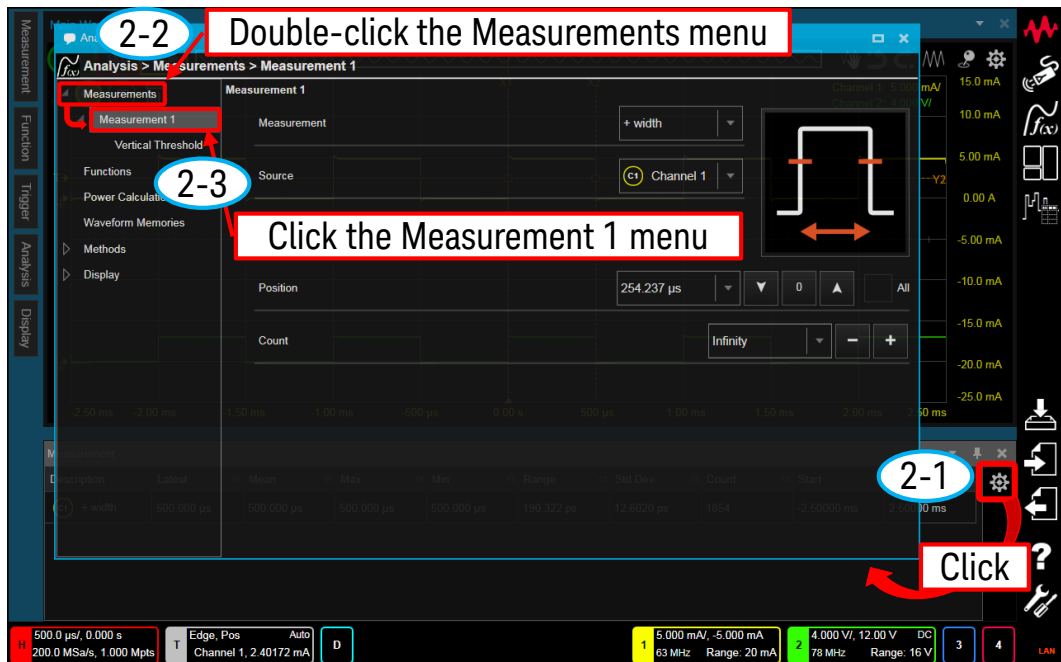

You can also access the Measurement pane via Side Bar > Analysis > Measurement.

- Turn the measurement function off.

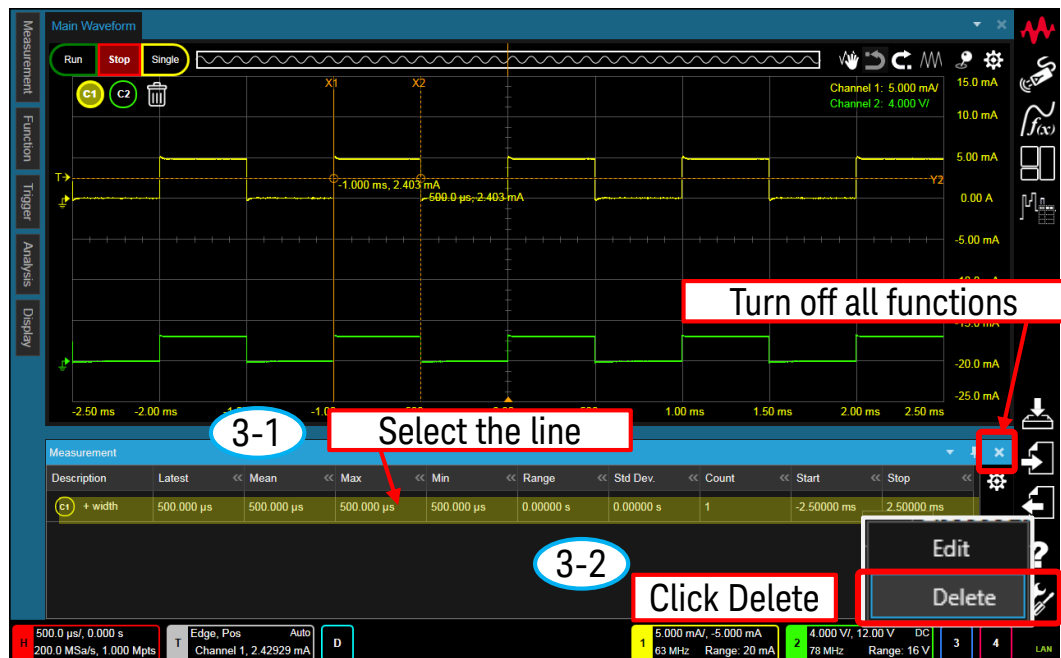

You can switch the measurement function ON and OFF on the Measurement pane as described in procedure 2.