

Keysight Technologies

CX3300 Current Waveform Analyzer


Quick Operation Guide

How to change the vertical scale and position

1. How to select the channel.

Select the target waveform by either:

- Pressing [1], [2], [3] or [4] for the analog input channels
- OR
- Clicking on the icons on the Waveform tray for the analog input channels or function waveform.

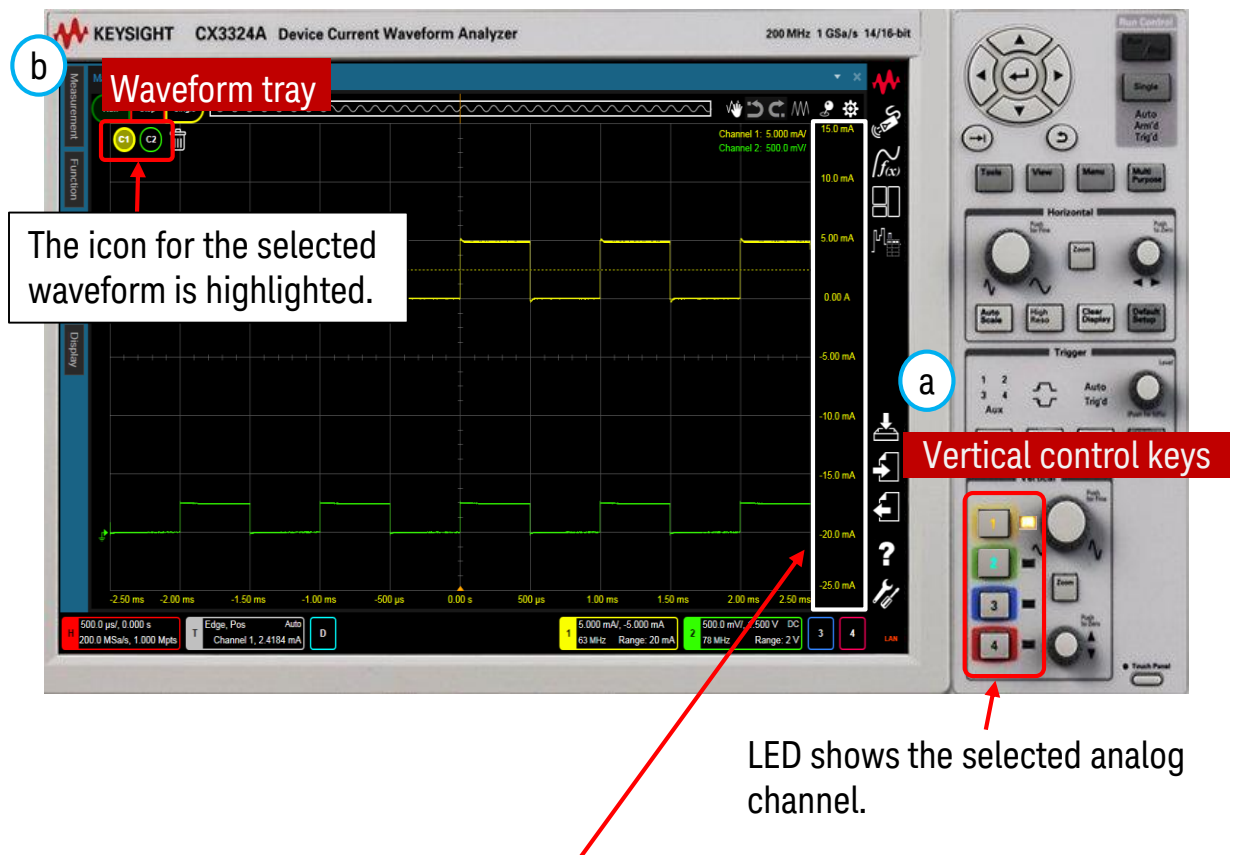

The color of the Y axis is the same color as the selected waveform.

Next page

2. How to Change the horizontal scale and position

You can change the horizontal scale and position using any of the following methods:

- Using the knobs on Vertical Controls
- Using the Vertical mini dialog box
- Using the Y Axis dialog box for fine control.

