


Keysight Technologies

CX3300 Current Waveform Analyzer


Quick Operation Guide

How to change the current range

1. Click on the Channel summary to open the Channel mini dialog box.
2. Un-check "Auto".
3. Select the "Range".

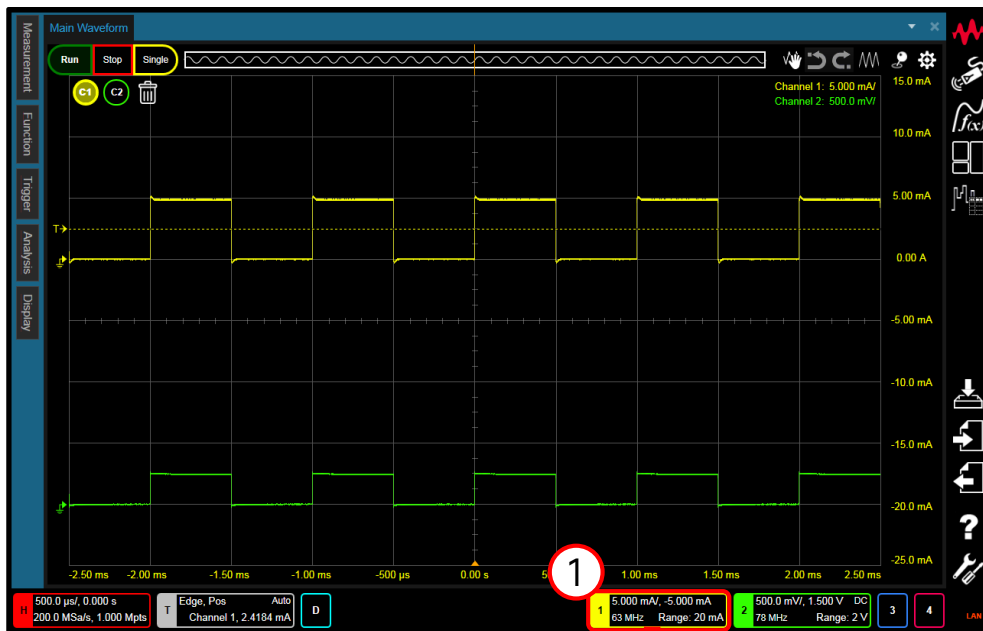

Click

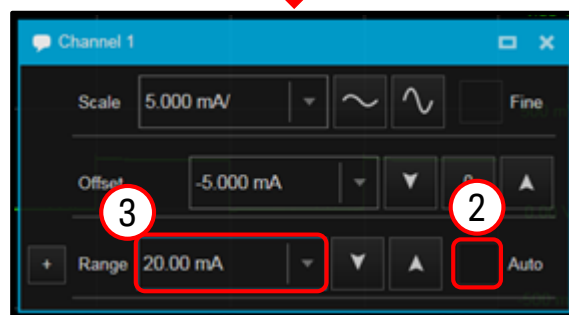

Note:

- If "Auto" is enabled, a suitable range is selected automatically by the vertical scale setting controlled by the Vertical scale control knob.
- The measurement bandwidth and the input resistor are automatically changed by changing the range.