


Keysight Technologies

CX3300 Current Waveform Analyzer

Quick Operation Guide


How to display the secondary Y axis

1. Select “Axis” in the Display Tool Pallet. Then, drag and drop the “X1, Y1 and Y2” icon on the waveform.

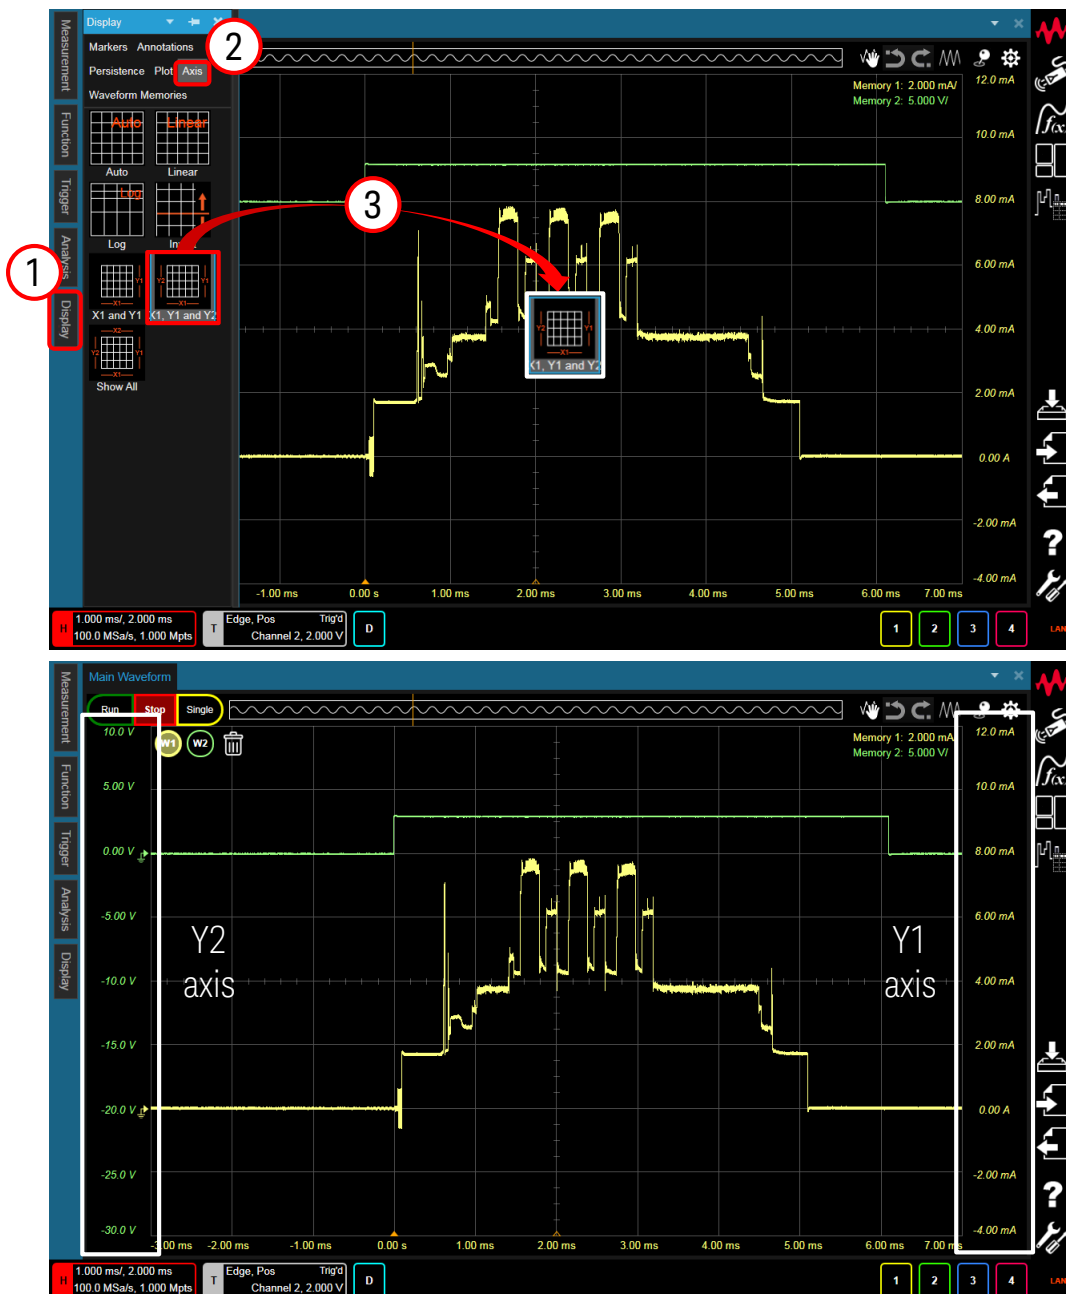

2. How to delete the secondary Y Axis.
There are 2 ways to delete the secondary Y Axis.

2-1. Drag and drop the “Display > Axis > X1 and Y 1” icon.

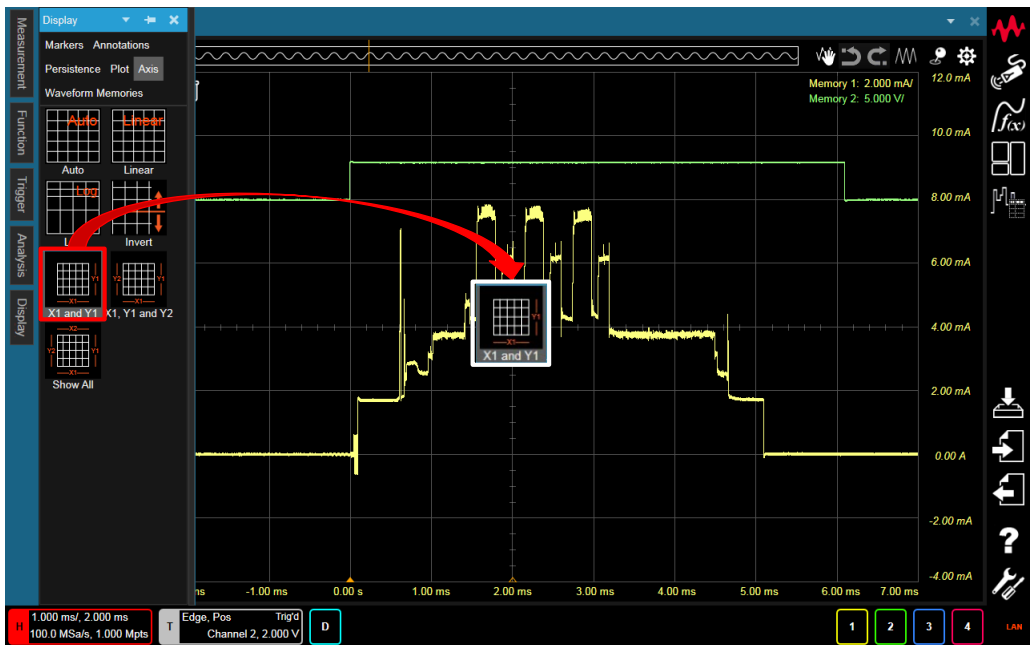

2-2. Double-click somewhere on the screen and switch OFF the “Secondary Y Axis” on the “Plot Properties” window.

