

LabSat 3 User Manual

- [01 - LabSat3 Introduction](#)
- [02 - LabSat3 Components](#)
- [03 - LabSat3 Media](#)
- [04 - LabSat3 Menu layout](#)
- [05 - LabSat3 Record and Replay operations in detail](#)
- [06 - LabSat3 HDD File Layout](#)
- [07 - LabSat3 Battery](#)
- [08 - LabSat3 External reference clock input](#)
- [09 - LabSat3 Digital Channels](#)
- [10 - LabSat3 CAN Bus](#)
- [11 - LabSat3 Digital In/Out](#)
- [12 - LabSat3 Remote control](#)
- [13 - LabSat3 Converting LabSat scenarios](#)
- [14 - LabSat3 SatGen Software](#)
- [15 - LabSat3 Troubleshooting](#)
- [16 - LabSat3 Technical Properties](#)
- [LabSat3 EC Declaration of Conformity](#)
- [LabSat3 Label](#)
- [LabSat3 PIN OUTS](#)
- [LabSat3 Replacement parts and optional accessories](#)
- [LabSat3 RoHS Declaration](#)
- [LabSat3 Technical specification](#)
- [LabSat3 Upgrading firmware](#)

01 - LabSat3 Introduction

LabSat 3 is a lightweight, portable record and replay system for GNSS testing. With the ability to record real world GNSS signals directly to SD card or HDD storage, the LabSat 3 is a simple to use, fully stand-alone system. Recorded signals can be replayed back by LabSat 3 in the Lab enabling development and testing of most types of GNSS equipment.

Alternatively SatGen software can also be used to create simulated GNSS signals from map or user defined trajectory. Despite its simplicity, the LabSat 3 product range supports a number of powerful features for use in industries such as automotive, sports and aerospace including Triple RF channels for multiple constellation testing, dual CAN Bus recording, inertial sensor logging and battery powered operation.



Additional features:-

- Available for GPS, GLONASS, Galileo, BeiDou, QZSS
- Simple to use one touch recording
- Record or replay using external USB hard drive
- RS232, Digital & Dual CAN interface
- Remote control over Ethernet
- External 10MHz Reference input
- OCXO option
- OEM version available for system integrators
- Digital input for event marking or 1PPS recording
- Adjustable attenuation (0 – 31dBm)
- On-board GNSS receiver for monitoring RF during record and replay

The LabSat 3 line-up includes a number of variants to suit a range of testing requirements. These are:

Version	Description
RLLS03-3RP	Triple Constellation record & replay system with CAN Bus / RS232 / Digital IO
RLLS03-3P	Triple Constellation replay only system with CAN Bus / RS232 / Digital IO
RLLS03-2RP	Dual Constellation record & replay system with CAN Bus / RS232 / Digital IO
RLLS03-2P	Dual Constellation replay only system with CAN Bus / RS232 / Digital IO
RLLS03-1RP	Single Constellation record & replay system
RLLS03-1P	Single Constellation replay only system



How does it work?

GNSS stands for Global Navigation Satellite Systems and is a general term that covers satellite positioning constellations belonging to different countries around the world. These include, among others, the United States 'GPS', the Russian 'GLONASS' and the Chinese 'BeiDou' systems. LabSat 3 is capable of recording and then replaying the raw radio signals that are transmitted by the various constellations of satellites. LabSat 3 receives the signal from an antenna just like a standard GNSS receiver but instead of processing each of the received signals to calculate a position fix, LabSat 3 samples and stores the antenna signal at very high speed.

When the stored antenna signal is replayed by LabSat 3 into a standard GNSS receiver such as a portable navigation system, the receiver will see essentially, the same signal that it would see if it were connected to an antenna including movement, delays and multipath effects. This makes LabSat 3 invaluable for recording moving scenarios such as driving through a city in a car. One of the benefits of using a recorded test signal is consistency. For example, if testing of a product involves going for a drive each time the firmware is updated, the satellite positions and atmospheric conditions will be different for every drive. If the drive is recorded once with LabSat 3, the recorded signal can be replayed over and over on the bench saving hours of drive time and with the knowledge that the conditions will be the same for each replay.

Registration

Racelogic recommend that all LabSat devices are registered immediately on receipt. Please go to www.labsat.co.uk/register and fill in all the details requested. If you register your LabSat within its first year warranty, you will automatically receive an additional year's warranty.


Registering your LabSat will enable you to easily communicate with our support team. Any firmware / software updates will be available on the LabSat website. Updates are more robust and easier to use, and later firmware releases offer bug fixes as well as added features and improvements to the original specification of the product. Your details will be available to our Support Team, in case you need any assistance in the future.



Replay Example

Example of Replay using the included SD card with preloaded scenario.

Briefly press the power button to power up the LabSat 3. Connect from the RF output on the rear of the LabSat 3 to your GPS system antenna input. With the SD card inserted, use the **UP/DOWN** arrows to select a file. Press the **PLAY** button to start replay.

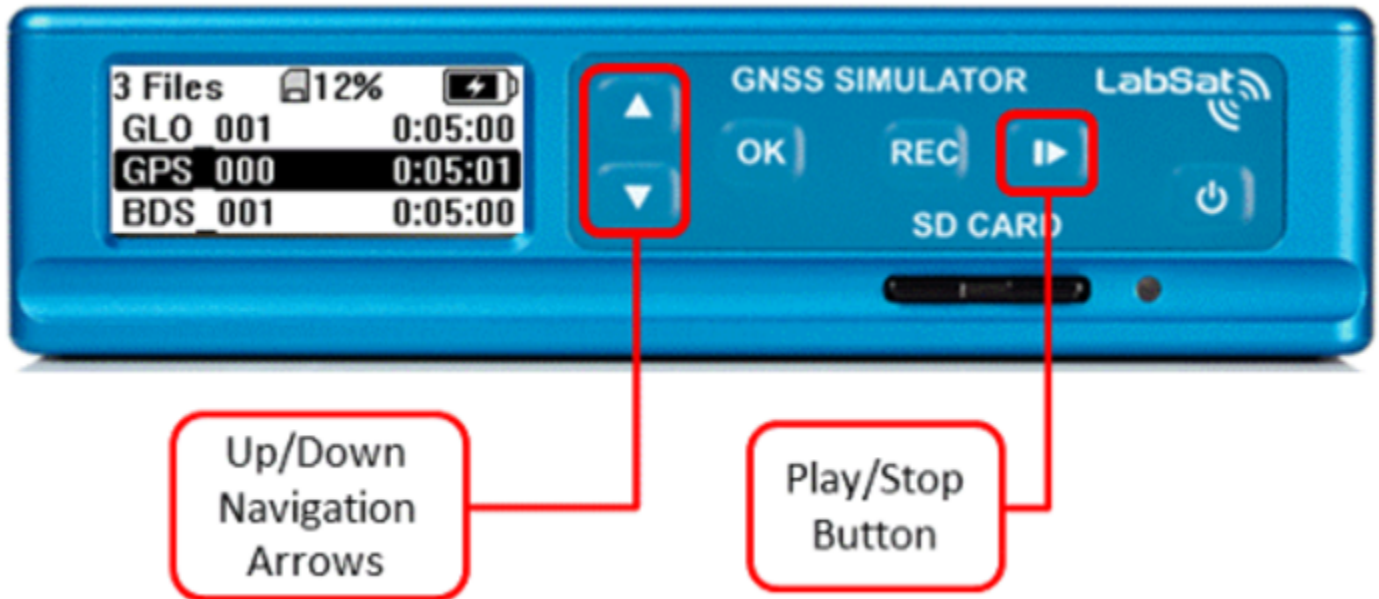

LabSat 3 contains an on board GNSS receiver that allows monitoring of the RF signals during record or replay. To show a live histogram of satellite signal levels detected by the on board receiver, press the **OK** button during replay. Press the **OK** button again to return to the replay status display. During replay, pressing the **PLAY** button will halt replay and return to the file list.






Record Example

Example of Recording your own file to an SD card (RP variants only).

To record a new file, connect the LabSat 3 antenna to the RF input on the rear of the LabSat. Ensure that the antenna has a clear view of the sky, press the **REC** button to start recording. Press the **REC** button again to stop recording. While recording, if the SD card becomes full, recording will stop automatically. During recording, pressing the **OK** button will switch the display to show a live histogram view of the satellite levels being received by the on-board GNSS monitor. Pressing the **OK** button again will return to the record status display.

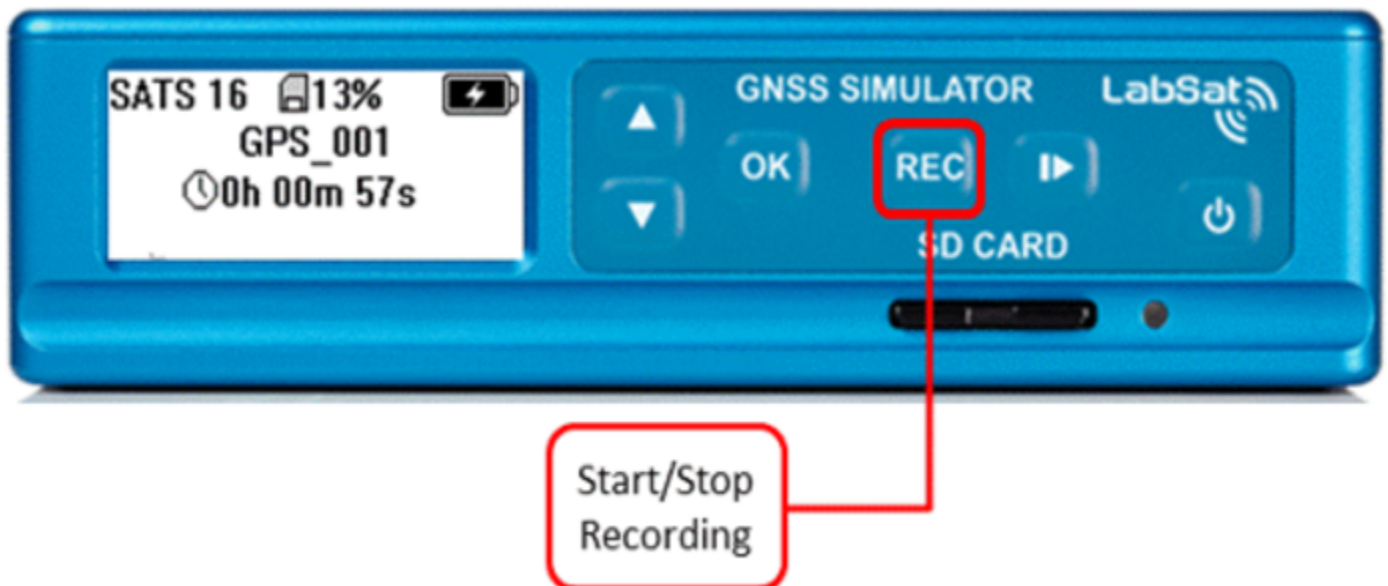


During recording, while using battery power, the GNSS monitor display will automatically revert to the record display after a short period to conserve battery power. This power save feature can be switched off but it is recommended to be left active for maximum battery life.




02 - LabSat3 Components

LabSat 3 has been designed to be portable and simple to use allowing virtually anyone to gather field test signals without in depth training. Recording GNSS signals is as simple as positioning the antenna and pressing one button. The sunlight-readable graphic display gives instant feedback of record status and can show live histogram data to verify satellites in view during recording. Back at the Lab, recorded signals can be replayed at the push of a button for repeatable, reliable testing.

LabSat 3 Front

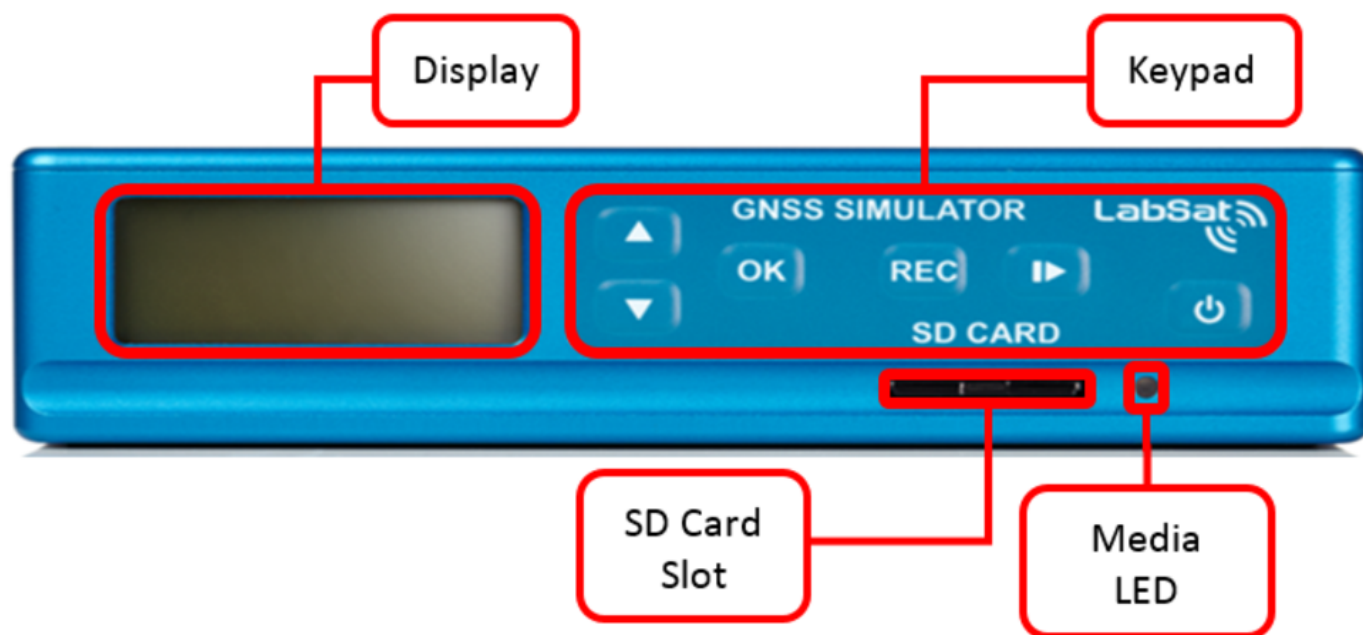

LabSat 3 Rear

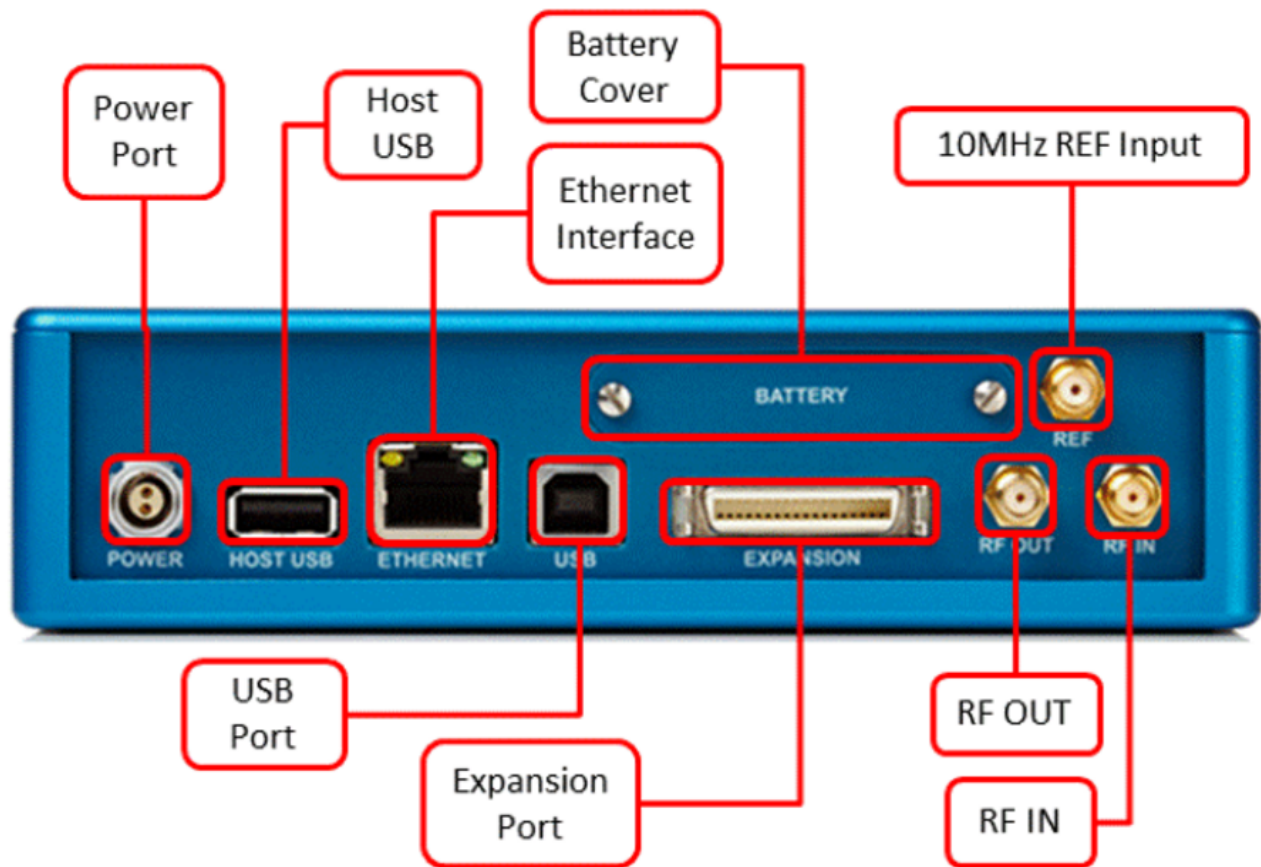

Name	Type	Description
POWER	2 pin LEMO	8 to 30 VDC Power Supply input
HOST USB	USB 'A'	Connection of USB Storage devices
ETHERNET	RJ45	Remote access and control
USB	USB 'B'	NMEA data output
RF OUT	SMA	Output RF signal
RF IN	SMA	Input RF signal (RP variants only)
REF	SMA	10MHz Reference Clock Input
Expansion	36 Way MDR	1PPS, Digital I/O*, CAN*, RS232*

*Model dependent – available as options.



03 - LabSat3 Media

LabSat 3 file formats

LabSat 3 uses I&Q binary data and runs the FAT32 file format. LabSat 3 files are recorded into a folder with separate 2 GB data files which will run sequentially when replayed. The folder description GPS_000 will contain several files with the name format GPS_000_000.ls3. These will automatically increment.

LabSat 2 (.ls2) and LabSat (.bin) files will need to be converted to this format to play on LabSat 3. The LabSat Scenario Converter Software is supplied on the LabSat 3 Hard Disk Drive (HDD). Please see the section 'Converting LabSat Scenarios'.

LabSat 3 SD Card

The 32 GB SD card included with the LabSat 3 system includes the following files:

- LabSat 3 sample scenarios
 - GPS_000 - Static 5 minute GPS scenario
 - GLO_001 - Static 5 minute GLO scenario
 - BDS_001 - Static 5 minute BDS scenario
- LabSat 3 quick start video
- SatGen simulation software video
- LabSat 3 quick start guide PDF

LabSat 3 1 TB Hard Disk Drive

The LabSat 3 1 TB hard disk includes the following:

- LabSat 3 scenario library description PDF
- LabSat 3 quick start video
- SatGen simulation software video
- LabSat scenario converter utility
- LabSat 3 scenario library – a worldwide selection of LabSat 3 scenario files with supporting KML and Google Earth jpeg picture files.



The LabSat 3 HDD uses USB3.0 for fast data transfer and is formatted to FAT32.

Recommended media

It is recommended to use good quality Class 10 UHS-3 SD cards or higher spec. The following list includes SD cards that have been tested with LabSat 3.

Description	LabSat Part number
SanDisk Extreme 128 GB	RLACS211
SanDisk Extreme 64 GB	RLACS210
SanDisk Extreme 32 GB	LS03SDCARD
SanDisk Ultra 8 GB	-

The LabSat HDD is the only recommended HDD to use with the LabSat 3 system. The hard drive is available as an accessory under the part number LS03HDD-1TB. For purchase information contact your local LabSat dealer or Racelogic LabSat department.

Formatting LabSat3 Media

Formatting an SD card or a HDD is important when using LabSat 3, to make sure that the card cluster size is set to an optimum level.

Cluster size is the minimum amount of data that can be written in a single operation. So, the larger the cluster size, the better the performance of the card (up to a point).

To run a format, insert the card you wish to format, (or connect the HDD).

Then select the following options:

MENU > File > Format SD > Yes , as shown below.



A full format will then be run on the inserted media, followed by a media speed test.

The media speed test is an indication if the inserted media is fast enough to be used with the LabSat 3.

If the speed test does not bring up any warnings, this means that the cards read and write speed should be fast enough for use with the LabSat 3. Note, this is not a guarantee that recording a large amount of data will be successful, as the speed test cannot check if the card is fragmented and has other files stored on it.

We would recommend that before recording a scenario, all other files are removed from the media and a format is carried out, to ensure the card is at it's optimum for use with the LabSat 3, and reduce the risk of buffer errors.

If the estimated card performance is too slow, a warning message will show on the LabSat screen. In this case, you need to use caution when using the product - e.g. If using triple constellation box, you may be able to use the card to record a single or dual constellation file without any issues, but a triple constellation file may cause buffer errors.

It is also worth noting that faster transfer rates are possible when recording to HDD than to SD card, so do consider this if recording a long scenario.



04 - LabSat3 Menu layout

File

- **Info** - Display file info for selected file.
- **Delete** – Delete selected file Yes/No.
- **Format SD/USB** – Erase and Format SD/USB Yes/No.

Constellation

- **GPS/GAL** – Tick to select GPS/Galileo constellation for recording.
- **GLONASS** – Tick to select GLONASS constellation for recording.
- **BeiDou** – Tick to select BeiDou constellation for recording.
- **2Bit** – Record with 2 bit quantisation when single constellation is selected.

Play

- **Loop** – selected file will replay continuously.
 - **Pause Time** – Defines the pause time between each replay.
- **From** – Specify a time in the scenario to replay from.
- **For** - Specify how long the scenario will replay for.

Record

- **For** - Specify how long the LabSat 3 will record for.

Setup

- **Display** – Adjust display contrast and backlight brightness.
- **RF Test** – Outputs RF test signal.
- **Power Save** – When selected, will power down display backlight and internal monitor during recording.
- **CLK REF**
 - **Internal** - As the default setting LabSat 3 will use it internal reference clock.
 - **External 10MHz** – Allows the user to connect a 10 MHz reference signal on the REF input.
- **Time** – Configure internal clock using UTC time from internal GNSS monitor or set manually.



- **LAN**

- **DHCP** – Enable/Disable DHCP.
- **IP Address** – Set the IP address assigned to LabSat 3.
- **SUBNET MASK** - Set the Subnet mask assigned to LabSat 3.
- **DEFAULT GATEWAY** - Set the default gateway for the network.

- **Digital**

- **CH1**

- **1PPS** – Record 1PPS signal from internal GNSS monitor (disable power save).
- **RS232** – Record RS232 signal.
- **CAN CH1** – Record CAN Bus channel 1.
- **DIGI** – Record state of DIGI input signal.

- **CH2**

- **1PPS** – Record 1PPS signal from internal GNSS monitor (disable power save).
- **RS232** – Record RS232 signal.
- **CAN CH2** – Record CAN Bus channel 2.
- **DIGI** – Record state of DIGI input signal.

- **CAN**

- **Record Type**

- **Digitize** – When selected the CAN data will be digitized and integrated into the .LS3 file.
- **Log File** – When selected the CAN data will be logged into a separate .txt file.

- **CH1**

- **Baud rate** – Enables the user to set the desired baud rate.
- **Silent Record** - Determines whether or not the LabSat sends an acknowledge pulse during recording.

- **CH2**

- **Baud rate** – Enables the user to set the desired baud rate.
- **Silent Record** – Determines whether or not the LabSat sends an acknowledge pulse during recording.

About – Contains information specific to the LabSat e.g. serial number & firmware version.

Exit – Return to file list.



05 - LabSat3 Record and Replay operations in detail

Replay operation

LabSat 3 uses SD card or HDD memory for storage and playback of GNSS data. It is important to note that Class 10 or higher cards must be used to sustain the transfer speeds required. Racelogic recommend SanDisk Extreme Class 10 cards for best performance.


The 1 TB USB Hard Disk Drive (HDD) supplied contains a selection of pre-recorded scenarios from around the world. These scenarios can easily be copied to the SD card for replay. The HDD supports either USB2.0 or USB3.0. For optimum data transfer performance using a PC that supports USB3.0 for file transfer from HDD to SD card is recommended.

The RF OUT connector is a 50 Ω output which can be connected directly to the antenna input of the GNSS receiver being tested. The RF OUT connector of LabSat 3 is DC blocked internally so almost any device can be connected to this port. When a file is selected for replay, the LabSat will configure constellation frequencies and digital channels automatically before starting replay. If a triple constellation file is selected for replay on a single channel LabSat, all three constellations will be displayed before replay allowing the user to select one.

During replay, pressing **OK** will show a live histogram of satellite levels detected by the internal GNSS receiver. The internal receiver currently only supports GPS and GLONASS constellations. This has no effect on the ability of LabSat 3 to record or replay BeiDou signals. When displayed, the UP/DOWN keys switch between GPS and GLONASS monitor modes. Please note that when switching between GPS and GLONASS display modes, the internal receiver will take some time to re-acquire satellite signal levels. In the case of GLONASS signals, it may take over a minute to show the satellite signal information.

LabSat 3 comes with an internal 31 dB attenuation capability. To increase the attenuation press the up arrow, this will increase the attenuation by 1 dB. The down arrow will decrease the attenuation level.



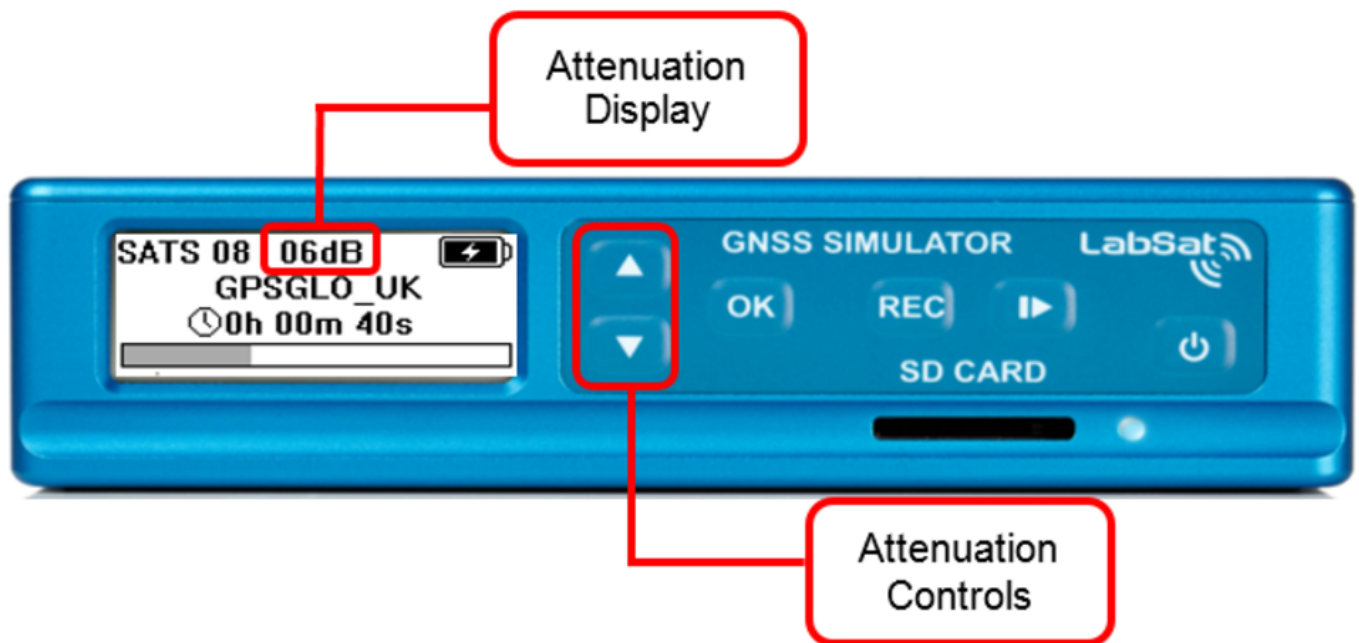

Record operation

LabSat 3 uses SD card and HDD memory for storage and playback of GNSS data. It is important to note that Class 10 or higher cards must be used to sustain the transfer speeds required. When recording two constellation types, the data rate is approximately 8.2MB (Mega Bytes) per second. To ensure that data is collected without error, the card should be able to sustain 10MB per second. Spare cards and HDDs may be purchased from Racelogic.

It is important that cards are formatted as FAT32. LabSat 3 is able to format cards and HDDs in FAT32 with the optimum configuration for high speed recording. When a card or HDD is formatted by LabSat 3, it will also carry out a performance test to determine whether or not the media can sustain the required bandwidth and inform the user if this is not the case

For record capable systems, the LabSat will be supplied with a magnetic mounting GNSS antenna. The antenna is an active device with approximately 28dB of gain. The LabSat provides a 2.85V DC bias for antenna power on the centre pin of the RF IN connector. It is also possible to use third party antennas providing they are compatible with the 2.85V bias. If connecting LabSat to an antenna which requires a higher bias voltage (e.g. 12v), the antenna bias must be supplied by the user and an appropriate DC block (such as DCB from <http://gpsnetworking.com/attenuators.asp>) must be inserted at the LabSat 3 RF IN connector to avoid damage to the LabSat.

There are a number of GNSS systems currently in operation or in a test phase. These operate on 3 main frequency bands.



These are:-

Frequency Band	Constellations
1575.42MHz	GPS L1, Galileo E1, QZSS, SBAS
1602MHz	GLONASS L1
1561.098	BeiDou B1

Depending on the model, LabSat 3 will have 1, 2 or 3 RF channels. This allows recording of 1, 2 or 3 frequency bands so, for example, a 2 constellation LabSat 3 may record the band containing GPS L1/Galileo E1 and the band containing GLONASS L1 simultaneously. Recording of the desired constellations is configured in the CONSTELLATION menu. In this menu, the user can tick up to three of the desired constellation groups (depending on version). If only one constellation is ticked, then an additional option for 2 bit will be available to allow 2 bit quantised recording for the selected constellation.

Once the constellations are configured, exit the menu and press the REC button to begin recording. A new file will be created each time recording starts. The file name used corresponds to the constellations selected. For example, if GPS and GLONASS are selected for recording, the file created will be GPSGLO_nnn where nnn is a number that increments with each new recording. Details of the LS3 file format are available on request from Racelogic.

During recording, pressing the OK button will switch the display to show satellite levels for either GPS or GLONASS satellites. In this display mode, the up and down arrow keys will toggle between GPS or GLONASS constellations. BeiDou constellation is not currently supported by the internal monitor but BeiDou B1 signals can still be recorded and replayed.

To maximise battery life during recording, LabSat 3 has a power save mode which is enabled by default in the setup menu. Power save mode recognises when running from battery power and will dim the display backlight and power-down the internal GPS/GLONASS monitor after 30 seconds of user inactivity.

If recording from passive antennas such as the Maxtenna M1516HCT-SMA GPS/GLONASS antenna, enabling the power-save mode will also provide the highest possible sensitivity by ensuring that unused modules within LabSat 3 are switched off.



06 - LabSat3 HDD File Layout

Below is a guide to how the folder layout works on LabSat 3. This example below shows the folder layout on the HDD provided with LabSat 3. The LabSat USB HDD is uses multiple folders. When folders are detected LabSat will display them in a similar fashion to a PC using the DIR indicator.

When USB media is connected LabSat 3 will scan for files and display the files/folders containing the .ls3 format. When recording to USB HDD LabSat will save scenario files to the first folder in the directory.



<DIR> indicates a folder and not a scenario. Pressing 'OK' will navigate to the next stage of the scenario directory.



Continue to navigate using 'OK' until <DIR> is no longer shown, this indicates the file is a scenario not a directory.



Pressing play will start the individual scenario replay.



07 - LabSat3 Battery

Battery operation and charging

LabSat 3 variants that include internal battery use replaceable Varta Li-Polymer battery packs. These packs are fully certified (UL, CE, UN38.3 Transport). Each pack gives around 2 hours of record time. When the LabSat 3 is powered externally, it will charge the internal battery pack if fitted and seamlessly switch over to battery operation when external power is removed. Alternatively, an external battery charger is available to order.

To remove the battery from LabSat 3, unscrew the battery plate on the rear of the device and slide the battery out.

When operating from battery power, the battery charge status will be shown in the top-right section of the display -



If external power is connected and the battery is being charged, a power symbol will be shown over the battery symbol -



The discharge temperature range for the battery is -20°C to +60°C. Therefore, if the LabSat is operating from battery power, it will power-down if the temperature falls outside this range.



The charge temperature range of the battery pack is 0°C to +45°C. Outside this temperature range, the LabSat will switch off charging of the internal battery but will continue to operate from the external power supply.

Warning - Li-Polymer Battery Pack - Risk of fire or explosion.

Do not incinerate, disassemble, short terminals, expose to temperature above 140°F/60°C.

Do not charge battery unattended, expose of batteries in fire or disassemble the batteries.

Battery fitting, removal and handling

- Replace battery with Racelogic, Part No. RLACS201 **only**. Use of another battery may present a **risk of fire, explosion or other malfunction**.
- **Caution:** The battery used in this device may present a **fire or chemical burn hazard** if mistreated. **Do not disassemble or heat above 60°C (140°F) or incinerate.**
- To remove or change the battery disconnect from mains power. Remove the holding plate marked "Battery" on the rear of the unit. Slide out the old battery and replace ensuring that the connectors on the replacement battery align with the connectors inside. Please dispose of old or used batteries promptly. Keep away from children.
- The battery should be fully charged when stored. If a battery is left depleted for a prolonged period then it is likely that the performance of the battery will degrade and may be unusable.
- **Never** incinerate nor dispose of cells in a fire.
- **Never** short circuit the battery pack. It will generate very high currents resulting in overheating of the cells, which may cause electrolyte leakage, gassing or fire.
- **Never** disassemble the cells. Disassembling cells may cause an internal short circuit in the cell, which could further result in **gassing, fire, or other problems**.
- If for any reason the battery pack becomes damaged it is possible that it may leak electrolyte. The electrolyte is harmful to the human body. If the electrolyte comes into contact with the skin, eyes or other parts of body, the electrolyte shall **be flushed immediately with fresh water. Seek immediate medical advice from a physician.**
- Cells may be damaged during shipping by shocks, or other causes. If any abnormal features of the cells are found such as: damage to a plastic envelope of the cell, deformation of the cell container, smell of electrolyte, an electrolyte leakage, or other abnormalities, the cells **should not be used**. Cells with a smell of electrolyte or leakage should be kept away from fire to avoid **ignition**.



08 - LabSat3 External reference clock input

LabSat 3 features an external reference input for synchronization to a 10 MHz clock. To use this feature, connect a 10 MHz reference signal with minimum +6 dB level to the REF IN SMA connector and ensure that the '**External 10MHz**' reference clock option is ticked in **Menu > Setup > CLK REF > External 10 MHz**.

When the external reference input is enabled, the symbol



will appear in the top right corner of the LCD.



09 - LabSat3 Digital Channels

There are 1 or 2 channels available for external digital data capture depending on the system variant and the options that have been purchased with the LabSat. Recorded digital channel data is synchronized to each sample of recorded RF data; the maximum input frequency for each channel is 1 MHz. To record 2 digital channels, at least 2 RF channels must be selected or 1 single channel with 2-bit quantisation.



The Digital menu allows CH1 or CH2 (subject to LabSat variant) to be configured to record any of the following parameters:-

Function	Description	Option or Standard
1PPS	This is the 1 Pulse Per Second output from the internal GNSS monitor and will become active once the internal GNSS monitor has a position fix. Note, that if using battery power with the power save option enabled, the GNSS monitor will power-down after approx 30 seconds into the recording and therefore not be present in the recorded data. During replay, the recorded 1PPS signal will be output on pin 2 (DIGO) of the expansion connector.	Standard
CAN	CAN 1 and CAN 2 on the expansion connector (RLACS202) will be recorded on channel 1 & 2 of the LabSat 3. See section CAN BUS for more details.	Option on Single constellation variant*
RS232	This will record an RS232 level signal input on pin 18 of the expansion connector. During replay, pin 17 of the expansion connector will output the recorded data at RS232 level. Because the RS232 signal is digitized directly, it is not necessary to configure baud rate.	Option on Single constellation variant*
DIGI	Will record the digital state of pin 3 of the expansion connector. During replay, the signal will be re-created on pin 2 (DIGO) of the expansion connector. See section EXPANSION CONNECTOR for more details.	Option on Single constellation variant*

*Contact Racelogic or your LabSat distributor to purchase upgrade options



10 - LabSat3 CAN Bus

LabSat 3 is capable of listening to, and recording data from, two separate CAN networks. Dual channel CAN Bus data recording with LabSat 3 can be achieved in two ways. Depending on the mode selected, the CAN signal will be either digitized and re-created on a raw bit level or decoded and recorded in a time-stamped text file. The CAN mode operation is selected under the menu option 'CAN' in the SETUP section. When 'digitized' mode is selected, the channel is configured in the 'Digital' menu.

DIGITIZE mode

The 'Digitize' mode records CAN data by listening to the bus and sampling the rising and falling edges of the raw signal. Timing codes are inserted into the recorded GPS data so that when the file is replayed LabSat re-creates the digitized CAN signal exactly as it appeared during recording. This mode can therefore be used to capture data along with bus-errors or data-collisions and is synchronised to the RF signal to within approximately 60 nanoseconds. One advantage of this mode is that there is no-need to configure CAN baud rate. During replay, the CAN data can be viewed with a CAN Bus analyser tool such as Vehicle-SPY or CANalyzer.

When using the digitize method the CAN data is replayed exactly as recorded, there will be no arbitration with other systems during replay. Therefore, if the CAN data is replayed into a system which is transmitting its own CAN data, LabSat will 'speak' over the top of the other CAN data. This may cause corruption of some data frames.



LOG FILE mode

Selecting the 'LOG FILE' mode of CAN recording enables data to be recorded in an easy to read text log file as shown below.

```
Labsat3 SN:00323502
DATE:12/06/2014
TIME:13:07
CAN1: 500.00K
CAN2: 500.00K
GNSS: GPS, GLO
CHAN, TIME, ID, DLC, DATA
2      0.060      360  8 0B 70 C8 35 44 60 80 A3
1      0.060      420  8 7B 46 02 84 01 00 3E 1D
2      0.062      620  8 0D 24 02 1B 81 7E 37 02
1      0.063      428  7 00 8E 00 00 37 00 20
2      0.064      200  7 01 F5 01 E2 02 00 00
```

The log file contains a short header detailing the LabSat serial number, time, date CAN Bus baud settings and GNSS settings. Each line of CAN data recorded contains the following space-delimited information:-

1. CHAN - CAN Channel that the data was received on 1 or 2.
2. TIME - Timestamp to 1 ms resolution.
3. ID - Identifier, 'x' suffix is shown for extended CAN IDs.
4. DLC - Data length code DLC, this shows the number of data bytes within the CAN frame.
5. DATA - Data section, up to 8 bytes of data as indicated by the DLC.

At the end of the log file there will be a summary of the number of CAN messages received on each channel during the recording.

The log file is recorded in the same folder as the RF data and has a .TXT file extension.



During recording, the CAN controller listens to the CAN bus and stores incoming data. LabSat 3 will transmit acknowledge pulses on the bus in response to correctly received data unless the 'Silent Record' option is ticked. The ability to transmit acknowledge pulses in 'LOG FILE' mode means that it is possible to record data directly from inertial sensors or other devices with a CAN bus output.

During the replay of data recorded in the 'LOG FILE' mode, LabSat scans through the log file, sending the CAN data at the time intervals indicated by the time-stamp. Because CAN data is transmitted using an active CAN Bus controller, LabSat will arbitrate by listening to the current bus state and only transmitting the data between other messages that may be sent from other nodes.

Filtering CAN frames

Filtering of selected CAN frames in the LOG FILE mode can be achieved by creating a file called CANFILTER.TXT in the root directory of the current SD/HDD. An example of the CANFILTER.TXT file is shown below.

```
CAN1: 500.00K
CAN2: 47.06K

1 0x3F1 0x7FF
1 0x7E8 0x7FF
2 0x10751023x 0x1FFFFFFF
1 0x10751023x 0x1FFFFFFF

-- End of configuration file
```

The first two statements automatically configure the CAN Bus baud rates:-

CAN1: 500.00K – this means 500 kbit/s

CAN2: 47.06K – this means 47.06 kbit/s



The next set of lines, configure the required Identifiers for each channel. The format is:-

<CHANNEL><IDENTIFIER><MASK>, for example 1 0x3F1 0x7FF means that channel 1 will allow recording of identifier 0x3F1. The mask value of 0x7FF is a bit-wise mask that is used by the CAN controller to allow a single identifier of a range of identifiers to be recorded. If the mask value was set to 0x7F0, then identifiers from 0x3F0 to 0x3FF would be recorded, not just 0x3F1. Up to 16 identifiers can be defined for each CAN channel.

Warning

The LabSat 3 CAN Bus interface may corrupt existing CAN Bus signals when used incorrectly. It is up to the user to ensure that the LabSat and interface are configured correctly and that they are used in a safe environment where corruption of CAN Bus signals cannot cause injury or harm. Racelogic accepts no responsibility for loss, damage or injury caused by the use of LabSat or the CAN Bus interface.

LabSat 3 Single Constellation can be upgraded to capture and replay CAN. Once upgraded the LabSat will have the capability to capture a single channel of digitized CAN data or two channels of arbitrated CAN data. LabSat 3 Dual & Triple Constellation are supplied with the CAN functionality already included.

For further information about CAN upgrades contact your local LabSat distributor.



11 - LabSat3 Digital In/Out

For recording events from an external source, LabSat 3 is equipped with a digital input (DIGI) and digital output (DIGO) which can be found on the expansion connector at the rear of the device. Digital input is pulled up externally to 5 V. Digital out is a 5 V level output. To enable the digital input for recording, go to **Menu > Setup > Digital > CH1** and then enable the tick against '**Digi**' in the signal list. Then, during recording, LabSat 3 will also record the state of DIGI (pin3 of the expansion connector). During replay, the DIGO pin will output the recorded DIGI signal states.



12 - LabSat3 Remote control

To enable LabSat 3 and LabSat 3 Wideband to be used for applications that require automated or remote control functionality, an application programme interface (API) is available together with a manual for communication via Telnet over IP.

- The LabSat 3 and LabSat 3 Wideband API is a Microsoft .NET API to allow functions of a LabSat 3 or LabSat 3 Wideband connected via LAN to be accessed programmatically.
- LabSat 3 and LabSat 3 Wideband are equipped with an Ethernet interface to allow remote control over a Local Area Network (LAN). Remote control is accomplished using simple text based commands through the Telnet protocol.


Please contact your local LabSat distributor or [raise a support ticket](#) for the LabSat remote control information pack.



13 - LabSat3 Converting LabSat scenarios

LabSat uses a binary Intermediate Frequency to down convert GPS RF data into a binary file, whereas LabSat 2 & 3 store GNSS RF data as an I & Q binary file. This means that existing LabSat scenarios cannot be run natively on a LabSat 2 or vice versa. The LabSat scenario converter software included on the LabSat 3 HDD will convert LabSat, LabSat 2 and LabSat 3 files to each other's format. This conversion utility will allow LabSat users to perform a one-time conversion of files (Please note that it's only possible to convert GNSS data files. Files that contain external data such as CAN bus or serial data cannot be converted).

The operation of the conversion utility is detailed below:-

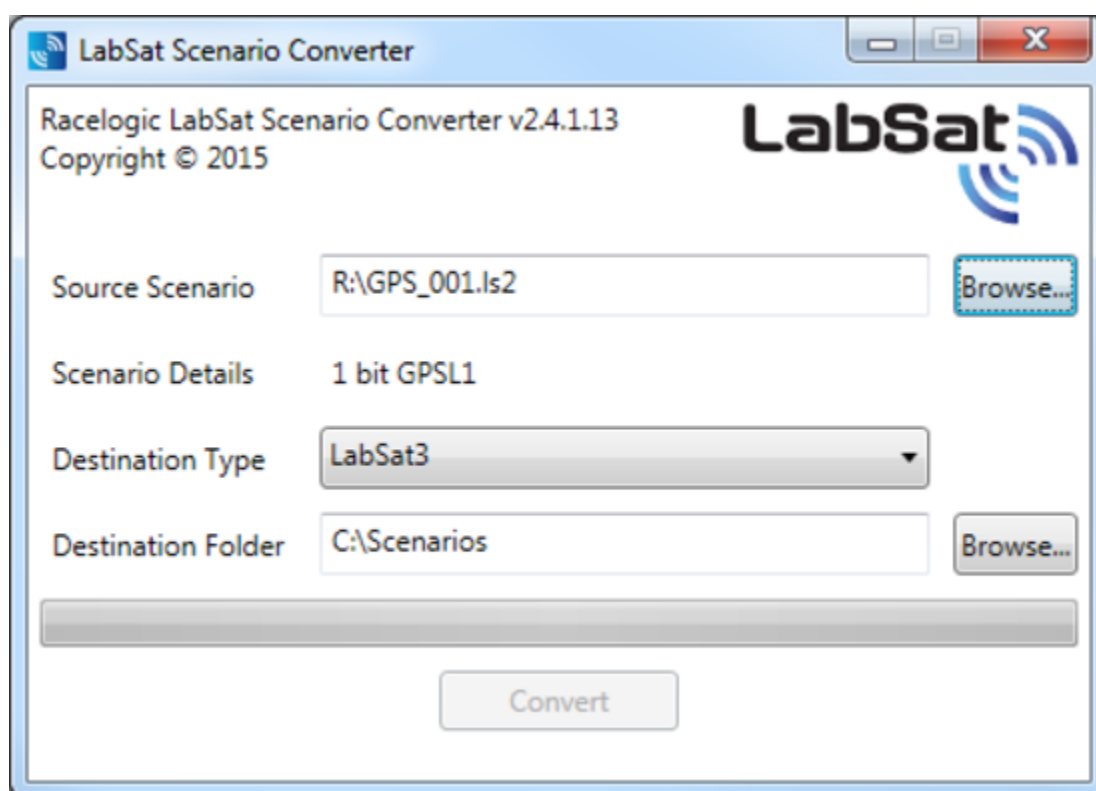

Load the file to be converted into the 'Source Scenario' section using the 'Browse' button or manually type the file location. When the file is loaded the scenario information will be displayed in the 'Scenario Details' section.

The software will automatically detect the file extension of the source scenario so the 'Destination Type' will only display the alternate two LabSat variants. Select one of the remaining LabSat variants to convert the file to.

Choose a suitable file location for the converted scenario by using the 'Browse' button or manually type the desired location into the 'Destination Scenario' box.

LabSat 3 file format requires a folder for the data files. So when converting to LabSat 2 (*.ls2) or LabSat (*.bin) formats please select the first file within the LabSat 3 scenario folder for conversion. The software will automatically convert all the files in the folder.

Note: When moving LabSat 3 scenarios between media, the entire scenario folder must be moved not just the individual .ls3 files, no other files can be stored in the scenario folder.



14 - LabSat3 SatGen Software

Below is a short Video introducing the capabilities of SatGen software.

Media, iframe, embed and object tags are not supported inside of a PDF.

SatGen software is a powerful tool for defining and creating RF playback scenario files for use with the LabSat Simulator. For many applications, LabSat 3 can record and playback real world, live sky data, but there may be times when you need a more controlled, user definable signal. When this is the case, SatGen provides all of the tools necessary to create a predictable, stable and accurate RF output from LabSat. SatGen has the distinct advantage of allowing for the creation of scenarios with any dynamics, location, date or time.




Why use SatGen software?

You might be based in Europe, but your GPS devices will be deployed throughout the world. With SatGen you can create a test scenario based on a user-generated trajectory file for virtually any location, including hostile areas for which live-sky field testing might be impossible. This allows you to verify that your GPS equipment design performs as required, in a variety of locations that may be geographically remote from your facility. It also means the same scenario can be replayed repeatedly to see how the device under test (DUT) performs.

Of course, LabSat 3 can record and replay live data, but creating an artificial scenario allows you to precisely control the data content, and create a 'gold standard' file for carrying out true comparisons between receivers. From your bench you can try different acceleration levels, crossing different time zones, the equator, leap second roll-overs and many hard to replicate tests.

Artificial scenario files can easily be created from a static position, draw a route, import a file (NMEA, Google.kml, and VBOX.vbo) and user defined instructions with inclusive pre-defined examples.



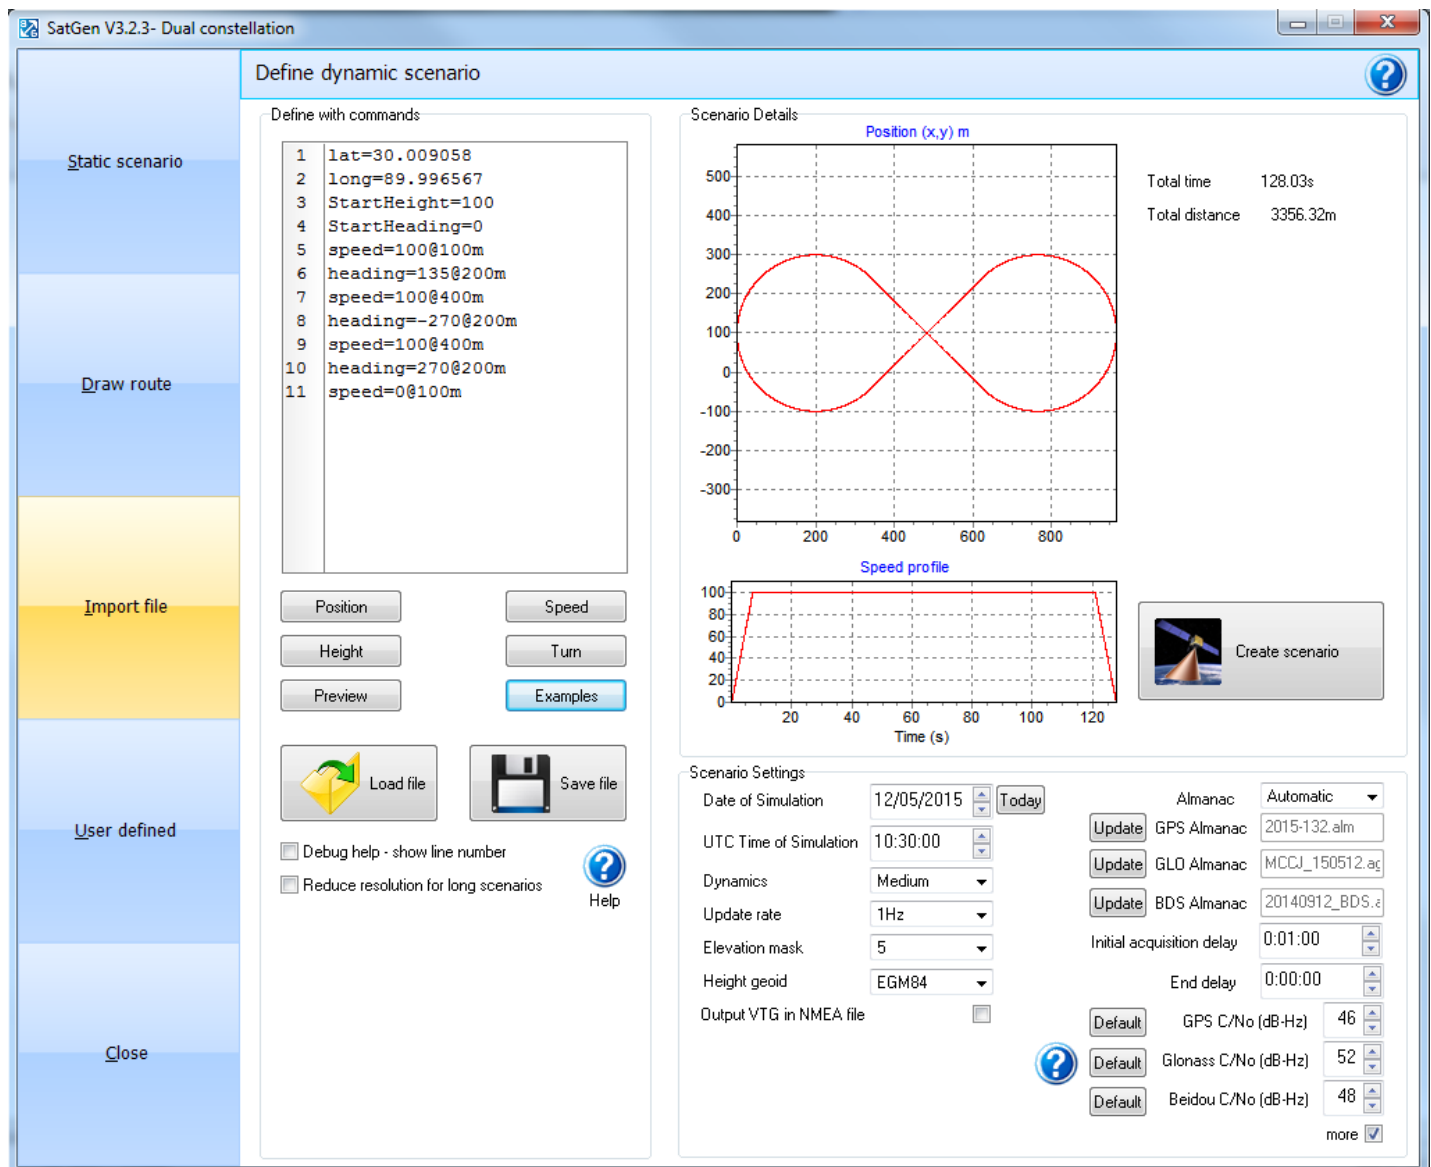

There are three versions of SatGen software available to suit a range of testing requirements. These are:

RLSSGSW03-1 SatGen v3 Single Constellation

Create single constellation scenario files for GPS L1, GLONASS L1 or BeiDou B1.

RLSSGSW03-2 SatGen v3 Dual Constellation

Create single or dual constellation scenario files for GPS L1, GLONASS L1 or BeiDou B1.



RLLSSGSW03-3 SatGen v3 Triple Constellation

Create single, dual or triple constellation scenario files for GPS L1, GLONASS L1 or BeiDou B1.

SatGen simulation software can create RF files for 'LabSat' 1 bit and 'LabSat 2 or 3' 2 bit. The RF data output can be created in static or dynamic modes: User configurable time, date and duration for static scenario creation. SatGen v3 dynamic scenario creation with draw a route, file upload and user defined command options.



15 - LabSat3 Troubleshooting


Restart

- Should you need to restart the LabSat 3 unit for any reason please hold down the power button continuously for at least 30 seconds. Release the button and then press again briefly to switch device on.

Trouble Locking onto Satellites

If the GNSS engine under test is having trouble locking onto satellites when replaying recorded data then please follow the checklist below for typical solutions:

- During recording of LabSat data, ensure that the antenna is placed in a position where it has an unobstructed view of the sky. (See 'GNSS Antenna Placement' below)
- Check the antenna connection with the LabSat; any small amounts of dirt in the socket can cause a significant reduction in signal strength. Also check the cable for any damage.
- If possible try another known working antenna, to confirm antenna functionality.
- Perform a Cold Start of the device under test after each start of the data replay. This is because a GNSS receiver will normally download and store almanac information to help it re-acquire satellite signals from power up. Therefore, when a recorded GNSS test signal is replayed, it is possible that any almanac data previously stored in the GNSS engine will cause it to look for the wrong satellite signals.

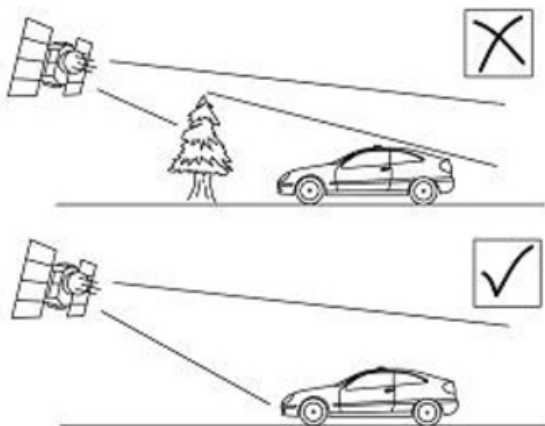

Please also note that when using any GNSS equipment, a clear view of the sky, without physical obscuration, is important. Objects in the surrounding area such as tall buildings or trees can block the GNSS signal causing a reduction in the number of satellites being tracked, or introducing reflected signals that can decrease the accuracy of the system. Note that clouds and other atmospheric conditions do not affect the LabSat 3 performance.



GNSS antennae require a ground plane to operate correctly. This helps to reduce unwanted reflections of the GNSS signals caused by nearby objects, and usually the metal roof of a vehicle performs this function. However, if a test requires an antenna to be placed either off the vehicle, or on a vehicle that does not have a metallic roof, a special *ground plane* antenna must be used. This has an internal ground plane and can operate perfectly without the need for mounting on a metal surface. Ground plane antennas are available from your LabSat distributor.

Optimising Data Transfer Speeds

- LabSat 3 uses a high speed SD card to record and replay RF data. If you wish to transfer LabSat scenarios from and to the LabSat 3 Hard Disk Drive (HDD) it is recommend to use a PC that supports USB3.0. The LabSat 3 HDD supports USB3.0 connection and to get maximum transfer speed then the SD card reader should also have USB3.0 capability.



16 - LabSat3 Technical Properties

[LabSat3 EC Declaration of Conformity](#)

[LabSat3 Label](#)

[LabSat3 PIN OUTS](#)

[LabSat3 Replacement parts and optional accessories](#)

[LabSat3 RoHS Declaration](#)

[LabSat3 Technical specification](#)

[LabSat3 Upgrading firmware](#)



LabSat3 EC Declaration of Conformity





Declaration of Conformity

RLLS03

We Racelogic Ltd
of Unit 10 Swan Business Centre
 Osier Way
 Buckingham
 Buckinghamshire
 MK18 1TB
 United Kingdom

hereby declare that the following products:

Model Name LABSAT 3 GPS SIMULATOR
Model Numbers RLLS03-1P, RLLS03-1RP, RLLS03-2P, RLLS03-2RP,
 RLLS03-3P & RLLS03-3RP

conform to the essential requirements of the following EC Directives and FCC Regulations:

EMC Directive 2004/108/EC
FCC CFR 47: Part 15.8: 2012

This declaration is based on compliance of the product with the following standards:

EN61326-1:2006
EN55011:2009 + A1:2010
EN61000-3-2:2006 + A2:2009
EN61000-3-3:2008
EN61000-4-2:2009
EN61000-4-3:2006 + A1:2008 + A2:2010
EN61000-4-4:2004 + A1:2010
EN61000-4-5:2006
EN61000-4-6:2009
EN61000-4-11:2004

Signed by:



GRAHAM MACKIE

Name: Graham Mackie


Position: CEO

Date: 18th July 2013




LabSat3 Label

The LabSat 3 label is located on the left side toward the rear. Please quote your serial number in all correspondence.

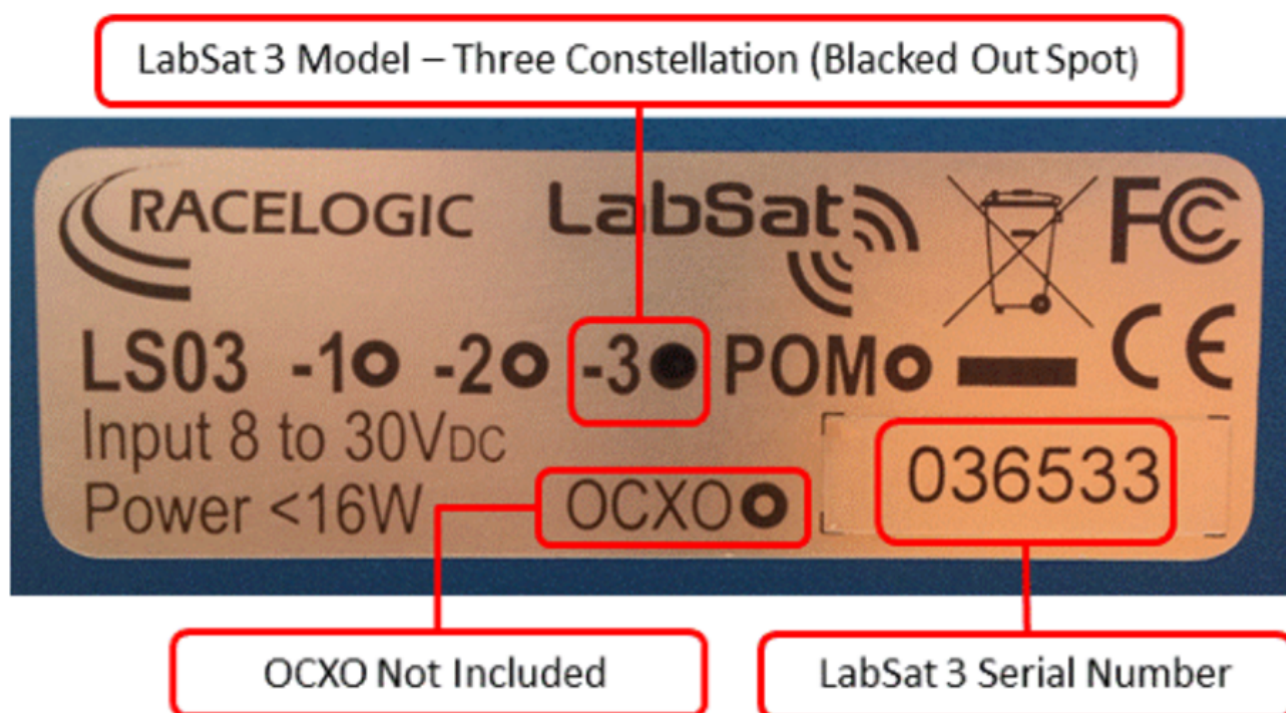

LabSat3 PIN OUTS

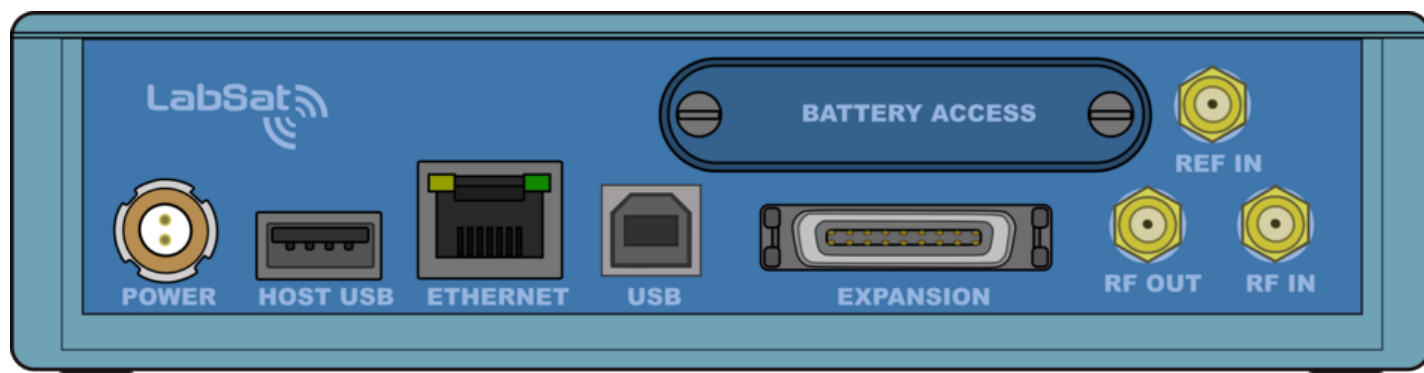

Rear View of LabSat3



Connector 1 - POWER (Lemo 2 PIN)



PIN	I/O	Function	Range
1	I	Power+	8 - 30 V
2	I	Ground	0 V




SMA Connectors - RF OUT, RF IN and REF



PIN	Name	Function	Range
Center	RF IN	RF Signal including 3 V DC bias for active antenna	Bias output 2.8 - 3 V
	RF OUT	RF Signal Output DC Blocked	
	REF	10 MHz Reference clock.	10.000 MHz +6 dB
Chassis	-	Ground	



Expansion port 36 way MDR type connector

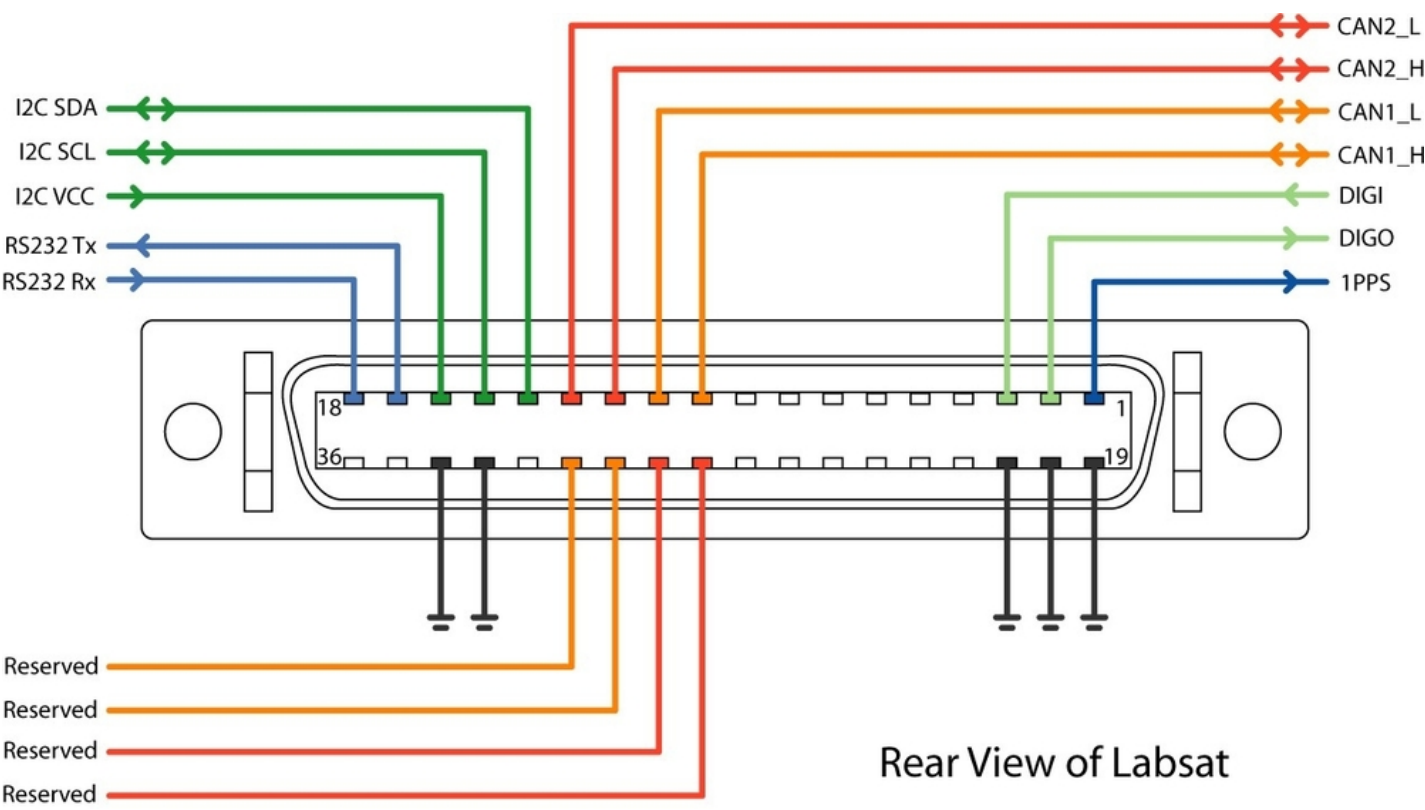

The 'EXPANSION' connector on the rear of LabSat 3 gives access to a number of signals including CAN Bus, RS232, 1PPS and Digital input/output. Accessory RLACS202 is used to provide user signal access for integration into the users test system. Pin functions are as follows:-

Number	Name	I/O	Function
1	1PPS	O	Signal from Internal GNSS monitor. Becomes active when monitor is locked. 5 V Level. 25 mA
2	DIGO	O	User digital output. 5 V Level. 25 mA max
3	DIGI	I	User digital input. Up to 12 V input level. Detection threshold=2.5 V




Number	Name	I/O	Function
4	-	-	-
5	-	-	-
6	-	-	-
7	-	-	-
8	-	-	-
9	-	-	-
10	CAN 1 H	I/O	CAN Bus High Channel 1 – Standard ISO 11898 voltage signal levels for CAN
11	CAN 1 L	I/O	CAN Bus Low Channel 1 – Standard ISO 11898 voltage signal levels for CAN
12	CAN 2 H	I/O	CAN Bus High Channel 2 – Standard ISO 11898 voltage signal levels for CAN
13	CAN 2 L	I/O	CAN Bus Low Channel 2 – Standard ISO 11898 voltage signal levels for CAN
14	I2C SDA	I/O	I2C Bus Data – Reserved for future use
15	I2C SCL	I/O	I2C Bus Data – Reserved for future use
16	I2C VCC	I/O	I2C Bus Data – Reserved for future use
17	RS232 Tx	O	RS232 data output. NMEA Data from GNSS monitor or User RS232 data if enabled. Standard RS232 Level




Number	Name	I/O	Function
18	RS232 Rx	I	User RS232 data which is recorded if RS232 is enabled in Digital configuration menu. Standard RS232 Level
19	Ground	O	Ground Connection
20	Ground	O	Ground Connection
21	Ground	O	Ground Connection
22	-	-	-
23	-	-	-
24	-	-	-
25	-	-	-
26	-	-	-
27	-	-	-
28	IO_0	I/O	Reserved
29	IO_1	I/O	Reserved
30	IO_2	I/O	Reserved
31	IO_3	I/O	Reserved
32	-	-	-
33	Ground	O	Ground Connection
34	Ground	O	Ground Connection
35	Power	O	Connected to input power – Max 250 mA
36	Power	O	Connected to input power – Max 250 mA




Expansion Connector (RLACS202)

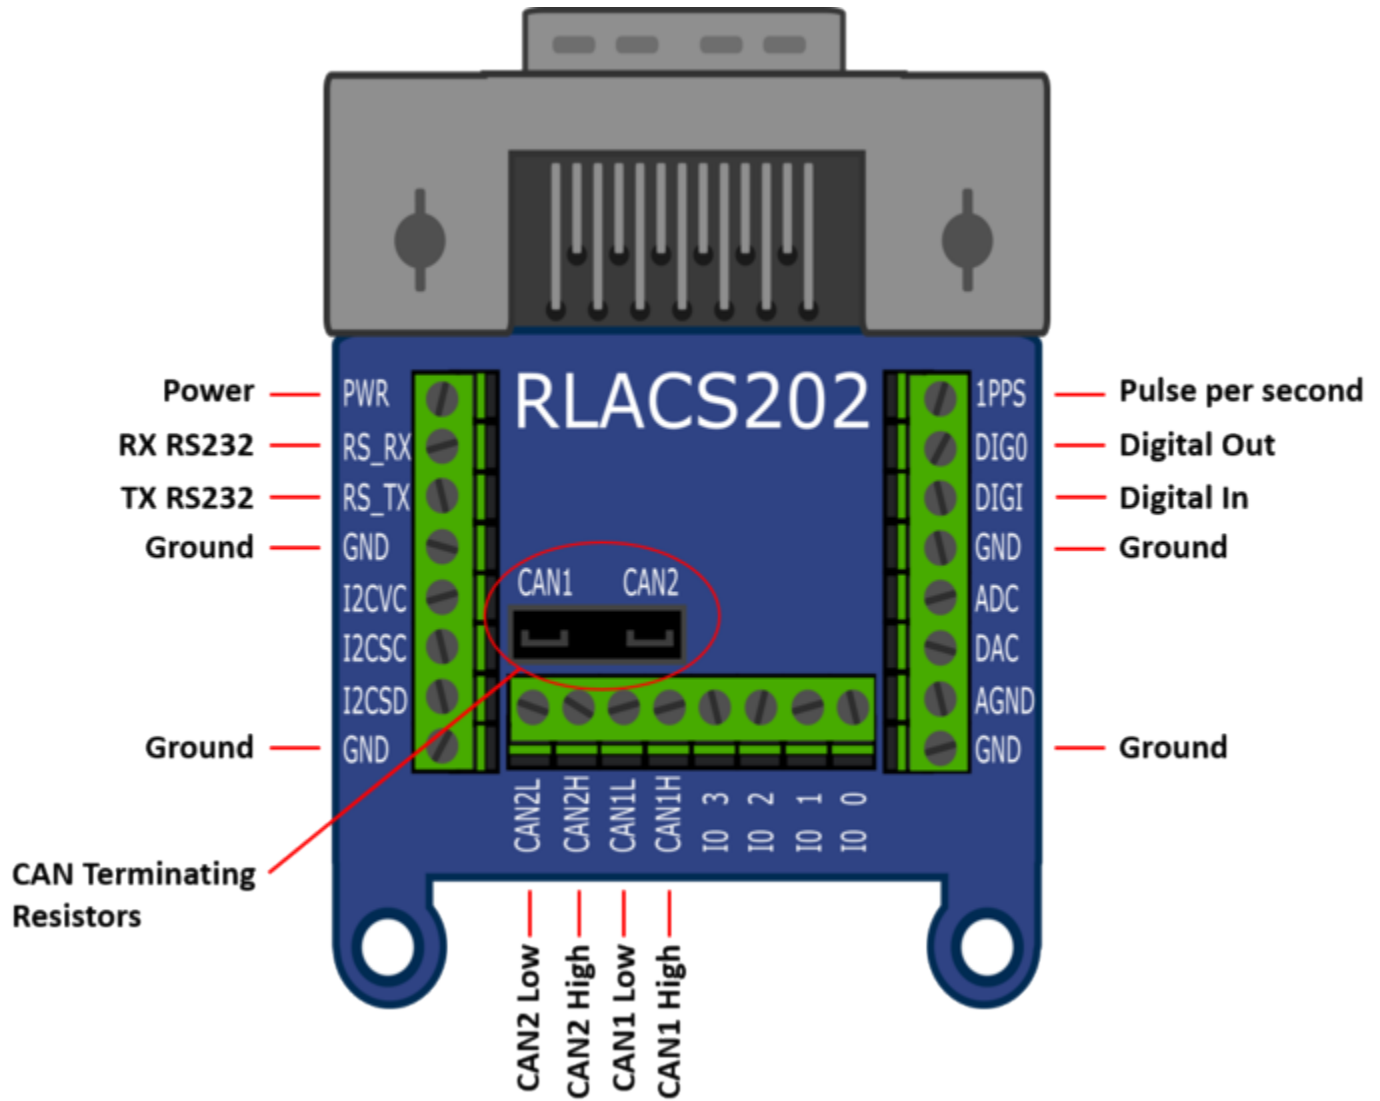

Locking Expansion Connector (RLACS261)

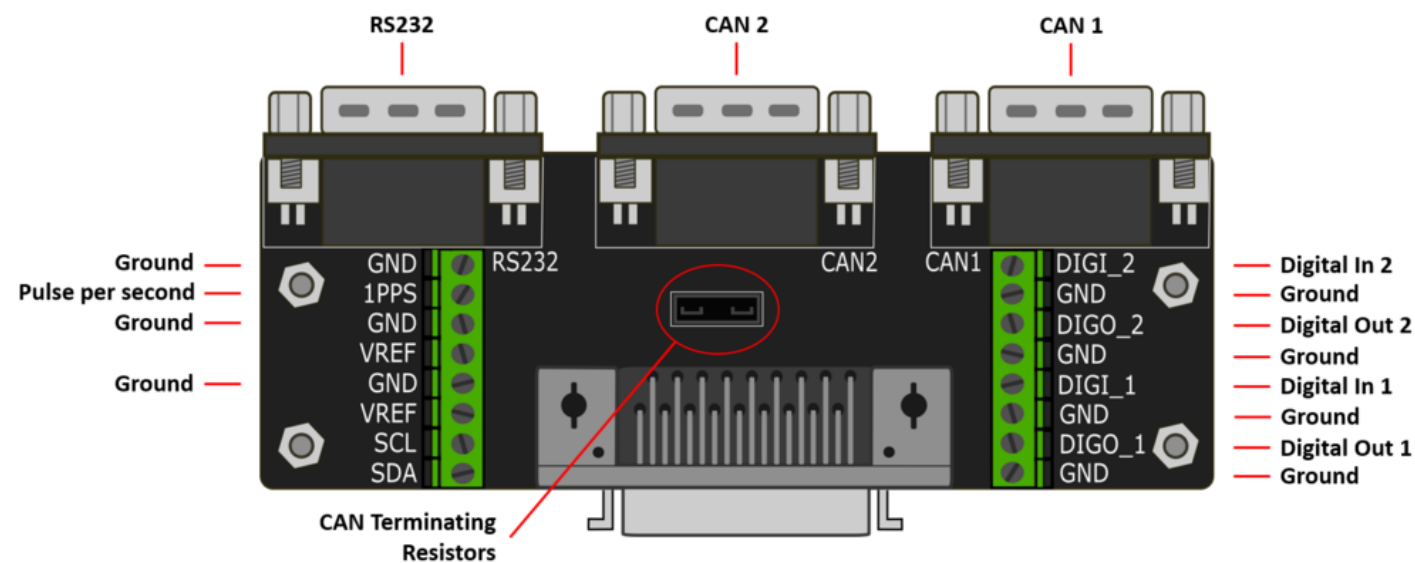


Connector 1 - RS232 (9 PIN SUB-D)

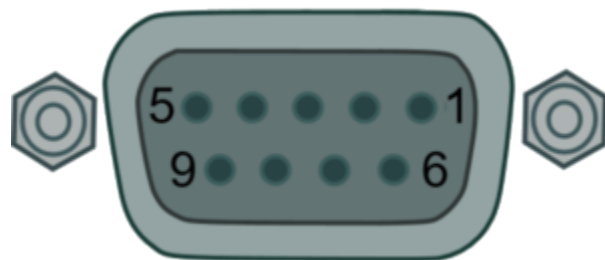

PIN	I/O	Function	Range
2	O	Tx	RS232 data output. NMEA Data from GNSS monitor or User RS232 data if enabled. Standard RS232 Level
3	I	Rx	User RS232 data which is recorded if RS232 is enabled in Digital configuration menu. Standard RS232 Level
5	O	Ground	-



Connectors 2 / 3 - CAN 1 / CAN 2 (9 PIN SUB-D)

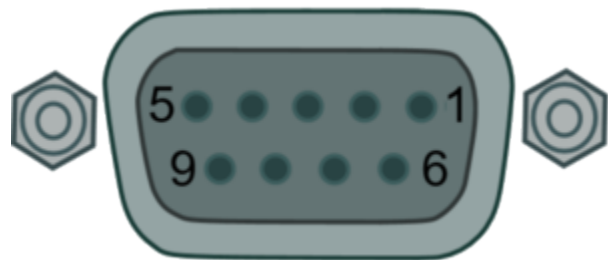

PIN	I/O	Function	Range
2	I/O	CAN Low	CAN Bus Low Channel 1/ 2 – Standard ISO 11898 voltage signal levels for CAN
7	I/O	CAN High	CAN Bus High Channel 1/ 2 – Standard ISO 11898 voltage signal levels for CAN



LabSat3 Replacement parts and optional accessories

LabSat 3 Standard Inventory

Description	Product Code
LabSat 3 unit	LS03
LabSat 3 carry case	RLACS197
LabSat scenario 1 TB hard disk drive	LS03HDD-1TB
VBOX mains adapter	RLVBACS020
32GB SDHC Card	RLACS199
USB3.0 SD Card reader	RLACS204
2 way Lemo to 12 V cigar lighter lead – 2 m	RLCAB010L
GNSS quad constellation magnetic mount antenna	RLACS198
SMA-SMA cable – 1 m	RLCAB071-1
SMA plug to MCX plug cable – 1 m	RLCAB082-1
SMA plug to MMCX plug cable – 1 m	RLCAB083-1
SMA plug to TNC plug cable – 1 m	RLCAB084-1
LabSat 3 battery	RLACS201
LabSat 3 expansion connector adapter	RLACS202
LabSat 3 cable identification sheet	LS03-CABIDEN



Optional accessories

Description	Product Code
Locking Expansion Connector	RLACS261
SDHC extreme memory card - 32 GB	LS03SDCARD
SDHC extreme memory card - 64 GB	RLACS210
SDHC extreme memory card - 128 GB	RLACS211
Active GPS antenna (Recording only)	RLACS205
Passive GPS/GLONASS antenna	RLACS206
USB3.0 dual slot card reader	RLACS204
1 TB scenario hard drive (HDD)	LS03HDD-1TB
Battery charger	RLACS200
LabSat 3 battery	RLACS201

Please contact your local distributor or Racelogic for pricing and availability.





LabSat3 RoHS Declaration



RoHS Declaration of Conformity

We **Racelogic Ltd**

of **Unit 10 Swan Business Centre
Osier Way
Buckingham
Buckinghamshire
MK18 1TB
United Kingdom**

hereby declare that, to our best knowledge and belief based on information provided by our suppliers, all Racelogic products conform to the requirements of EU Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS)

Signed by:

A handwritten signature in black ink, appearing to be "G. Mackie", is written over a horizontal dotted line.

Name: **Graham Mackie**

Position: **CEO**



LabSat3 Technical specification

LabSat 3 Technical Specification

Constellation	GPS, Galileo, SBAS, QZSS, GLONASS or BeiDou
Output Signal Level	Adjustable from -73 dBm to -103 dBm
RF Constellations	• Single Constellation: 1 • Dual Constellation: 2 • Triple Constellation: 3
RF Constellation	1575.4/1602.00/1561.098/MHz
Centre Frequency	GPS&GALILEO/GLONASS/Beidou
Number of Satellites Observed	All in view
Sampling frequency	16.368 MHz
Bandwidth	9.66 MHz
Quantisation	• Single Constellation: 1 constellation at 1-bit I&Q or at 2-bit I&Q • Dual Constellation: 2 constellations at 1-bit I&Q or 1 constellation at 2-bit I&Q • Triple Constellation: 2/3 constellations at 1-bit I&Q or 1 constellation at 2-bit I&Q
Data Format	I & Q
User Control	6 Button Membrane Keypad





Display	Backlit LCD Dotmatrix
Additional Logging	• Single Constellation: 1 channel Digitized CAN, RS232 or Digital or 2 channels of log file CAN (licence upgrade) • Dual Constellation: 2 channels of CAN, RS232, Digital or 2 channels of log file CAN + 1/2 channels of digital (RS232/Digi) • Triple Constellation: 2 channels of CAN, RS232, Digital or 2 channels of log file CAN + 1/2 channels of digital (RS232/Digi)
Removable Battery Pack	• Single Constellation: Record & Replay version only • Dual and Triple Constellation: Both versions
Battery Type	Varta Easypack Li_Polymer 2260 mAh
Media Storage Included	32 GB SD Card & 1 TB USB HDD
SD Card Media	Class 10 max size 128 GB (FAT32)
Active Antenna Voltage Supply	2.80 – 3.0 Volts
Reference Oscillator	16.368 MHz Temperature controlled +/- 2.5 ppm or OCXO option +/- 0.3 ppm
Operating Voltage	8 V to 30 V DC
Power Consumption	Power <16 W
Size	167 mm x 128 mm x 43 mm
Weight	960 g with battery (910 g without battery)
Operating Temperature	-20°C to +60°C Note: Battery will not charge below 0°C or above +45°C (charger shuts down outside this range). Unit will shut down outside operating temperature range.
Storage Temperature	-20°C to +60°C Note: Battery will discharge whilst in storage and discharge rate will increase at higher storage temperatures.



LabSat 3 dimensions

The LabSat 3 dimensions in millimetres.



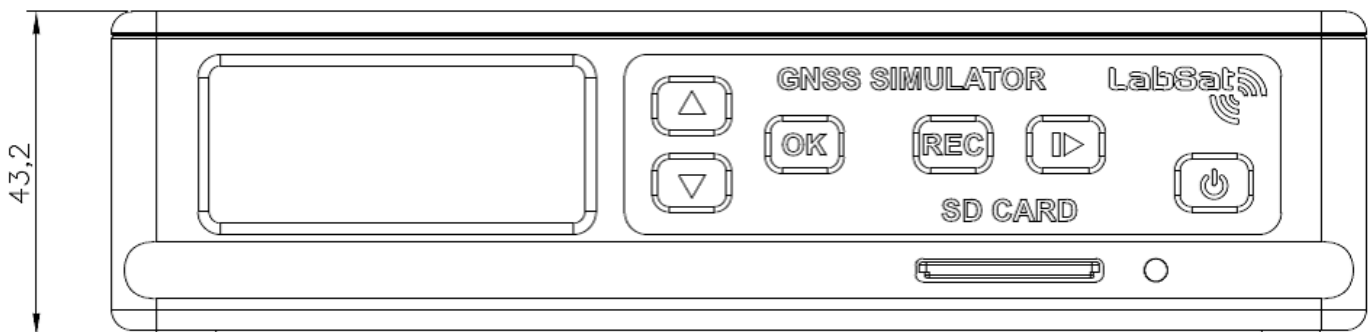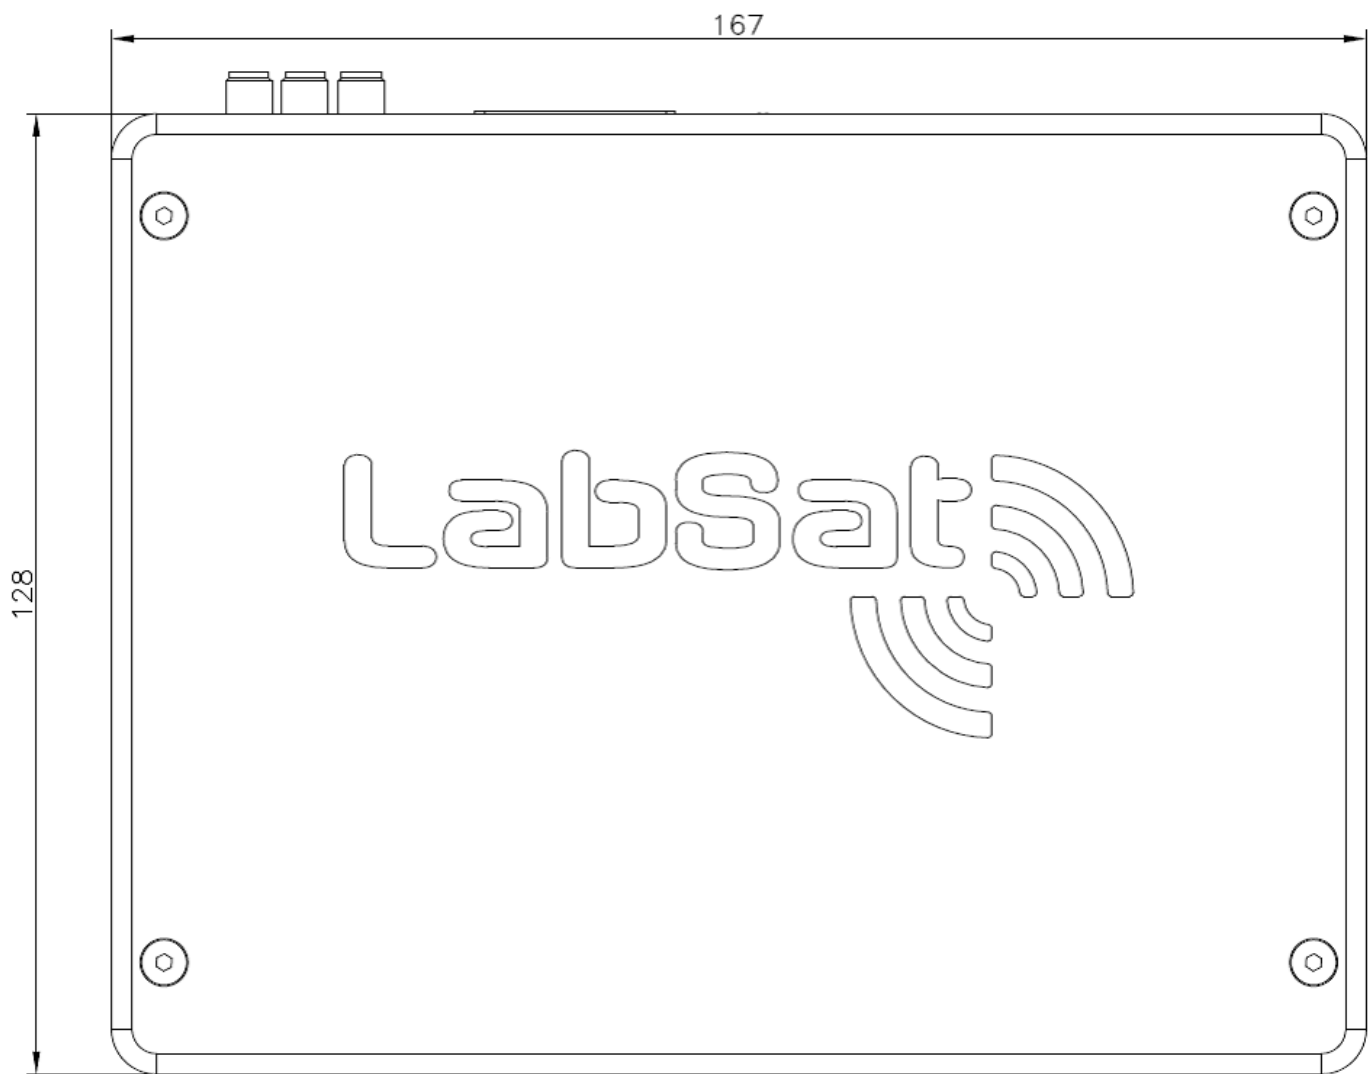

LabSat3 Upgrading firmware

Upgrading LabSat 3 and LabSat 3 Wideband firmware

Occasionally Racelogic releases new versions of firmware for LabSat 3 and LabSat 3 Wideband, often to introduce new features. New firmware can be loaded into the LabSat via the SD card.

The latest firmware upgrade file for LabSat 3 and LabSat 3 Wideband is available on the LabSat website in 'Customer Area' section.

www.labsat.co.uk/firmware

If you need the latest file, download it from the website and copy it to your computer.

How to upgrade the firmware

- Copy the downloaded firmware file onto the root of the SD card.
- Power the LabSat and wait until the box has finished initialisation.
- Insert the SD card containing the upgrade file.
- Once the upgrade is complete the LabSat 3 or LabSat 3 Wideband will return to the file screen.
- Power cycle the LabSat before resuming normal operation.

When the upgrade has been completed the upgrade file will be erased from the SD card. If the upgrade fails for any reason, the upgrade file will remain on the SD card and the LabSat 3 or LabSat 3 Wideband retains the previous version of firmware.

To confirm the LabSat 3 or LabSat 3 Wideband has upgraded, navigate to the 'About' section of the menu, this will display the current version of firmware the LabSat 3 or LabSat 3 Wideband is running.

If you have any questions regarding the LabSat 3 or LabSat 3 Wideband firmware upgrade procedure, please do not hesitate to [contact our support team](#).

