

Keysight Technologies

CX3300 Current Waveform Analyzer

Quick Operation Guide

How to set the bandwidth limit

1. Click on the Channel summary to open the Channel mini dialog box.
2. Click on the “□” at the upper right of the window to open the Setting dialog box.
3. Select “ON”.
4. Set the bandwidth limit.

