

Specifications

Working Radius:	1 m - 400 m (3 ft - 1300 ft)
	(Laser dependent):
Laser Detection Height:	102 mm (4")
Numeric Readout Height:	76 mm (3")
Accuracy (Dead band):	
Fine	1.0 mm 0.05 in 1/16 in
Medium	5.0 mm 0.20 in 1/4 in
Calibration	0.1 mm 0.01 in 1/64 in
Reception Angle:	± 45° minimum
Detectable Spectrum:	610 nm ... 900 nm
Beeper Volumes:	Loud = 100+ dBA
	Low = 65 dBA
Power Supply:	2 x 1.5 Volt "AA" batteries
Battery Life:	70+ hours
Automatic Shut Off:	30 min
Environmental:	Waterproof, Dustproof to IP67
Weight without clamp:	371 g (13.1 oz.)
Dimensions without clamp:	168.0 x 76.0 x 36.0 mm
	(6.6" x 3.0" x 1.4")
Operating Temperature:	-20°C...+60°C (-4°F...+140°F)
Storage Temperature:	-40°C...+70°C (-40°F...+158°F)

*Specifications subject to change without notice.

Warranty

Spectra Precision LLC warrants the HL450 to be free of defects in material and workmanship for a period of three years. Spectra Precision LLC or its authorized service center will repair or replace, at its option, any defective part, or the entire product, for which notice has been given during the warranty period. If required, travel and per diem expenses to and from the place where repairs are made will be charged to the customer at the prevailing rates. Customers should send the product to Spectra Precision LLC or the nearest authorized service center for warranty repairs or exchange, freight prepaid. Any evidence of negligent, abnormal use, accident, or any attempt to repair the product by other than factory-authorized personnel using Spectra Precision LLC certified or recommended parts, automatically voids the warranty. The foregoing states the entire liability of Spectra Precision LLC regarding the purchase and use of its equipment. Spectra Precision LLC will not be held responsible for any consequential loss or damage of any kind. This warranty is in lieu of all other warranties, except as set forth above, including any implied warranty merchantability of fitness for a particular purpose, are hereby disclaimed. This warranty is in lieu of all other warranties, expressed or implied.

Protecting the Environment

The unit, accessories and packaging ought to be recycled. All plastic parts are marked for recycling according to material type.



Do not throw used batteries into the garbage, water or fire. Remove them in compliance with environmental requirements.




Spectra Precision LLC
3265 Logistics Lane, Suite 200
Dayton, Ohio 45377 U.S.A.
Telephone: +1-888-527-3771

Spectra Precision (Kaiserslautern) GmbH
Am Sportplatz 5
67661 Kaiserslautern, Germany
Telephone: +49-6301-32213

www.spectraprecision.com




© 2023, Spectra Precision LLC. All rights reserved.
Reorder PN 1277-3965D (05/23)

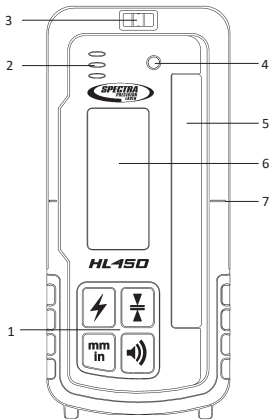

Front view

1. Keypad - Power, Accuracy, Units & Volume switches.
2. Beeper output - Fast, solid & slow audible signal.
3. Bubble Vial - aids in keeping HL450 level.
4. Anti-strobe sensor - Reduces false indication from strobe lights.
5. SuperCell Reception Window - 4.0 in / 102 mm of height.
6. Front LCD - Displays elevation, settings and status.
7. On-grade Mark - Aligned with laser center on-grade reading.

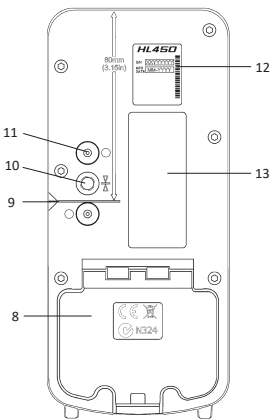

Rear view

8. Battery Door & Latch for two "AA" batteries.
9. Marking Notch (3.15 in / 80.0 mm from top).
10. Captive Screw Thread
11. Clamp Guides - Dimples align rod clamp.
12. Serial Number / ID Label.
13. Rear LCD - repeats indications of front LCD.

EMC Declaration of Conformity

This receiver has been tested and found to comply with the limits for a Class B digital device for radio noise for digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communication, and is pursuant to part 15 of the Federal Communication Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This receiver generates radio frequency. If it's not used in accordance with the instructions, it may cause harmful interference to radio or television reception. Such interference can be determined by turning the receiver off and on. You are encouraged to try eliminating the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the laser and the receiver.


For more information, consult your dealer or an experience radio/television technician.

CAUTION: Changes or modifications to the receiver that are not expressly approved by Spectra Precision LLC could void authority to use the equipment.

Declaration of Conformity


Application of Council Directive(s):	89/336/EEC
Manufacturer's Name:	Spectra Precision (USA) LLC
Manufacturer's Address:	3333 WarrensvilleRd. Unit 200 Lisle, IL 60532 U.S.A.
European Representative Address:	Spectra Precision (Kaiserslautern) GmbH Am Sportplatz 5 67661 Kaiserslautern, Germany
Model Number:	HL450
Conformance to Directive(s):	EC Directive 89/336/EEC using EN55022 and EN50082-1
Equipment Type/Environment:	ITE/residential, commercial & light industrial
Product Standards:	Product meets the limit B and methods of EN55022 Product meets the levels and methods of IEC 801-2, 8 kV air, 4 kV contact IEC 801-3, 3 V/m 26 to 1000 MHz 80%, @ 1 kHz

 Installing the Batteries




1. Open the battery door using a coin or similar pry device to release the battery door tab.
2. Insert two AA batteries noting the plus (+) and minus (-) diagrams inside the battery housing.
3. Close the battery door. Push down until it "clicks" into the locked position.

Battery Status

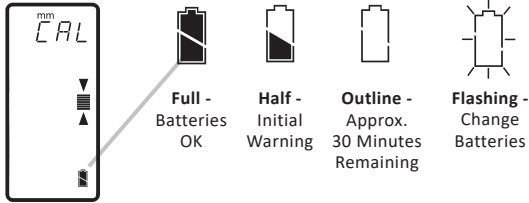

Rod Clamp

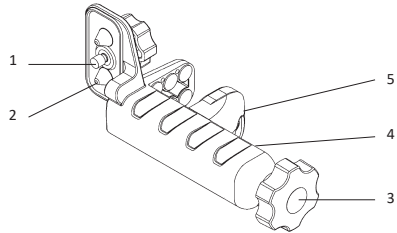


1. Captive Rod Clamp Screw - attaches to the back of detector.
2. Alignment Points (2) - help secure and align rod clamp.
3. Clamping Screw Knob - secures clamp to rods by moving the traveling jaw. Clockwise tightens; Counterclockwise loosens.
4. Reference Bar - top of bar is aligned with on-grade.
5. Traveling Jaw - moving jaw grips tightly to rods.

Action


Display

Remarks

Turn power ON/OFF

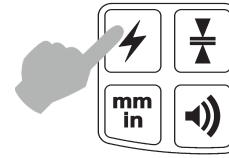

Press to turn power ON. Press and hold for 2 seconds to turn power OFF.

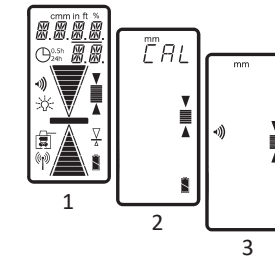


Initialization:


1. Test of LCD and beeper
2. CAL: Calibration (3 sec.)
3. Unit is ready for use.

(Do not power up the unit in a laser beam or strobe. If detected, the unit will display "E200" and revert to the previous calibration.)

Select accuracy

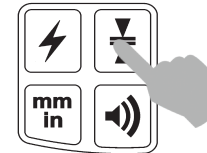


Press once to display current setting; push again to scroll through options.

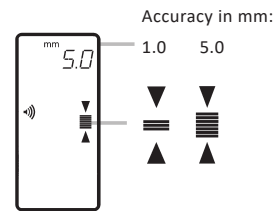


The selected unit of measure determines the displayed deadband (accuracy).

The current accuracy is stored in memory and will be retained when the unit is turned off or when batteries are replaced.

Select beeper volume

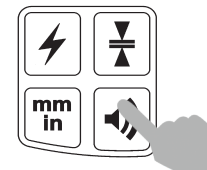


Press once to change current setting (A beep confirms the selected volume.)

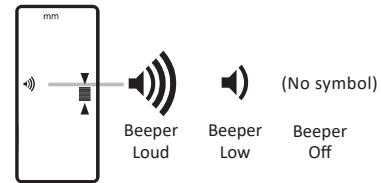


The current beeper volume is stored in memory and will be retained when the unit is turned off or when batteries are replaced.

Select units of measure

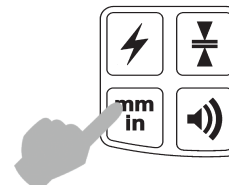

Press once to display current setting, additional pushes to scroll through options.

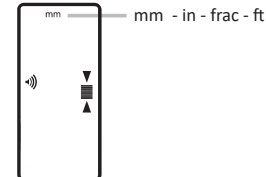

The current unit of measure is stored in memory and will be retained when the unit is turned off or when batteries are replaced.