

Keysight Technologies CX3300 Series Device Current Waveform Analyzer

CX3322A 2-Channel Model
CX3324A 4-Channel Model

Notices

Copyright Notice

© Keysight Technologies 2016, 2018

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

Manual Part Number

CX3300-90010

Edition

Edition 1, June 2016

Edition 2, September 2016

Edition 3, April 2018

Printed in:

Printed in Malaysia

Published by:

Keysight Technologies International Japan
G.K.

9-1, Takakura-cho, Hachioji-shi, Tokyo
192-0033 Japan

Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://www.keysight.com/go/conformity>. You can then search by product number to find the latest Declaration of Conformity.

Safety Information

See "[Chapter 4 Safety Information](#)".

U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

Latest Information

To get the latest firmware/software/electronic manuals/specifications/support information, go to www.keysight.com and type in the product number in the Search field at the top of the page.

COMPLIANCE WITH GERMAN NOISE REQUIREMENTS

This is to declare that this product is in conformance with the German Regulation on Noise Declaration for Machines (Lärmangabe nach der Maschinenlärminformation-Verordnung -3.GSGV Deutschland).

- Herstellerbescheinigung

GERÄUSCHEMISSION

Lpa < 70 dB

am Arbeitsplatz

normaler Betrieb

nach DIN 45635 T. 19

- Manufacturer's Declaration

ACOUSTIC NOISE EMISSION

Lpa < 70 dB

operator position

normal operation

per ISO 7779

South Korean Class A EMC declaration

This equipment is Class A suitable for professional use and is for use in electromagnetic environments outside of the home.

A급 기기

(업무용 방송통신기자재)

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

CX3300 Device Current Waveform Analyzer – At a Glance



Model	Input channel	Maximum sample rate	Dynamic range (ADC bits)	Analog band wid th	Memory depth	Digital channel
CX3322A	2	1 GSa/s	14 (high speed mode) and 16 (high resolution mode)	50 MHz	16/64/256 Mpts	
				100 MHz	16/64/256 Mpts	
				200 MHz	16/64/256 Mpts	
CX3324A	4	1 GSa/s	14 (high speed mode) and 16 (high resolution mode)	50 MHz	16/64/256 Mpts	Yes
				100 MHz	16/64/256 Mpts	Yes
				200 MHz	16/64/256 Mpts	Yes

Ease of use with high performance

- Two or four analog input channels with various wide-range and high-resolution sensors
- Front-panel interface provides easy access to the controls needed for time-domain waveform analysis tasks.
- Large capacitive touch screen display allows the instrument operation without an external pointing device.
- User interface with icons, windows, dialog boxes, and toolbars provides easy access to dozens of configuration and analysis tools, ensuring you can set up and make the most complex measurements.

Front-panel interface

- Run control (Run/Stop and Single) for continuous or single acquisitions
- Horizontal control sets sweep speed and trigger position, also adjusts horizontal scale.
- Auto Scale acquires waveform and sets the optimum scale automatically.
- High Reso selects the 16-bit vertical resolution mode for the all analog channels.
- Clear Display clears the waveforms on the screen before one or more acquisitions.
- Default Setup sets initial configuration.
- Trigger control sets trigger source, sweep mode, trigger conditions, and trigger level for synchronization with the observing waveform.
- Vertical control for adjusting vertical scale
- Color-coded key's LED indicates if the channel is active or not.
- LEDs indicate if the channel is controllable or not.
- Zoom activates the Zoom window.

Removable solid-state drive and USB 2.0 and 3.0 ports

- Solid-state drive for fast boot-up
- Saves the setup data to reuse it another time.
- Saves and restores the setup and waveform data.
- Saves data in the dedicated report format.

Digital channel on 4-channel models

- 8 digital channels, 10 M Ω input impedance and 500 MSa/s sampling rate

In This Guide

This guide provides the information you need to begin using Keysight Technologies CX3300 Device Current Waveform Analyzer. This guide consists of the following chapters.

1. "Setting Up the CX3300"

This chapter describes the installation requirements and other setup information.

2. "Using the CX3300"

This chapter describes the product overview and how to perform basic operations.

3. "Performing User Calibration"

This chapter describes how to perform the user calibration.

4. "Safety Information"

This chapter provides general safety information and describes recommendations for working comfortably and safely while operating the CX3300.

For More Information

- For the specifications of the CX3300, see Data Sheet. To get the latest Data Sheet, go to www.keysight.com/find/cx3300a.
- For detailed information on how to use the CX3300, see *Keysight CX3300 Help (Online Manual)*.
- For information on controlling the CX3300 from a remote computer, see *Keysight CX3300 Programmer's Guide*.

NOTE

The information is subject to change without notice due to the future enhancement.

The actual screen image on the CX3300 may be different from the image shown in this guide.

Contents

1 Setting Up the CX3300

Inspection	12
Installation	13
Safety Considerations	13
⚠ Environmental Characteristics	13
Bench Installation	15
Connecting a Mouse, Keyboard, and LAN Cable	16
⚠ Connecting Power	17
⚠ Connecting the CX1100	19
Turning On/Off the CX3300	20
To Turn On the CX3300	20
To Turn Off the CX3300	20
Verifying Basic Operation	21
If You Use the CX1101A/CX1102A/CX1103A	21
Required accessories	21
Procedure	21
If You Use the CX1104A	22
Required accessories	22
Procedure	22
If You Use the CX1105A	23
Required accessories	23
Procedure	24
Changing Windows Environment	25
Changing Operating System Settings	25
Installing Application Programs	25
Maintenance	26
⚠ Cleaning	26
Diagnosis	26
To perform diagnosis	27

User Calibration	28
Calibration	28
Troubleshooting	29
Servicing	33

2 Using the CX3300

 Front Panel Overview	36
Side Panel Overview	39
Rear Panel Overview	40
Power On Screen.	42
Main Waveform	42
Tool Palette	44
Sidebar	44
Summary Bar	45
Menu Bar	45
Status Bar	45
Indicator Tray	46
Setting the Display and the Starting Condition	47
Starting and Stopping Waveform Acquisitions	48
Adjusting the Horizontal Scale and Timebase Position	49
Adjusting the horizontal scale.	50
Adjusting the horizontal timebase position	50
Magnifying a part of the waveform	50
Adjusting the Vertical Settings.	51
Adjusting the vertical scale.	52
Adjusting the vertical offset	53
Magnifying a part of the waveform	53
Setting Up Triggers	54

Setting the CX3300 for an edge trigger.	55
Making a Measurement and Using Useful Tools.	57
Making a measurement on a waveform.	58
Using makers	59
Using math functions and filters	61
Using analysis tools	62
Using quick actions	63
Controlling digital channels.	63
Saving and Printing Data.	64
Forcing a Default Setup.	65
SSD Recovery	65
Using Online Help	66
Accessing the Online Help	66
Navigating the Online Help	66

3 Performing User Calibration

Using the CX1101A/CX1102A/CX1103A	68
Using the CX1206A Sensor Head.	70
Using the CX1104A	77
Using the CX1105A	79
Using the CX1151A	81

4 Safety Information

Safety Summary.	84
Safety Symbols	86
Product Stewardship	88
Precautionary Statement.	89

Working in Comfort.90

 About Repetitive Strain Injury90

 What is RSI?90

 What causes RSI?91

 What if I experience discomfort?91

Mice and Other Input Devices91

1 Setting Up the CX3300

Inspection	12
Installation	13
Turning On/Off the CX3300	20
Verifying Basic Operation	21
Changing Windows Environment	25
Maintenance	26

This chapter describes how to set up your CX3300, connect power and accessories, and verify basic operation.

Inspection

- ◆ Inspect the shipping container for damage.

Keep the shipping container and cushioning material until you have inspected the contents of the shipment for completeness and have checked the CX3300 mechanically and electrically.

If the shipping container is damaged or the cushioning materials show signs of stress, notify the carrier as well as your Keysight Technologies sales office. Keep the shipping materials for the carrier's inspection. The Keysight Technologies office will arrange for repair or replacement at Keysight Technologies' option without waiting for claim settlement.

- ◆ Pick up the packing lists and verify that you received the furnished accessories and the options and accessories you ordered and that none were damaged.

If anything is missing, notify your Keysight Technologies sales office.

- ◆ Inspect the CX3300.

If there is mechanical damage or a defect, or if the CX3300 does not pass the power on self-test or does not operate properly, notify your Keysight Technologies sales office.

See **“Verifying Basic Operation” on page 21** to check the operation.

Installation

- “Safety Considerations”
- “Environmental Characteristics”
- “Bench Installation”
- “Connecting a Mouse, Keyboard, and LAN Cable”
- “Connecting Power”
- “Connecting the CX1100”

Safety Considerations

Refer to “**Safety Information**” on page 83 for general safety information. Before installation or operation, check the CX3300 and review this guide for safety warnings and instructions. Safety warnings for specific procedures are located at appropriate places throughout this guide.

Environmental Characteristics

Environmental conditions for the CX3300 are shown in **Table 1-1**. The CX3300 is designed for use in indoor facilities.

WARNING



Do not operate the instrument in dusty environment, or in the presence of flammable gases, corrosive gases, or fumes.

Ne pas utiliser l'appareil dans un endroit poussiéreux, ou en présence de gaz inflammables, corrosifs ou de fumée.

Table 1-1 **Environmental Characteristics**

Environment	Indoor use only
Ambient temperature	Operating: 0 °C to +40 °C Storage: –20 °C to +60 °C
Humidity	Operating: up to 80% relative humidity, non-condensing, at +40 °C Storage: up to 90% relative humidity, non-condensing, at +60 °C
Altitude	Operating: up to 2,000 m (6,561 ft.) Storage: up to 4,600 m (15,092 ft.)
Weight	11 kg
Dimensions	425.6 mm (W) × 266.1 mm (H) × 196.7 mm (D), with feet retracted
Safety	IEC 61010-1
EMC (Electromagnetic Compatibility)	IEC 61326-1
Measurement category	Measurement category 1
Power requirements	100–240 V (±10%), 50/60 Hz 250 VA, maximum power dissipated

Bench Installation

Position the CX3300 where it will have sufficient clearance for airflow around the back and sides. Fan cools the instrument by drawing air through the sides and exhausting it out the back.

Do not block the air intake at the sides and the exhaust at the rear of the CX3300. Minimum clearances for bench operation are 25 mm along the sides and 75 mm along the back.

For easier display viewing and measurement terminal access, you can tilt up the front of the CX3300. Flip down tabs behind the front feet.

Figure 1-1 **Tilting up the Front of the CX3300**



Connecting a Mouse, Keyboard, and LAN Cable

A mouse and keyboard can be plugged into the USB host ports. Three host ports are on the front panel and four host ports are on the side panel.

If you want to connect the CX3300 to the site LAN, connect your LAN cable to the RJ-45 connector on the side panel.

NOTE

To connect to the site LAN, you must set up the network. Exit the CX3300 application before you start setting up your network.


The CX3300 application does not support Windows Remote Desktop function.

If you do not know how to set up a network in the Windows operating system, see your network administrator or use the Windows operating system's online help.

Refer to **"Precautionary Statement" on page 89** for more precautions.

Figure 1-2

Side Panel

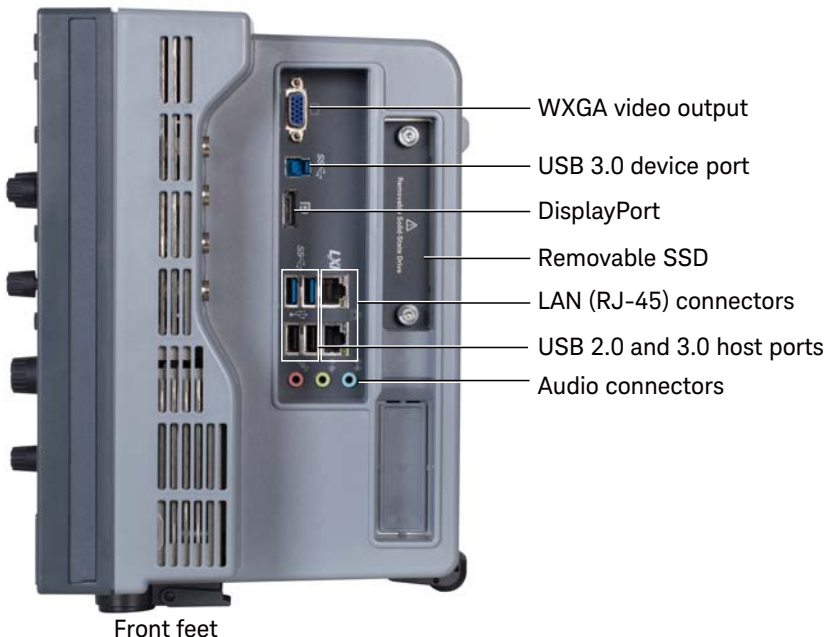

Connecting Power

Connect the power cord to the IEC 60320 connector on the CX3300 rear panel. If the wrong power cord was shipped with your instrument, contact Keysight Technologies. The AC input on the back of the CX3300 is a universal AC input. It accepts nominal line voltages in the range of 100 to 240 VAC.

WARNING



FIRE HAZARD: Use only the power cord supplied with your instrument. Using other types of power cord may cause overheating of the power cord, resulting in fire.

SHOCK HAZARD: The power cord provides the chassis ground through a third conductor. Be sure to connect to a three-conductor type power outlet with the correct pin grounded.


Risque d'incendie : utilisez uniquement le cordon d'alimentation fourni avec votre appareil. L'utilisation d'autres types de cordon d'alimentation peut provoquer une surchauffe du cordon d'alimentation et provoquer un incendie.

Risques de choc électrique : le cordon d'alimentation fournit la masse par le biais d'un troisième conducteur. Assurez-vous de connecter la prise d'alimentation de type trois conducteurs au boîtier exact mis à terre.




NOTE

The detachable power cord may be used as an emergency disconnecting device. Removing the power cord will disconnect AC input power to the instrument.

 Table 1-2 Power Cord

Option 900	Option 901	Option 902	Option 903
 - Plug: BS 1363/A, 250 V, 10 A - PN: 8120-4420	 - Plug: AS/NZS 3112, 250 V, 10 A - PN: 8120-4419	 - Plug: IEC 60277-1, 250 V, 10 A - PN: 8121-1226	 - Plug: NEMA 5-15P, 125 V, 10 A - PN: 8120-6825

   Setting Up the CX3300 Installation


Option 904  • Plug: NEMA 6-15P, 250 V, 10 A • PN: 8120-3996	Option 906  • Plug: SEV 1011, 250 V, 10 A • PN: 8120-4416	Option 912  • Plug: SB 107-2-D1, 250 V, 10 A • PN: 8121-1655	Option 917  • Plug: IS 1293 and IS 6538, 250 V, 10 A • PN: 8121-1690
Option 918  • Plug: JIS C 8303, 125 V, 12 A • PN: 8121-0743	Option 919  • Plug: Israel SI 32, 250 V, 10 A • PN: 8121-0724	Option 920  • Plug: IRAM 2073, 250 V, 10 A • PN: 8121-0725	Option 921  • Plug: CEI 23-16, 250 V, 10 A • PN: 8121-0722
Option 922  • Plug: GB 1002 figure 3, 250 V, 10 A • PN: 8120-8376	Option 923  • Plug: SANS 164-1, 250 V, 10 A • PN: 8121-0564	Option 927  • Plug: NEMA WD-6, 250 V, 10 A • PN: 8120-0674	Option 930  • Plug: NBR 14136, 250 V, 10 A • PN: 8121-1809
Option 931  • Plug: CNS 10917-2, 125 V, 10 A • PN: 8121-1635	Option 932  • Plug: CS 0017, 250 V, 10 A • PN: 8121-1638		

Connecting the CX1100

The CX1100 other than the CX1152A can be connected to the analog input channels on the CX3300 front panel.

1. Attach the connector of the CX1100 to the desired channel.
2. Fasten the screws on the connector to assure the contact.
3. If a sensor head has not been connected to the CX1101A/CX1102A/CX1104A current sensor yet, attach or connect it to the current sensor.

Figure 1-3 CX1100 Connection

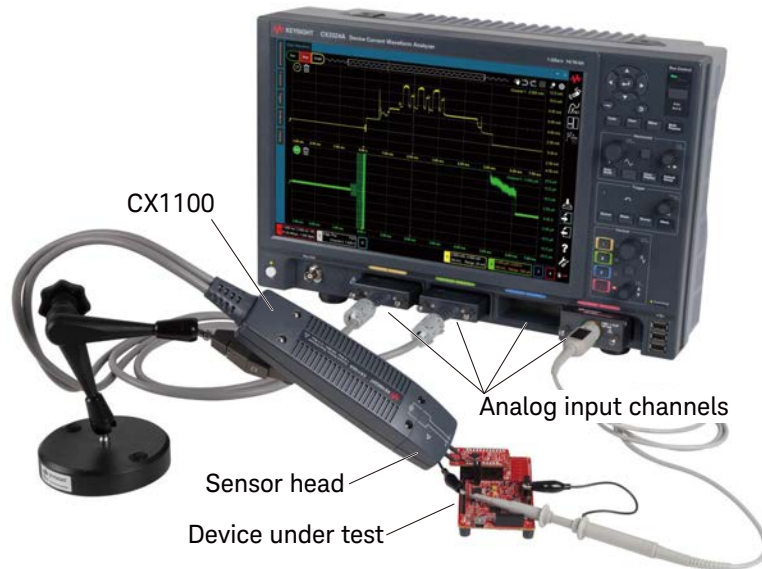

CAUTION



Confirm the maximum input rating of the CX1100 and the sensor head. Do not apply any electrical potential and/or current over the value.

NOTE

Connecting the CX1102A Current Sensor to the CX3324A

Connect the Primary and Secondary connectors to the contiguous channels 1 and 2, 2 and 3, or 3 and 4. Both connectors must be connected properly.

Turning On/Off the CX3300

Press the Standby switch to turn on or off the CX3300. The switch is located in the lower left corner of the CX3300 front panel.



Standby switch

WARNING

Whenever it is likely that the ground protection is impaired, you must make the instrument inoperative and secure it against any unintended operation.

To Turn On the CX3300

Press the Standby switch. After system boot up, self-test, and initialization, the CX3300 displays the Main Waveform screen. The CX3300 is ready to use.

Even though the CX3300 has turned on, you can connect or disconnect the CX1100.

NOTE

The CX3300 displays the time vs current graph for the channel enabled and connected to the current sensor. However it displays the time vs voltage graph for the channel enabled without the current sensor.

To Turn Off the CX3300

Press the Standby switch. The CX3300 will go through a normal Windows operating system shutdown process.

CAUTION

If a DUT is connected to the CX3300, do not turn the CX3300 off to prevent damage on the DUT.

Verifying Basic Operation

The following procedures verify the basic operation which monitors the Calibration Output signal.

- “If You Use the CX1101A/CX1102A/CX1103A”
- “If You Use the CX1104A”
- “If You Use the CX1105A”

If the CX1100 has not been connected yet, connect it. See “Connecting the CX1100” on page 19.

If You Use the CX1101A/CX1102A/CX1103A

Required accessories

- CX1203A sensor head, 1 ea., furnished with the CX1101A/CX1102A, no need for the CX1103A
- Adapter (SMA plug to BNC jack), 1 ea., furnished with the current sensor
- Coaxial cable (BNC plug to BNC plug), 1 ea., furnished with the CX3300

Procedure


1. Connect the current sensor to the Aux Out terminal on the CX3300 front panel by using the accessories listed above.
2. Press the 1 (yellow), 2 (green), 3 (blue), or 4 (red) key associated with the channel connected to the Aux Out terminal and enable the channel.
3. Press the Menu key several times to open the Configuration dialog box. The Menu key is located above the Horizontal control on the front panel.
4. Set the following conditions on the Configuration dialog box (Configuration > Calibration Output).
 - Output State: ON
 - Source Shape: DC
 - Source Mode: Current
 - Current: 2 mA

The 2 mA DC current is applied from the Aux Out terminal.

5. Click the close (x) button located in the upper right corner on the Configuration dialog box to close the dialog box.
6. Press the Run key to start waveform acquisition.
7. Use the Vertical control knob to adjust the vertical scale. You will see DC current as shown in **Figure 1-4**.

Figure 1-4

Calibration Output

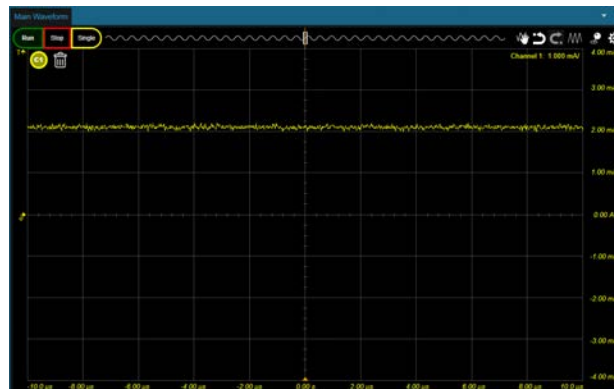

If You Use the CX1104A

Required accessories

- Extension cable, 1 ea., furnished with the CX1104A
- Resistive sensor head (CX1211A, CX1212A, CX1213A, CX1214A, CX1215A, or CX1216A), 1 ea., *must be prepared by user*
- Banana adapter, 1 ea., furnished with the CX1104A
- Banana adapter (Banana plug to BNC jack), 1 ea., *must be prepared by user*
- Coaxial cable (BNC plug to BNC plug), 1 ea., furnished with the CX3300

Procedure

1. Connect the CX1104A to the Aux Out terminal on the CX3300 front panel by using the accessories listed above.

Do not forget to fasten the screws on the sensor head to assure the contact with the furnished banana adapter.

2. Press the 1 (yellow), 2 (green), 3 (blue), or 4 (red) key associated with the channel connected to the Aux Out terminal and enable the channel.
3. Press the **Menu** key several times to open the Configuration dialog box. The **Menu** key is located above the Horizontal control on the front panel.
4. Set the following conditions on the dialog box (Configuration > Calibration Output).


- Output State: ON
- Source Shape: Square

The +5 V square pulse (1 kHz, 50% duty cycle) is applied from the Aux Out terminal which has 50 Ω output impedance.

5. Click the close (x) button located in the upper right corner on the Configuration dialog box to close the dialog box.
6. Press the **Run** key to start waveform acquisition.
7. Use the Vertical control knob to adjust the vertical scale. You will see square pulse as shown in **Figure 1-5**.

Figure 1-5

Calibration Output monitored using the CX1216A Resistive Sensor Head

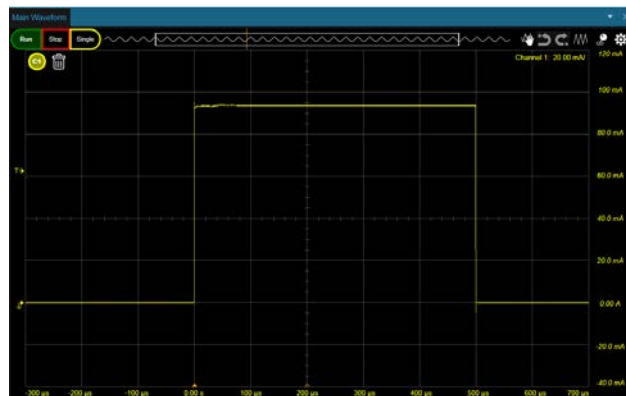

If You Use the CX1105A

Required accessories

- Test adapter, 1 ea., furnished with the CX1105A
- Coaxial cable (BNC plug to BNC plug), 1 ea., furnished with the CX3300



Procedure

1. Set the slide switch on the test adapter to the 50 OHM. See [Figure 1-6](#).
2. Connect the coaxial cable between the BNC jack connector on the test adapter and the Aux Out terminal on the CX3300 front panel.
3. Connect the CX1105A to the connection posts on the test adapter as shown in [Figure 1-6](#).
4. Press the 1 (yellow), 2 (green), 3 (blue), or 4 (red) key associated with the channel connected to the Aux Out terminal and enable the channel.
5. Press the Menu key several times to open the Configuration dialog box. The Menu key is located above the Horizontal control on the front panel.
6. Set the following conditions on the dialog box (Configuration > Calibration Output).
 - Output State: ON
 - Source Shape: Square

The +5 V square pulse (1 kHz, 50% duty cycle) is applied from the Aux Out terminal which has 50 Ω output impedance.
7. Click the close (x) button located in the upper right corner on the Configuration dialog box to close the dialog box.
8. Press the Run key to start waveform acquisition.
9. Use the Vertical control knob to adjust the vertical scale. You will see square pulse (approximately +2.5 V, divided by two 50 Ω) as shown in [Figure 1-6](#).

Figure 1-6

Test Adapter and Calibration Output

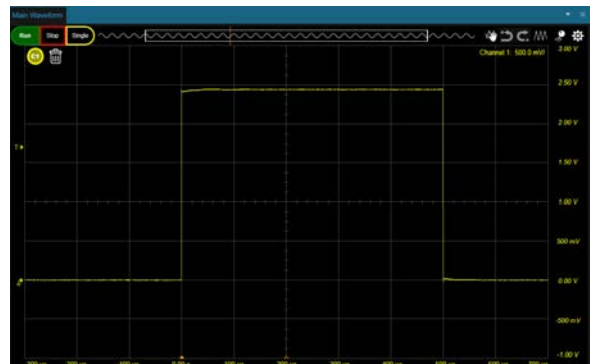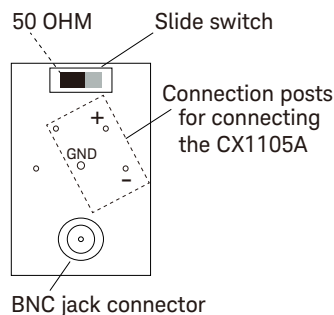

Changing Windows Environment

NOTE

Exit the CX3300 application before changing any Windows operating system settings or installing any software.

Changing Operating System Settings

Many Windows operating system settings can be changed to suit your own personal preferences. However, some operating system settings should not be changed because doing so would interfere with the proper operation of the CX3300.

- Do not change the Power Options.
- Do not change the Language settings.
- Do not remove Fonts.
- Do not change the screen resolution from 1280 by 800 pixels.
- Do not delete or modify the Administrator user account.

Installing Application Programs

The CX3300 has an open Windows operating system, which lets you install your own application software. Any application that runs on the Windows operating system and uses 8 GB of RAM or less may be installed on your CX3300.

CAUTION

Installing an application that does not meet these requirements may break the CX3300 application. Refer to **“Precautionary Statement” on page 89** for more precautions.

Maintenance

Maintenance should be performed periodically to keep the CX3300 in good condition. If problems arise, contact your Keysight Technologies sales office.

- “Cleaning”
- “Diagnosis”
- “User Calibration”
- “Calibration”
- “Troubleshooting”
- “Servicing”

Cleaning

WARNING



SHOCK HAZARD: To prevent electric shock, unplug the CX3300 before cleaning.

Risques de choc électrique : afin d'éviter tout choc électrique, débranchez le CX3300 avant d'effectuer le nettoyage.

Use a dry soft cloth or a soft cloth slightly dampened with a mild soap and water solution to clean the external case parts. Do not use detergents or chemical solvents. Do not attempt to clean internally.

CAUTION



Do not use too much liquid in cleaning the CX3300. Water can enter the CX3300 panels and damage sensitive electronic components. Make sure that the CX3300 is completely dry before reconnecting the power cord.

Diagnosis

Diagnosis allows you to verify the CX3300 operation. The CX3300 provides the following tests.

- Front Panel Key test
- Front Panel LED test

- Touch Panel test
- LCD test
- Self-Test
- ADC Open Offset test
- Sensor Floating PS test
- Sensor DC Offset Control test

It is recommended to perform the diagnosis for the following condition or purpose.

- If you feel that the instrument may be defective
- For preventive maintenance

To perform diagnosis

1. Press the **Menu** key several times to open the Configuration dialog box. The **Menu** key is located above the Horizontal control on the front panel.
2. Click **Diagnosis** to display the Configuration > Diagnosis screen.
3. Click the button for the desired test and follow the instruction.

To cancel/exit Touch Panel test:

- Press the tab, escape, up, down, left, right, or enter key.

To perform LCD test:

1. Click the **LCD** button on the Configuration > Diagnosis screen. You will see pink color on the LCD full screen.
2. Click on the screen or press any key. LCD will change the color to green.
3. Click on the screen or press any key. LCD will change the color to blue.
4. Click on the screen or press any key. LCD will change the color to white.
5. Click on the screen or press any key. LCD will change the color to black.
6. Click on the screen or press any key. The **Finished** dialog box opens.
7. Click **Yes** if LCD changes the color as shown above. Or else click **No**.

User Calibration

User calibration allows you to perform error correction of measurement data. This is effective for making more accurate measurements. For more information, see [Chapter 3 “Performing User Calibration”](#).

Calibration

For the following products, calibration and adjustments must be performed periodically so that the instruments satisfy the specifications, and keep a good condition. It is recommended to perform the calibration once a year at least. For the calibration and adjustments, contact your Keysight Technologies sales office. Trained service personnel will perform the calibration and adjustments.

- CX3322A
- CX3324A
- CX1101A
- CX1102A
- CX1103A
- CX1104A
- CX1105A
- CX1151A
- CX1211A
- CX1212A
- CX1213A
- CX1214A
- CX1215A
- CX1216A

Troubleshooting

If any problem is found on the CX3300/CX1100, perform the following troubleshooting.

1. Isolate the problem between the CX3300 and the CX1100. See [Figure 1-7](#).
2. Isolate the problem between the CX1100 and the sensor head. See [Figure 1-8](#).
3. Isolate the problem on the CX1152A. See [Figure 1-9](#).

NOTE

For troubleshooting the CX1101A or the CX1102A, if you have multiple CX1101A/CX1102A and/or CX1203A sensor head, it will be useful to swap the troublesome one with the “working” one to isolate the problem.

NOTE

For troubleshooting the CX1104A, if you have multiple CX1104A and/or CX1211A, CX1212A, CX1213A, CX1214A, CX1215A, CX1216A resistive sensor head, it will be useful to swap the troublesome one with the "working" one to isolate the problem.

Figure 1-7 **CX3300/CX1100 Troubleshooting**

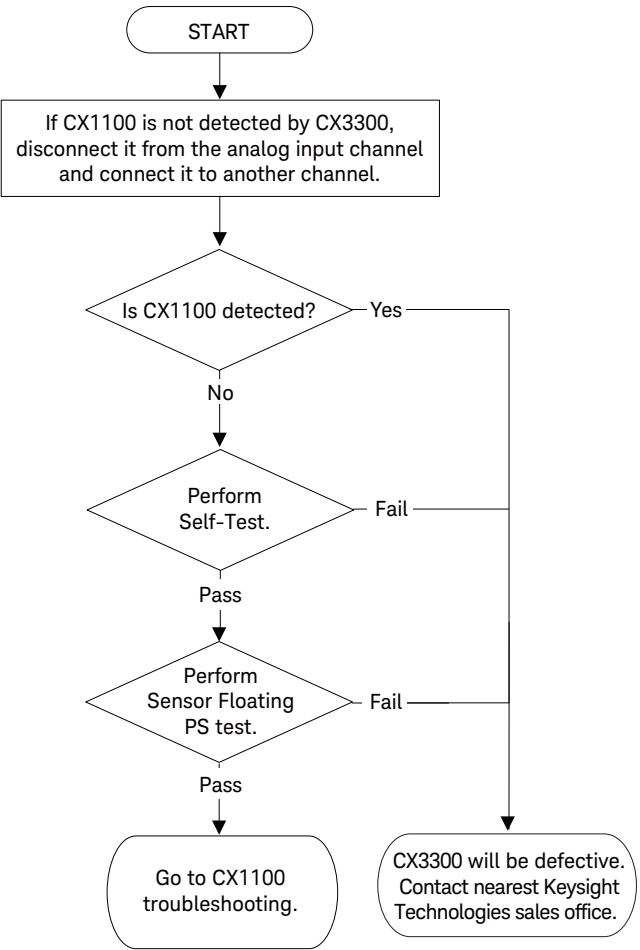


Figure 1-8 CX1100 Troubleshooting


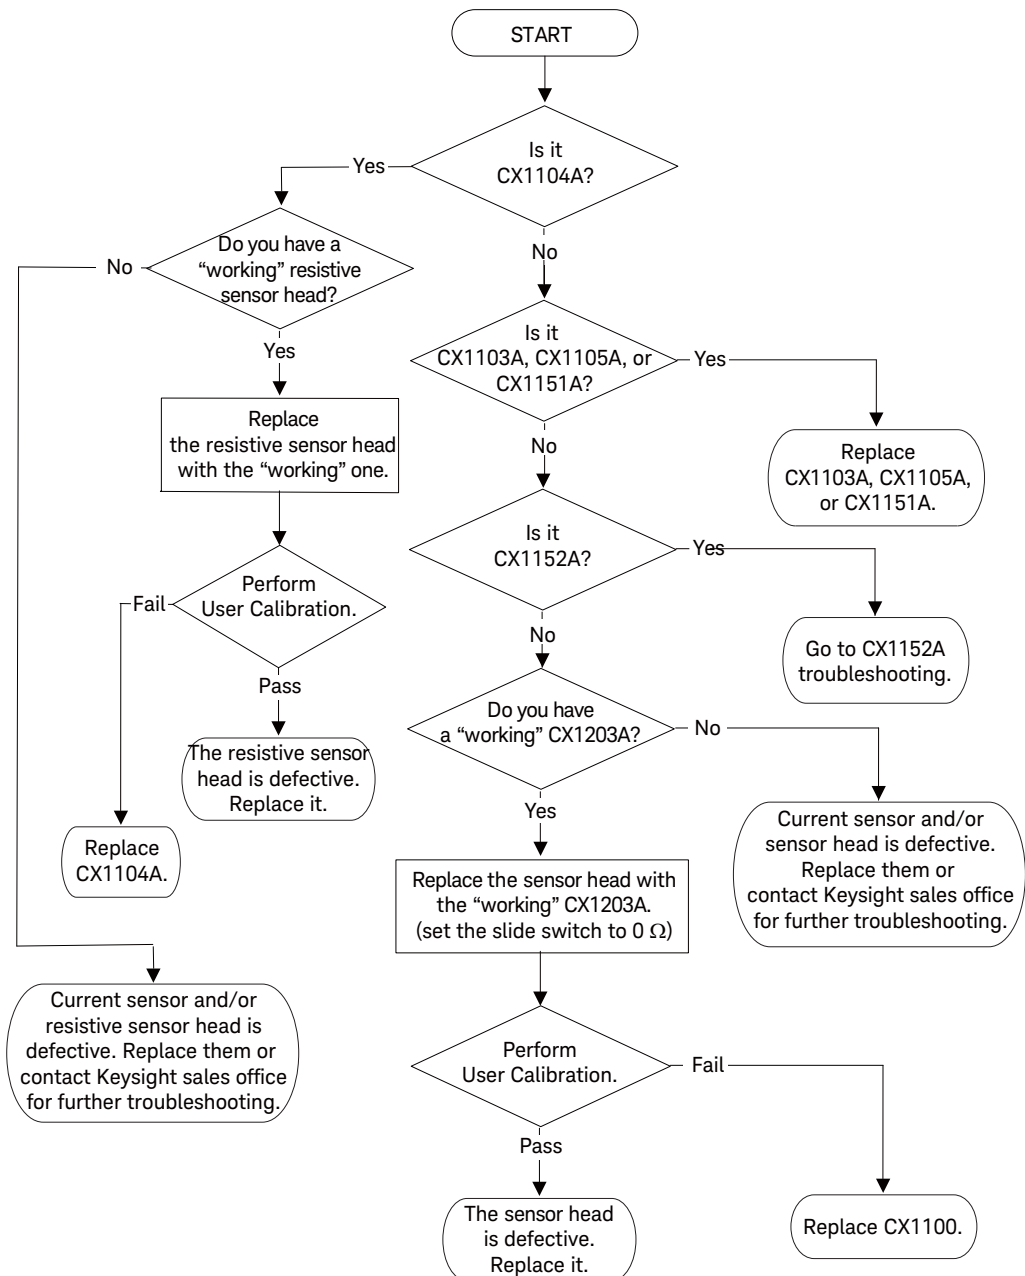


Figure 1-9 **CX1152A Troubleshooting**

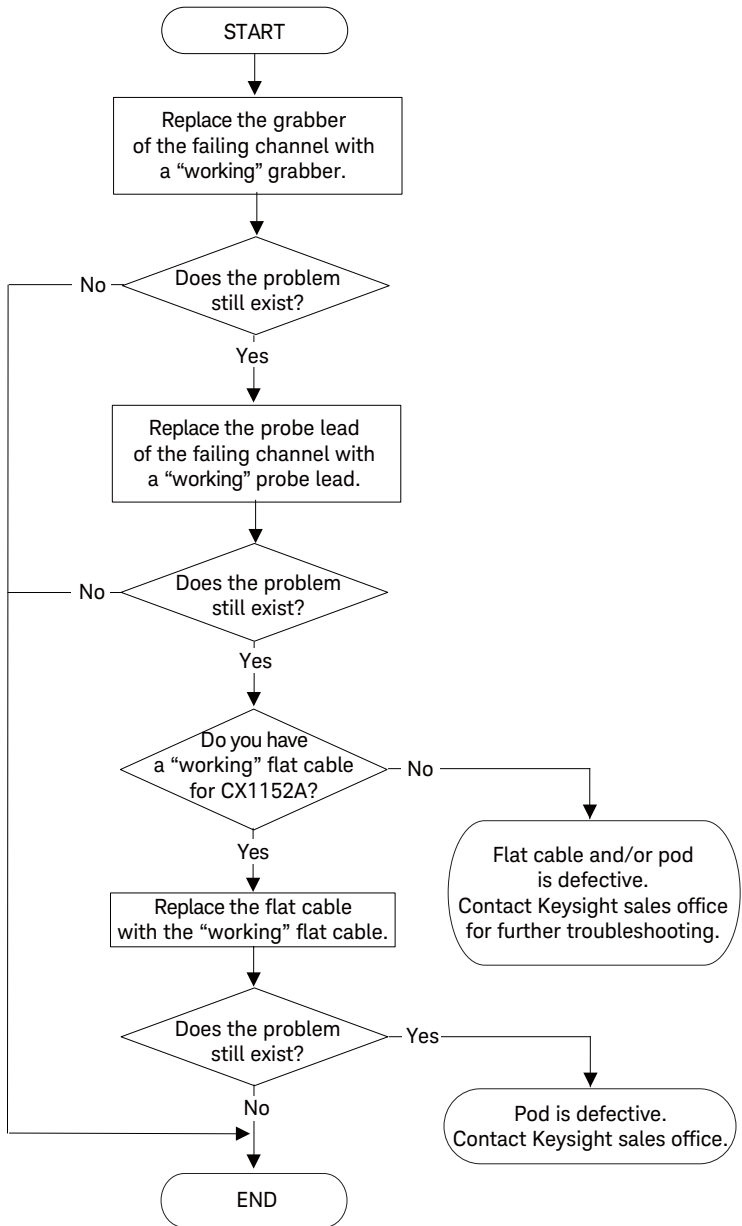

Servicing

If the CX3300 is confirmed as defective, send it to an authorized service center for repair.

If the CX1100 is found to be defective, you can order the replacement part or you can send it to an authorized service center for repair. Also refer to *CX1100 User's Guide*.

If you are shipping the product to Keysight Technologies for service, perform the following steps before shipping.

1. Contact your nearest Keysight Technologies sales office for information on obtaining an RMA number and return address.
2. Write the following information on a tag and attach it to the malfunctioning equipment.
 - Name and address of owner
 - Product model number (for example, CX3324A)
 - Product serial number (for example, MYXXXXXXXX)
 - Description of failure or service required
3. Pack the product in the original shipping container and cushioning material, or fungible.
4. Seal the container closely and mark it as "FRAGILE".

NOTE

If any correspondence is required, refer to the product by serial number and model number.

NOTE

For servicing the CX3300 mainframe, you do not need to send the CX1100 and the sensor heads.

For servicing the CX1101A or the CX1102A, send it with the CX3300 and the CX1203A.

For servicing the CX1103A or the CX1151A, send it with the CX3300.

For servicing the CX1104A, send it with the CX3300. You do not need to send the resistive sensor head.


For servicing the CX1105A, send it with the CX3300. You do not need to send the test adapter.

2 Using the CX3300

Front Panel Overview	36
Side Panel Overview	39
Rear Panel Overview	40
Power On Screen	42
Setting the Display and the Starting Condition	47
Starting and Stopping Waveform Acquisitions	48
Adjusting the Horizontal Scale and Timebase Position	49
Adjusting the Vertical Settings	51
Setting Up Triggers	54
Making a Measurement and Using Useful Tools	57
Saving and Printing Data	64
Forcing a Default Setup	65
Using Online Help	66

This chapter describes how to use the CX3300's input and output, control panel, and graphical user interface (CX3300 application).

For quick view of the CX3300 application, refer to *Quick Reference* furnished with the CX3300.

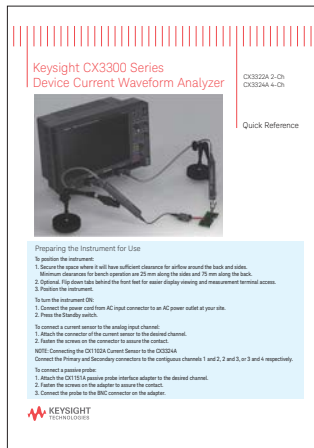

Front Panel Overview

This section describes the front panel of the CX3300.

Figure 2-1

Front Panel



1. Standby switch

Turns the instrument on. Pressing the button in the ON state makes it in the standby state. The green LED lights when it is in the ON state.



2. Aux Out terminal

BNC connector used to apply one of the following reference signals. The output signal can be set by using the Configuration dialog box. For the square pulse, the base voltage is 0 V and the output impedance is 50 Ω .

- DC current: -200 mA to +200 mA
- DC voltage: -7 V to +7 V
- Square: +5 V square pulse, 1 kHz, 50% duty cycle
- Pulse: +5 V square pulse, 20 ns to 1 ms period, programmable duty cycle



3. Analog input channels

The CX3322A has two channels and the CX3324A has four channels.

Connects the CX1100 other than the CX1152A. See [“Connecting the CX1100” on page 19](#). Also refer to *CX1100 User’s Guide* for the CX3300 accessories.

CAUTION

Confirm the maximum rating of the accessories. Do not apply any electrical potential and/or current over the value.

4. Three USB 2.0 host ports

Used to connect USB devices such as keyboard, mouse, and USB memory.

To remove USB devices from the instrument, use “Safely Remove Hardware” on Windows taskbar. If it is not used, the instrument may cause the internal USB communication error. If the error occurs, turn the instrument off and disconnect the power cord from it. Leave it about 30 seconds before rebooting it, and connect the power cord again, and then turn the instrument on.

5. Touch Panel switch

Works when the CX3300 application is running. Enables or disables the touch screen operation. The green LED lights when the touch screen is enabled.

6. Vertical control

Controls analog input channel and graph scale. See [“Adjusting the Vertical Settings” on page 51](#).

7. Trigger control

Controls trigger condition. See [“Setting Up Triggers” on page 54](#).

8. Horizontal control

Controls timebase and graph scale. See [“Adjusting the Horizontal Scale and Timebase Position” on page 49](#).

9. Run Control

Controls measurement execution. See [“Starting and Stopping Waveform Acquisitions” on page 48](#).

10. Navigation keys (up, down, left, right, and enter)

Supports setup or marker operation. The enter key sets the value.

11. Escape key

Cancels the last operation or closes menu or dialog box.

12. Tab key

Changes the active entry field in a dialog box.

13. Tools, View, Menu, and Multi Purpose keys

Tools key displays/switches the tool palette; Measurement, Function, Trigger, or Others.

View key switches the active view; Main Waveform, graph view, or data view.

Menu key displays/switches the dialog box; Setting, Analysis, or Configuration.

Multi Purpose key performs the user specified function. Initially, QuickSave is specified.

14. LCD panel

14.1 inch TFT WXGA display, 1280 × 800 resolution. Displays the CX3300 application window, the Windows screen, and so on. Touch screen operation is available when the Touch Panel indicator lights.

For overview of the CX3300 application window, refer to *Quick Reference* furnished with the CX3300.


Side Panel Overview

The CX3300 right side panel has the following I/O connectors.

- WXGA video output, for an external display
- USB 3.0 device port, for remote control of the CX3300 from a PC
- DisplayPort, for an external display
- Removable SSD (solid state drive)
Stores operating system, CX3300 application, calibration data, user data and so on.
- LAN (RJ-45) connectors
- Two USB 2.0 host ports and two USB 3.0 host ports
- Audio connectors, for a microphone and a speaker

Figure 2-2

Right Side View

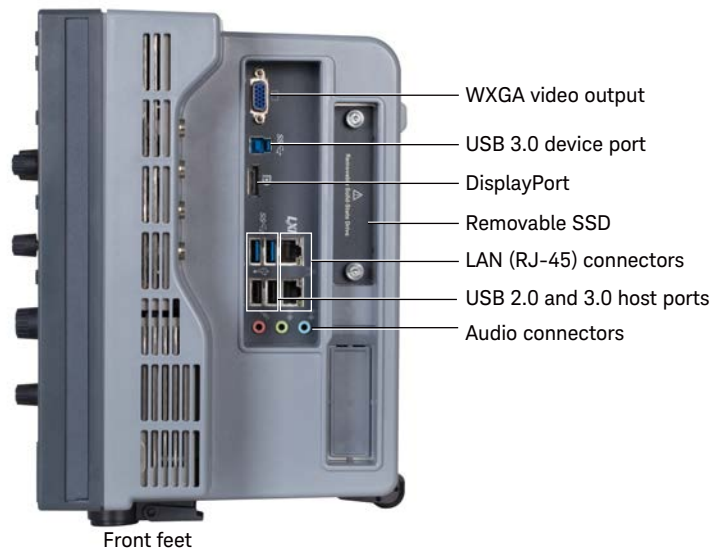


Front feet You can tilt up the front of the CX3300. Flip down tabs behind the front feet for easier display viewing and measurement terminal access.

Rear Panel Overview

This section describes the rear panel of the CX3300.

Figure 2-3

Rear Panel

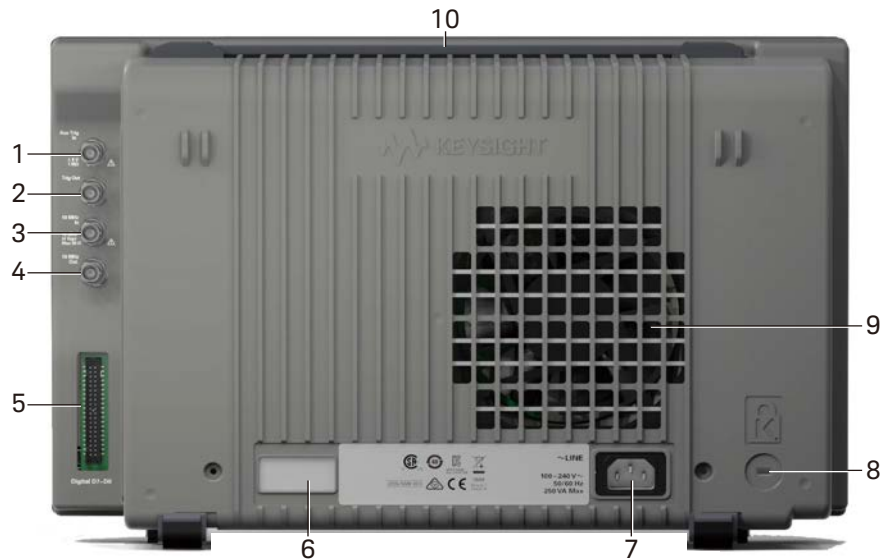

1. Aux Trig In

BNC connector used to receive an external signal for the trigger source of the CX3300. Trigger input condition can be set by using the Setting dialog box. The input impedance is $1\text{ M}\Omega$ and the maximum swing is $\pm 8\text{ V}$.

2. Trig Out

BNC connector used to send the TTL-level signal for the trigger source of an external equipment.

3. 10 MHz In

BNC connector used to receive a reference clock for the horizontal timebase system of the CX3300. The reference clock must meet the following specifications.

- Amplitude: $0\text{ dBm} \pm 3\text{ dB}$ (typical) $+16\text{ dBm}$ (4 Vp-p) maximum

- Frequency: 10 MHz $\pm$ 10 ppm (typical)

4. 10 MHz Out

BNC connector used to send the reference clock for the horizontal timebase system of an external equipment. The specifications of the reference clock are as follows.

- Frequency: 10 MHz $\pm$ 5 ppm (typical)
- Level: 0 dBm $\pm$ 3 dB into 50 Ω (typical)
- Output impedance: 50 Ω nominal

5. Digital D7-D0

For the CX3324A. Connects the CX1152A digital channel interface cable which provides eight digital channels D0 to D7 and the ground line. Supplemental characteristics are listed below.

- Maximum input voltage: $\pm$ 40 V
- Input dynamic range: $\pm$ 25 V
- Input impedance: 10 M Ω
- Maximum sampling rate: 0.5 GSa/s

6. Serial number

You need this serial number when using Keysight Technologies telephone assistance program.

7. AC power input

AC power cord is connected to this receptacle.


8. Security cable slot

9. Cooling fan

10. Strap handle

Power On Screen

Just after the CX3300 boots up, the CX3300 will display as shown below.

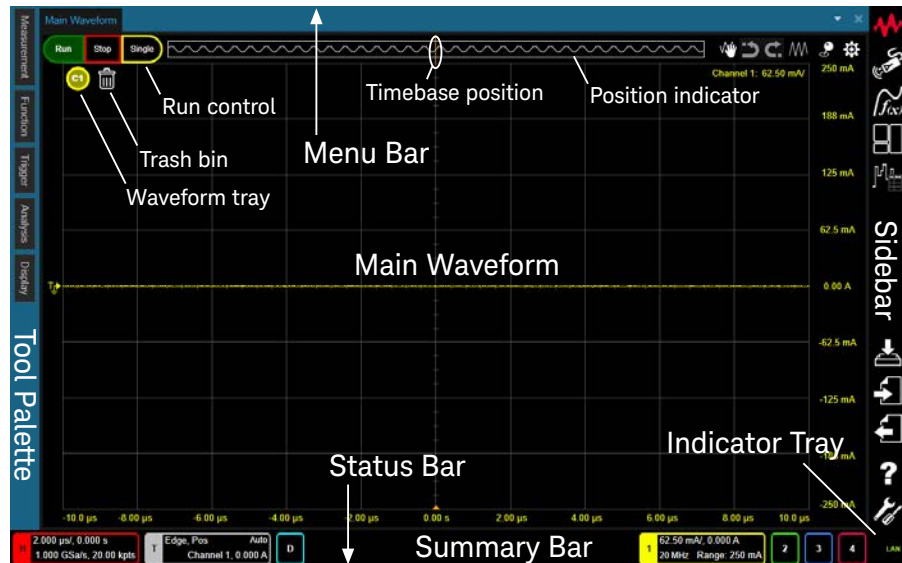

Main Waveform

The following graphical user interfaces are available on the Main Waveform.

Graph area Displays waveforms, markers, annotations, etc.

Horizontal scale Primary scale area is below the graph area.
Secondary scale area can be above the graph area.

Vertical scale Primary scale area is on the right side of the graph area.
Secondary scale area can be on the left side of the graph area.

Run control Run, Stop, and Single icons. Controls waveform acquisition. Same as the Run, Stop, and Single keys.

Waveform tray and Trash bin

Displays the icons for the waveforms on the graph. If no waveform is displayed on the graph, the icon and the trash bin are not displayed. There is the following types of waveform.

- C: Waveform acquired by an analog input channel
- D: Waveform acquired by a digital channel
- F: Waveform given by a calculation
- W: Waveform saved in a waveform memory

Changing the order of icons changes the drawing order of waveforms. Left is faster. Drag and drop operation allows you to change the order.

Dropping the icon into the trash bin deletes the waveform from the graph.

Dropping the C- or D-icon into the trash bin sets the channel status to OFF and deletes the waveform from the graph.

Clicking the C-icon selects the channel effective for vertical control and graph scaling.

Position indicator

Waveform expresses all of the memory data. Square surrounds the data displayed on the graph. Moving the square changes data on the graph.

Timebase position

Orange vertical line indicates the timebase position (0 second position).



Switches the function; Move or Zoom. Image of the icon changes and shows the function effective now. The left image of this paragraph indicates that the move function is effective.



Undo. Cancels the last move/zoom operation.



Redo. Cancels the last Undo.



Waveforms. Shows/hides the menu used for selecting the display layout; single, dual, or zoom display. Image of the icon changes and shows the present layout. The left image of this paragraph indicates that the display layout is the single.



Marker. Shows/hides the menu used for switching display ON or OFF of markers on the graph. It can be set for each marker type; Cross Hair, A-B Marker, and Area Marker.



Setting. Opens the Makers mini dialog box for quick setup.

Clicking the maximize button in the upper right corner of the mini dialog box opens the Analysis dialog box (Analysis > Display > Markers) used for detail setup.

Tool Palette

The following buttons are available on the tool palette which provides lots of icons used for the following purposes. Each feature is applied by drag-and-drop of an icon on a waveform.

For more details on the tools, see the CX3300 online help. Also see [“Making a Measurement and Using Useful Tools” on page 57](#).

Measurement	Shows/hides the Measurement tools used for making a parameter measurement.
Function	Shows/hides the Function tools used for calculating and filtering a waveform data.
Trigger	Shows/hides the Trigger tools used for applying a trigger setup to the CX3300.
Analysis	Shows/hides the Analysis tools used for analyzing a waveform data.
Display	Shows/hides the Display tools used for displaying markers and annotations and for changing the plot appearance.

Sidebar

The following icons are available on the sidebar.



Opens the About dialog box which displays the software revision, serial number, and so on.



Opens the Setting dialog box used for acquisition, trigger, and channel setups.



Opens the Analysis dialog box used for analysis, function, and marker setups.



Layout. Shows/hides the menu used for setting ON/OFF of Analysis Views.



Launches the Power and Current Profiler.



Shows/hides the Auto Save toolbar at the bottom of Main Waveform. This toolbar is used to control the automatic data save function.



Opens the Save dialog box used for saving data.



Opens the Load dialog box used for loading data.



Help. Shows/hides shortcut to Data Sheet, User's Guide, Online Help, etc.

Utilities. Shows/hides shortcut to Configuration, Demo Wizard, Show Desktop, Close Window, etc.

Summary Bar

The following summary boxes are available on the summary bar. Clicking a summary box opens/closes the mini dialog box relative to it; Horizontal, Trigger, Digital, or an analog input channel.

- H** Shows the horizontal summary; scale (s/), offset (s), high resolution mode ON (HR) or OFF (none), sampling rate (Sa/s), and number of samples (pts).
- T** Shows the trigger setup summary; trigger type, slope/polarity/window/condition, trigger sweep, trigger source, and trigger (high) level.
- D** Shows the pulse symbol which indicates the graph scale (small/medium/large) for displaying the digital channel waveform.
- 1 / 2 / 3 / 4** Shows the analog channel setup summary; vertical scale, offset, sensor setup information, bandwidth, and measurement range.

Menu Bar

This bar is displayed by placing the mouse pointer on the top of the screen in the Full Screen mode, clicking on the top of the screen/window, or pressing the Alt key. The menu bar provides the File, Control, Setup, Trigger, Measure, Analyze, Utilities, and Help menus.

The menu bar will always be displayed if Utilities > Menu Bar is checked.

Status Bar

 
The status bar will always be displayed if Utilities > Status Bar is checked. The status bar provides shortcut to Event Log and shows the status information such as the LAN status and the front panel lock status.

Indicator Tray

Shows the status information such as the LAN status and the front panel lock status. If the status bar is on screen, the indicator tray is merged with the status bar.

Setting the Display and the Starting Condition

The following keys are available for setting up the CX3300 display and starting condition quickly. They are located in the Horizontal control on the front panel.




- To automatically set up the CX3300 for the present input signal(s), press the **Auto Scale** key. Auto scaling is applied to the waveform supported by the graph scale.
- To enable/disable the high resolution mode of acquisition, press the **High Reso** key. Enabling the mode automatically reduces sampling rate and memory depth to get clean waveforms. The **High Reso** key is lit when the mode is effective.
- To clear waveform on the graph, press the **Clear Display** key.

The CX3300 clears acquired waveform data from the graph in preparation for another acquisition. If the CX3300 is in Run mode and is receiving triggers, it will update the graph as it collects new waveform data.

Clearing the waveform also clears the analysis graph and data.

- To apply the default setup, press the **Default Setup** key.

 To enable/disable the touch screen, press the **Touch Panel** key located in the lower right corner on the front panel. The indicator is lit green when the touch panel operation is effective.




For setting up the CX3300 quickly, you can reuse the saved acquisition setup. To reuse the setup, click the Load icon on the sidebar. For saving the setup, see [“Saving and Printing Data” on page 64](#).

Starting and Stopping Waveform Acquisitions



Use the Run Control keys or the run control icons to start and stop waveform acquisitions or make a single acquisition.

The **Run/Stop** key is lit green and the green Run icon is highlighted when the CX3300 is running (acquiring data). The **Run/Stop** key is red and the red Stop icon is highlighted when the acquisition is stopped.

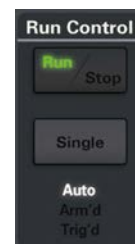

The run control icons and the waveform memory position indicator are placed above the waveform display area. The position indicator shows how much of acquisition memory is displayed on the graph. Waveform expresses all of the memory data. Square surrounds the data displayed on the graph. Orange vertical line indicates the timebase position. Moving the square changes data on the graph.

- To start waveform acquisition, press the **Run/Stop** key or click the Run icon. The CX3300 begins acquiring data. When it receives a trigger signal, it finishes acquiring data, updates the display, and then starts another acquisition cycle if it is in Trig'd or Auto trigger mode.
- To stop waveform acquisition, press the **Run/Stop** key or click the Stop icon. The CX3300 stops acquiring data. Whatever data was last acquired remains on the graph.
- To make a single acquisition, press the **Single** key or click the Single icon.

To set up how you want the signals to be sampled, such as sampling rate and mode, use the Setting dialog box (Setting > Acquisition). This dialog box is opened by clicking the Setting icon on the sidebar or pressing the **Menu** key located above the Horizontal control on the front panel.

Adjusting the Horizontal Scale and Timebase Position

Use the Horizontal control to set the horizontal scale (time per division) and the timebase (0 second) position and to magnify the waveform.

To adjust the horizontal scale and the timebase position, use the horizontal control knobs or the Setting dialog box (Setting > Timebase). This dialog box is opened by clicking the Setting icon on the sidebar or pressing the **Menu** key located above the Horizontal control on the front panel.



Horizontal setup is shown in the Horizontal summary on the summary bar which is located bottom of the screen. The summary shows the following information.

- Horizontal scale (s/, seconds per division)
- Horizontal center value (s, seconds), offset from the timebase
- High resolution mode ON (HR) or OFF (no indicator)
- Sampling rate (Sa/s, samples per second)
- Number of samples (pts, points), memory depth



Clicking the Horizontal summary opens/closes the Timebase mini dialog box used for quick setup.

Clicking the maximize button in the upper right corner of the mini dialog box opens the Setting dialog box (Setting > Timebase) used for detail setup.

To set timebase reference

Use the Timebase Reference slider on the Setting dialog box (Setting > Timebase). The timebase reference position can be defined by percentage of the graph width. 50% defines it as the center of the time axis. This position is indicated by the orange triangle at the bottom of the graph. See [Figure 2-4](#).

Adjusting the horizontal scale

- To stretch the waveform horizontally (fewer seconds per division), turn the horizontal scale knob clockwise. To shrink it horizontally (more seconds per division), turn the knob counter-clockwise.
- Pressing the knob enables or disables the fine mode which provides 1/10 setting resolution.
- Double-clicking the horizontal scale area below or above the graph opens the dialog box which allows you to specify the X-axis scale.
- Turning the mouse wheel on the horizontal scale area stretches or shrinks the waveform.

Adjusting the horizontal timebase position

- To move the timebase to the right, turn the horizontal position knob clockwise. To move it to the left, turn the knob counter-clockwise.

Moving the timebase to the right shows more of the pre-trigger data (data acquired before the trigger event). Moving the waveform to the left shows more of the post-trigger data.
- Pressing the knob sets the timebase (0 second) to the timebase reference position.
- Clicking and dragging the waveform or the graph moves the waveform on the graph if the Move/Zoom icon is Move.

Magnifying a part of the waveform

- To magnify/demagnify the waveform, turn the mouse wheel on the X-axis.
- Clicking and dragging the graph magnifies the waveform if the Move/Zoom icon is Zoom.
- To enable/disable zoom, press the **Zoom** key in the horizontal control.


When the **Zoom** key lights, the graph area splits into two regions. The top one is the main timebase. The bottom is the zoomed timebase, which represents an expansion of the acquired waveform data. Square on the main view indicates the zoomed waveform.

The horizontal control knobs change how the waveform is shown in the zoom view. The horizontal scale knob changes the amount of magnification. The horizontal position knob moves the square.

Adjusting the Vertical Settings

Use the Vertical control to set the vertical scale (amperes per division or volts per division) and the vertical offset and to magnify the waveform.

To adjust the vertical scale and the vertical offset, use the vertical control knobs or the Setting dialog box (Setting > Channels > Channel *N*, where *N* is 1, 2, 3, or 4). This dialog box is opened by clicking the Setting icon on the sidebar or pressing the **Menu** key located above the Horizontal control on the front panel.

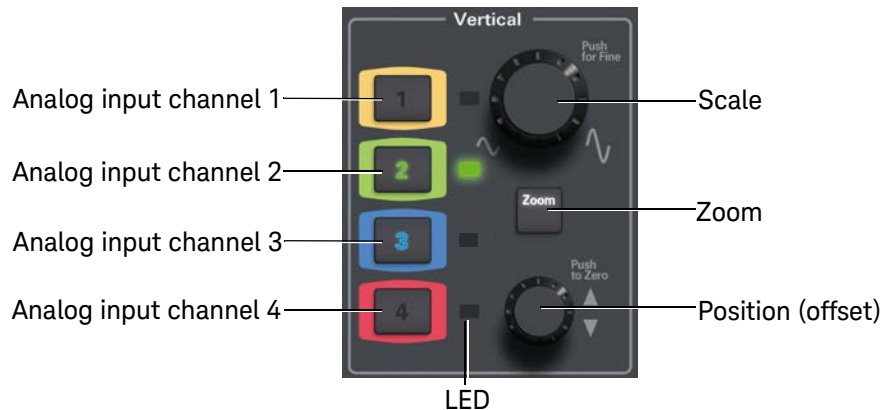

To change channel status

To enable or disable the analog input channel, press the # key (#: 1, 2, 3, or 4) associated with the channel.

Pressing the # key changes the channel status as shown below.



Graph displays the waveforms for the channels in the ON status.

Vertical control and graph scaling are effective only for the channel indicated by the LED which lights (ON).

Vertical setup is shown in the Channel summary on the summary bar which is located bottom of the screen. The summary shows the following information.

- Vertical scale (A/ or V/, amperes per division or volts per division)
- Vertical center value (A or V, amperes or volts), offset from 0 A or 0 V
- Sensor setup information (DC, AC, LPF, IF, or blank)
 - DC: DC coupling
 - AC: AC coupling
 - LPF: low pass filter ON
 - IF: current offset ON
- Band width (Hz, hertz), approximate value automatically calculated by considering the measurement range, the sampling rate, and filters
- Measurement range



Clicking the Channel summary opens/closes the Channel *N* mini dialog box used for quick setup.

Clicking the maximize button in the upper right corner of the mini dialog box opens the Setting dialog box (Setting > Channels > Channel *N*) used for detail setup.

Adjusting the vertical scale

- To make the waveform bigger (fewer amperes per division or fewer volts per division), turn the vertical scale knob clockwise. To make it smaller (more amperes per division or more volts per division), turn the knob counter-clockwise.
- Pressing the knob enables or disables the fine mode which provides 1/10 setting resolution.
- Double-clicking the vertical scale area on the right or left of the graph opens the dialog box which allows you to specify the Y-axis scale.
- Turning the mouse wheel on the vertical scale area makes the waveform bigger or smaller.

Adjusting the vertical offset

- To move the waveform toward the top of the display, turn the vertical position knob clockwise. To move it toward the bottom, turn the knob counter-clockwise.
- Pressing the knob sets the 0 ampere or 0 volt to center (zero offset).
- Clicking and dragging the waveform or the graph moves the waveform on the graph if the Move/Zoom icon is Move.

Magnifying a part of the waveform

- To magnify/demagnify the waveform, turn the mouse wheel on the Y-axis.
- Clicking and dragging the graph magnifies the waveform if the Move/Zoom icon is Zoom.
- To enable/disable zoom, press the **Zoom** key in the vertical control.

When the **Zoom** key lights, the graph area splits into two regions. The top one is the main waveform. The bottom is the zoomed waveform, which represents an expansion of the acquired waveform data. Square on the main view indicates the zoomed waveform.

The vertical control knobs change how the waveform is shown in the zoom view. The vertical scale knob changes the amount of magnification. The vertical position knob moves the square.

NOTE

Turning the mouse wheel on the graph

If the Move/Zoom icon is Zoom, this operation magnifies or demagnifies the waveform in the both horizontal and vertical directions.

If the Move/Zoom icon is Move, this operation magnifies or demagnifies the waveform in the horizontal direction.

Setting Up Triggers

Use the Trigger control to set the conditions on which the CX3300 will trigger and acquire an input signal. Edge triggers and the parameters for edge triggering can be set up from the front panel.

You can set up a variety of trigger conditions by using the Setting dialog box (Setting > Trigger). Trigger settings you make on this dialog box are reflected in the front panel status indicators, and will remain set unless you change them or press the **Default Setup** key.



Trigger setup is shown in the Trigger summary on the summary bar which is located bottom of the screen. The summary shows the following information.

- Trigger type (Edge, Transition, Glitch, PulseWidth, and so on)
- Slope, polarity, window, or condition (Positive, Negative, Either, and so on)
- Trigger sweep (Auto or Trig'd (triggered))
- Trigger source (Channel 1, 2, 3, 4, or AUX)
- Trigger (high) level



Clicking the Trigger summary opens/closes the Trigger mini dialog box used for quick setup.

Clicking the maximize button in the upper right corner of the mini dialog box opens the Setting dialog box (Setting > Trigger) used for detail setup.

Setting the CX3300 for an edge trigger

1. Press the **Source** key until the desired source LED is lit.

You can choose any of the channels or the Aux Trig or Line input as the source for an edge trigger.

2. Press the **Slope** key until the desired slope LED is lit.

You can have an edge trigger on a rising or falling edge, or both.

3. Press the **Sweep** key until the desired LED is lit (Trig'd or Auto).

When Trig'd is selected, the CX3300 must find the trigger before capturing and displaying data.

When Auto is selected, if a trigger does not occur within a certain amount of time, an acquisition is automatically saved and displayed. In Auto trigger mode, you are able to see your signals while setting up the desired trigger.


4. Turn the Level knob to adjust the current or voltage level at which the CX3300 will trigger.

You can also drag the trigger level indicator at the left side of the display to adjust the level. See [Figure 2-4](#) for the trigger level indicator.

Pressing the knob changes the trigger level to half.

NOTE

Use the Trigger tool palette to use several trigger types. Drag and drop operation applies the trigger setup to the CX3300. Double-clicking the icon can substitute for this drag and drop operation.

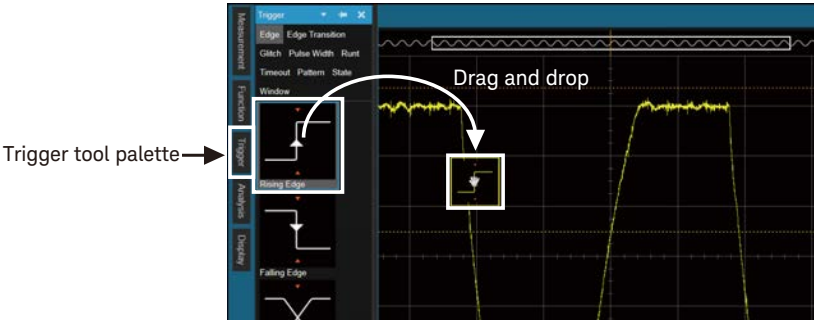


You can also use the Setting dialog box (Setting > Trigger) to select any of the different types of triggering, the parameters and conditions for each trigger type, and advanced configuration items.

Making a Measurement and Using Useful Tools

This section contains the following subsections which describe how to make a measurement and how to use markers, math functions, filters, analysis tools, quick actions, and digital channels.


- “Making a measurement on a waveform”
- “Using makers”
- “Using math functions and filters”
- “Using analysis tools”
- “Using quick actions”
- “Controlling digital channels”

Figure 2-4 Screen Image of the CX3300 Application

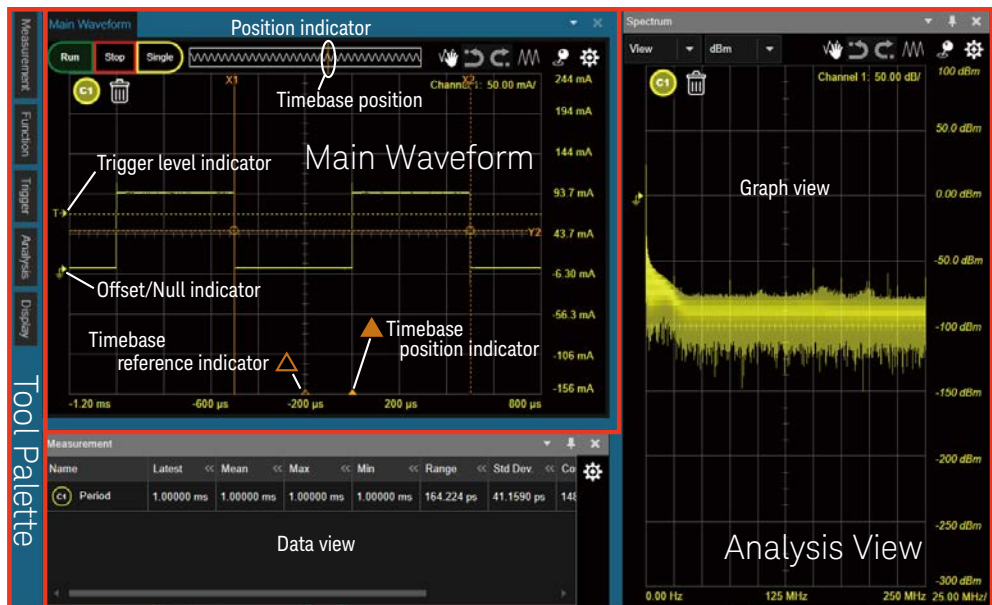

Making a measurement on a waveform

Measurement can be activated from the Measurement tool palette. To make a measurement, drag and drop a measurement icon on the waveform event you want to measure. Double-clicking the icon can substitute for this drag and drop operation.

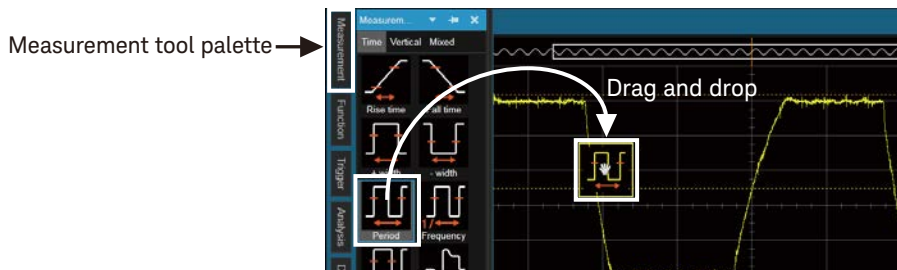

For example, drag and drop the Period icon on the waveform as shown above. The period of the wave is measured by using the data closest to the point where you drop the icon. The measurement value is displayed in the Measurement data view which appears below the Main Waveform as shown in [Figure 2-4](#).

The Measurement data view shows the latest value (Latest), the mean value (Mean), the maximum value (Max), the minimum value (Min), the Max-Min value (Range), the standard deviation (Std Dev.), the data count (Count), and the waveform acquisition start and stop positions (Start and Stop).

The Measurement tool palette provides several icons used for measuring the following parameters and so on.

- Time — Rise time, Fall time, Period, Frequency, Duty cycle, etc.
- Vertical — Peak-to-peak, Minimum, Maximum, Amplitude, etc.
- Mixed — Slew rate and Area

NOTE

When you drag an icon on a waveform, the icon outline changes color to match the color of the waveform it touches so you can easily see which waveform is target.

You can also use the Analysis dialog box (Analysis > Measurements) to make a measurement. The dialog box is opened by clicking the Analysis icon on the sidebar. You can specify the position of measurement. Initially, it is the timebase (0 second) position.

Using makers

The CX3300 supports the following markers.

- Cross hair marker

Reads X and Y measurement data (X, Y) on a waveform and displays the values X and Y in the Marker data view below the Main Waveform. If the marker mode is set to Manual (this is as same as removing the check from Track on the context menu opened by right-clicking on the marker), the marker reads X and Y values of the specified point on the graph.

- A-B marker

Reads X and Y measurement data (X1, Y1) and (X2, Y2) on a waveform and displays the values X1, X2, Y1, Y2, X2-X1, Y2-Y1, and $1/(X2-X1)$ in the Marker data view. If the marker mode is set to Manual, the A-B marker reads X and Y values of the specified points on the graph.

- Area marker

Obtains the integration value and the average value of the data within the specified area on a waveform and displays the Area data view below the Main Waveform.

The Area data view shows Area (integration value), Average, Max, Min, P-P (peak-to-peak), RMS (root mean square), Count, Start (area minimum time), Stop (area maximum time), and Baseline (integration baseline).

Marker can be activated from the Display tool palette. To display a maker, drag and drop a marker icon on a waveform.

The Display tool palette provides the following icons used for displaying markers and annotations and for changing the plot appearance.

- Markers — Cross, A-B, Area, Area (+width), Area (-width), Area (Period), and OFF
- Annotations — Display and Waveform
- Persistence — Normal, Infinity, 10 s, etc.
- Plot — Auto, Dots, Lines, Area, Gradation, and Diamonds
- Axis — Auto, Linear, Log, Invert, X1 and Y1, Show All, etc.
- Waveform Memories — Memory 1 to Memory 8

NOTE

You can also use the Analysis dialog box (Analysis > Display > Markers) to display markers. The dialog box is opened by clicking the Analysis icon on the sidebar.

Using math functions and filters

Math function can be activated from the Function tool palette. To use a math function, drag and drop a function icon on a waveform. The calculation result is displayed on the Main Waveform. Double-clicking the icon can substitute for this drag and drop operation.

The Function tool palette provides the following icons used for calculating and filtering a waveform data.


- Math — Add, Subtract, Multiply, Divide, Absolute, Average, Invert, Magnify, Max, Min, Differentiate, Integrate, Square, and Square Root
- Filter — High Pass filter, Low Pass filter, and Smoothing

NOTE

You can also use the Analysis dialog box (Analysis > Functions) to use the math functions. The dialog box is opened by clicking the Analysis icon on the sidebar.

For example, drag and drop the 1 MHz Low Pass filter icon on the Channel 1 waveform when no Function is used. The Channel 1 waveform is filtered by the 1 MHz low pass filter and the Function 1 waveform is plotted on the same graph.

The following image shows an example of the CX3300 screen. The Main Waveform displays two graphs. The top one shows the Channel 1 waveform and the bottom shows the Function 1 waveform. The Measurement data view shows the Frequency measurement result of the Function 1 waveform and the Spectrum graph view shows the spectrum plot of the Function 1 waveform.

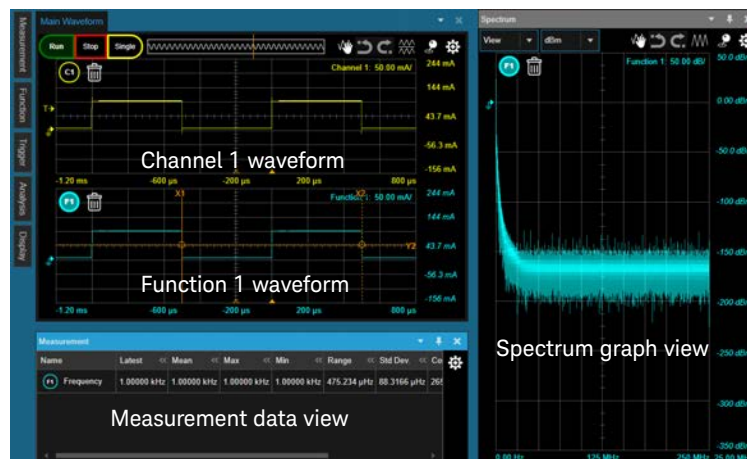

Using analysis tools

Analysis tool can be activated from the Analysis tool palette. To use an analysis tool, drag and drop an analysis icon on a waveform.

The Analysis tool palette provides the following icons used for analyzing a waveform data.

- Area
Same as the area marker. See [“Using makers” on page 59](#).
- Histogram
Displays the histogram in the Amplitude graph view which appears on the right side of the Main Waveform and displays the statistical data in the Amplitude data view which appears below the Main Waveform.
- CCDF
Displays the CCDF curve in the Amplitude graph view which appears on the right side of the Main Waveform and displays the statistical data in the Amplitude data view which appears below the Main Waveform.
- Spectrum
Displays the spectrum plot in the Spectrum graph view which appears on the right side of the Main Waveform.
- Profiler
Launches the power and current profiler. Refer to the CX3300 online help.
- Memory
Saves the waveform in a usable waveform memory and displays it.
- XY
Displays the XY plot in the XY graph view which appears on the right side of the Main Waveform. The mini dialog box may be opened to specify the X and Y data.

The Amplitude data view shows the latest value (Latest), the mean value (Mean), the maximum value (Max), the minimum value (Min), the Max-Min value (Range), the standard deviation (Std Dev.), the data count (Count), and the X and Y minimum and maximum values (X Start, X Stop, Y Min, and Y Max) of the data used for calculation.

NOTE

You can also use the Analysis dialog box (Analysis > Methods) to use the analysis tools. The dialog box is opened by clicking the Analysis icon on the sidebar.

Using quick actions

The CX3300 supports the following quick actions. One of these quick actions can be performed by pressing the **Multi Purpose** key. Initially, QuickSave is set.

- Auto Save — starts or stops the automatic data save
- QuickSave — saves the specified data to a file
- QuickScreen — saves the screen image to a file
- QuickSetup — loads a setup file
- QuickExecute — runs an executable file

The action taken when the **Multi Purpose** key is pressed depends on the feature selected in the Configuration dialog box (Configuration > Multipurpose) opened by pressing the **Menu** key several times. The **Menu** key is located above the Horizontal control on the front panel.

Controlling digital channels

The digital channels are available for the CX3324A. Connect the CX1152A Digital Channel to the Digital D7-D0 connector on the CX3324A rear panel.

To start controlling the digital channels, use the Digital Channel summary on the summary bar which is located at the bottom of the screen. The summary shows a pulse symbol which indicates the graph scale small, medium, or large if a digital channel has been enabled. If no digital channel has been enabled, the summary shows the character “D” only.



Summary bar

Digital Channel summary

Click the Digital Channel summary to open the Digital Channels mini dialog box. On the mini dialog box, check the D_n check box (n : 0, 1, 2, 3, 4, 5, 6, or 7) for the digital channels to enable.

Clicking the maximize button in the upper right corner of the mini dialog box opens the Setting dialog box (Setting > Digital Channels) used for detail setup.

Saving and Printing Data

- To save data** Click the Save icon on the sidebar and use the Save dialog box. The following data types are supported.
- Waveform (HDF5 (.cxwav or .h5), CSV, or TSV format)
Waveform data
 - Report (XPS format)
Outputs the measurement and analysis result report in the dedicated style.
 - Composite (HDF5 (.cxcomp) format)
All setup data and waveform data
 - Screen Capture (PNG, JPG, or BMP format)
Image of the CX3300 full screen
 - Setup (HDF5 (.cxset) format)
All setup data or trigger setup data only (selectable)
- To print data** The CX3300 does not have the user interface for printing. To print data, save the data, minimize the CX3300 application, and use a Windows application associated with the data type. Or use an external PC.
- To load data** The CX3300 also supports data load to reuse the data. Click the Load icon on the sidebar and use the Load dialog box. The following data types are supported.
- Waveform (HDF5 (.cxwav or .h5) format)
 - Composite (HDF5 (.cxcomp) format)
Selectable load types: Composite (Setup and Waveforms), Only Waveforms, and Only Setup
 - Setup (HDF5 (.cxset) format)

Forcing a Default Setup

If your CX3300 is not working properly when you start it up, follow these steps to perform a default setup and return the CX3300 to normal operation.

1. Press the **Default Setup** key.
2. If the CX3300 is still not working properly:
 - a. Press the **Menu** key several times to open the Configuration dialog box. The **Menu** key is located above the Horizontal control on the front panel.
 - b. Click **Setups** to display the Configuration > Setups screen.
 - c. Click the **Factory Defaults** button to return the CX3300 to the default settings it had when it left the factory.
3. If the CX3300 is still not working properly, turn it off.
4. Turn the CX3300 back on. If it does not successfully restart, try recycling the power again.
5. If the CX3300 still does not successfully restart, follow the instructions for recovering the SSD.

SSD Recovery

Follow these steps to recover your CX3300 solid state drive.

1. Turn off the CX3300.
2. Connect the keyboard to a USB host port of the CX3300.
3. Connect the mouse to a USB host port of the CX3300.
4. Press the Standby switch on the CX3300 front panel.
5. On the Windows boot selection screen, select “Instrument Image Recovery System”.
6. Follows the on-line instruction to proceed the recovery.

Using Online Help

Most of the information about using the CX3300 effectively is included in the online help.

Accessing the Online Help

Click the Help icon on the sidebar and click the On-line Help (.chm) button to open the online help. You can move it around the screen or resize it to make it easier to use.

The online help may hide behind the Main Waveform screen. Then click the Help icon and the On-line Help (.chm) button again. It will appear on the same position with the same topic when it is hidden.

Navigating the Online Help

The online help provides several ways to find the information you need.

Use the Contents tab to browse topics in the help system by clicking topics in the left pane.

Use the Index tab to type in a keyword and search the index for that keyword or scroll through the list to find a topic.

Use the Search tab to type in a keyword and if that word exists in the online help, a list of topics containing the keyword appears.

Use the Favorites tab to add preferred help topics to a list for easy reference.

3 Performing User Calibration

Using the CX1101A/CX1102A/CX1103A 68

Using the CX1104A 77

Using the CX1105A 79

Using the CX1151A 81

User calibration allows you to perform error correction of measurement data. This is effective for making more accurate measurements. This chapter describes how to perform the user calibration.

The user calibration must be performed after warming-up of 30 minutes.

The user calibration is effective for:

- the environmental temperature of 0 to 40 °C
- ± 3 °C from the temperature when the last user calibration is performed
- 24 hours since the last user calibration is performed

All of the user calibration data is cleared by applying the factory default. The data is not cleared by turning the CX3300 off.

Using the CX1101A/CX1102A/CX1103A

The CX3300 provides the two types of user calibration for the CX1101A/CX1102A/CX1103A. You can select one before starting the user calibration.

- Gain/Offset user calibration

The user calibration data, Gain and Offset [A], is acquired and is used for error correction. Effective for reducing the gain error and the offset error.

- Offset user calibration

The user calibration data, Offset [A], is acquired and is used for error correction. Effective for reducing the offset error.

Preparation: Before starting the user calibration, connect the CX1101A/CX1102A/CX1103A to the CX3300 analog input channel.

If you connect the CX1101A/CX1102A, attach the CX1203A sensor head to it. And set the CX1203A slide switch to 0 Ω .

After the connection, warm up them for 30 minutes.


Procedure: You can perform the user calibration as shown below.

1. Press the **Menu** key several times to open the Configuration dialog box. The **Menu** key is located above the Horizontal control on the front panel.
2. Click User Calibration to display the Configuration > User Calibration screen.
3. Click the Gain/Offset or Offset radio button for the channel under user calibration.
4. Click the Execute button for the channel.

You will see a dialog box which asks you to connect the CX1101A/CX1102A/CX1103A input to the Aux Out terminal. Then connect them as shown in **Figure 3-1** and click Yes.

The user calibration will start.

Figure 3-1 Connection Diagram for User Calibration (CX1101A/CX1102A/CX1103A)

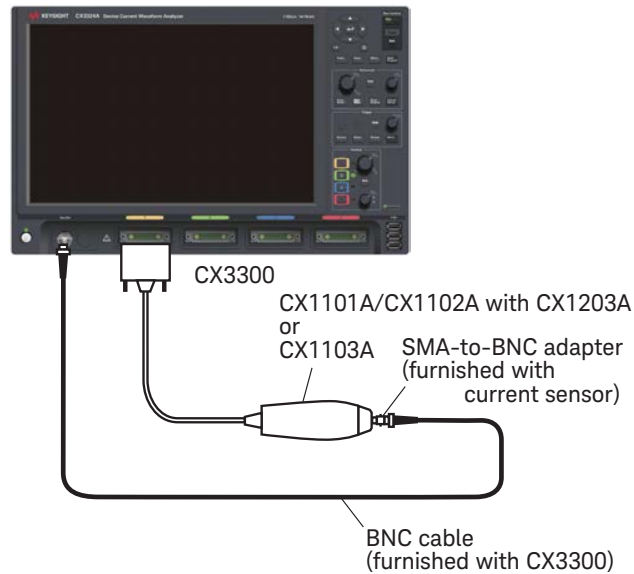

After the channel passed the user calibration, the ON/OFF switch will be available.

- Set ON to enable error correction.
Error correction is performed for the data measured by this channel from now on.
- Set OFF to disable error correction.
Error correction is not performed.

If the channel failed the user calibration, the ON/OFF switch is not available.
Error correction is not performed.

Once you disconnect the CX1101A/CX1102A/CX1103A from the CX3300, the user calibration data for this channel will be cleared.

Using the CX1206A Sensor Head


The CX3300 cannot acquire the user calibration data of the CX1101A connected to the CX1206A. Initially, the Gain value is set to 1 and the Offset value is set to 0. If you want to use the user calibration capability, you need to obtain the Gain and Offset values and enter the values to the CX3300 manually.

To obtain the user calibration data, you need a current source which supports ± 10 A output.

This section describes how to obtain the user calibration data by using the following equipment and accessories.

- Keysight B2900 (B2901A/B2902A/B2911A/B2912A) or equivalent
- BNC-to-banana adapter, 2 ea.
- BNC cable, 24 inches, 1ea., furnished with the CX3300

Figure 3-2 Connection Diagram

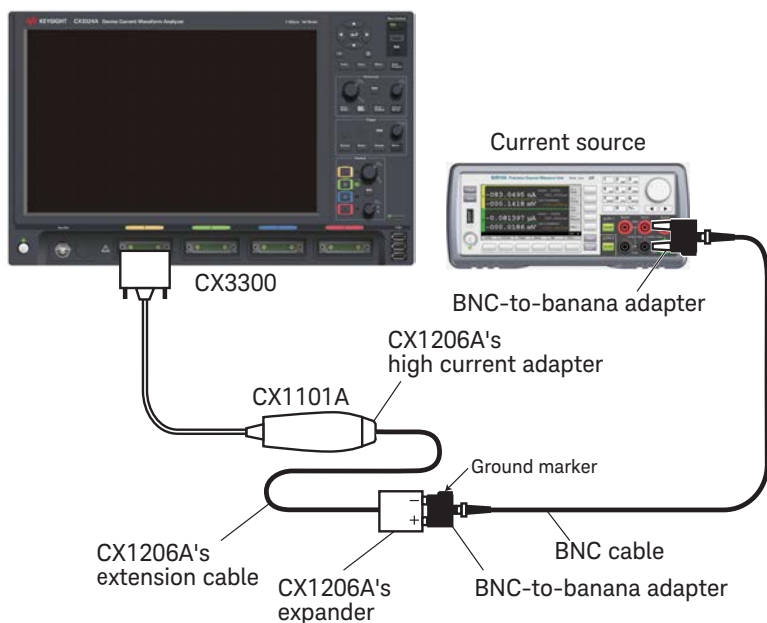

- Procedure:**
1. Turn the CX3300 and the current source (Keysight B2900) on.
 2. Attach the CX1206A to the CX1101A.
 3. Connect the CX1101A to the CX3300.
 4. Warm up the equipments. Required warm-up time is shown below.
 - CX3300: 30 minutes after connecting the CX1101A
 - B2900: 60 minutes after power-on
 5. Connect the equipments as shown below. Also see **Figure 3-2**.
 - a. Connect a BNC-banana adapter to the B2900 Force terminals. Then the ground marker must come to the Low side.
 - b. Connect a BNC-banana adapter to the CX1206A input. Then the ground marker must come to the – (minus) side.
 - c. Connect a BNC cable between the BNC-to-banana adapters.
 6. Disable the user calibration for the channel connected to the CX1101A/CX1206A as shown below.
 - a. Press the **Menu** key several times to open the Configuration dialog box. The **Menu** key is located above the Horizontal control on the front panel.
 - b. Click User Calibration to display the Configuration > User Calibration screen.
 - c. Set the ON/OFF switch to OFF for the channel connected to the CX1101A/CX1206A.

In the example of **Figure 3-2**, the ON/OFF switch of the Channel 1 must be set to OFF to disable the user calibration.
 7. Perform a positive current measurement for both High Resolution mode OFF and ON as shown below.
 - a. Press the **Menu** key located in the Trigger control on the CX3300 front panel. And set the CX3300 as follows.

In the following condition, Channel *N* is the channel connected to the CX1101A/CX1206A. Where, *N* is the channel number 1, 2, 3, or 4.

Performing User Calibration
Using the CX1101A/CX1102A/CX1103A

Condition:

Setting > Acquisition screen:

- Acquisition Mode: Normal
- High Resolution Mode: OFF
- Sampling Rate: 1 MSa/s
- Memory Depth: 1 Mpts
- Sin(x)/x Interpolation: OFF
- Averaging: OFF

Setting > Timebase screen:

- Scale: 200 μ s/
- Position: 300 μ s
- Timebase Reference: 50%

Setting > Trigger screen:

- Source: Channel *N*
- Trigger type: Edge
- Slope: Positive
- Level: 5 A
- AND Qualifier: OFF

Setting > Trigger > Conditioning screen:

- Sweep Mode: Trig'd
- Hold-off: 100 ns
- HF Reject: OFF
- Noise Reject: OFF

Setting > Channels > Channel *N* screen:

- Channel *N*: ON
- Scale: 5 A/
- Offset: 0 A
- Bandwidth Limit: OFF
- Invert Polarity: OFF

Setting > Sensor/Probe > Channel *N* screen:

- Channel *N*: ON
- Current Range: 10 A

Setting > Digital Channels screen:

- Digital Channels: OFF

- b. Control the current source (Keysight B2900) and apply the current of the following condition. For setting up the current source, refer to its *User's Guide*.

Condition:


- Pulse base: 0 A
- Pulse peak: +10 A
- Pulse width: 1 ms
- Duty cycle: $\leq 2.5\%$ for the Keysight B2900 series

- c. Control the CX3300 and acquire the waveform as shown below.

1. Press the **Run/Stop** key to start waveform acquisition.
2. Acquire the waveform as shown in **Figure 3-3**.
3. Press the **Run/Stop** key to stop waveform acquisition.

4. Open the Display tool palette and drag and drop the A-B marker icon on the waveform.
5. Put the X1 line on the -200 μs position.
6. Put the X2 line on the 800 μs position.
7. Read the marker Y1 and ΔY values and record them as follows.
 - $\text{loff_positive} = \Delta Y$
 - $\text{loff_offset} = Y1$


Figure 3-3 Positive Pulse Acquisition

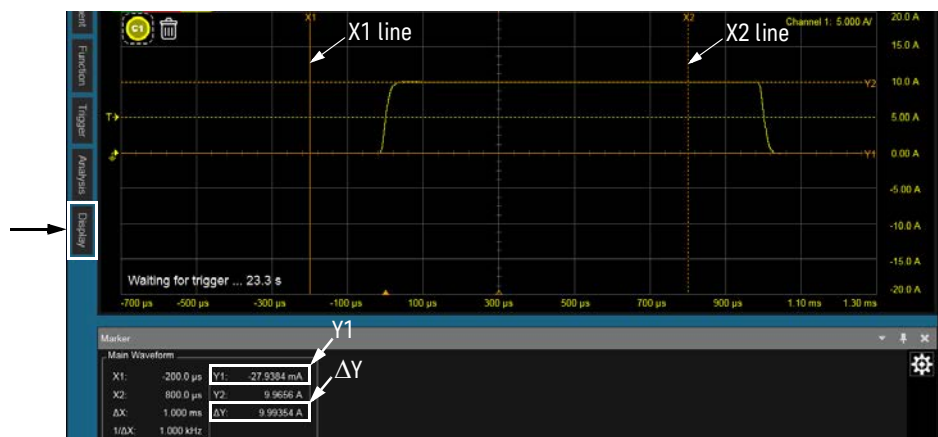

- d. Press the **High Reso** key to set the high resolution mode ON. The **High Reso** key is located in the Horizontal control on the CX3300 front panel.
- e. Control the CX3300 and acquire the waveform as same as the step 3-c. And read the marker Y1 and ΔY values then record them as follows.
 - $\text{lon_positive} = \Delta Y$
 - $\text{lon_offset} = Y1$
- f. Disable the current source (Keysight B2900) output.

8. Perform a negative current measurement for both High Resolution mode ON and OFF as shown below.
 - a. Press the **Menu** key located in the Trigger control on the CX3300 front panel. And set the following values on the Setting > Trigger screen.
 - Slope: Negative
 - Level: -5 A
 - b. Control the current source (Keysight B2900) and apply the current of the following condition.
Condition:
 - Pulse base: 0 A
 - Pulse peak: -10 A
 - Pulse width: 1 ms
 - Duty cycle: $\leq 2.5\%$ for the Keysight B2900 series
 - c. Control the CX3300 and acquire the waveform as same as the step 3-c. And read the marker ΔY value then record it as follows.
 - $I_{on_negative} = \Delta Y$

Figure 3-4 Negative Pulse Acquisition

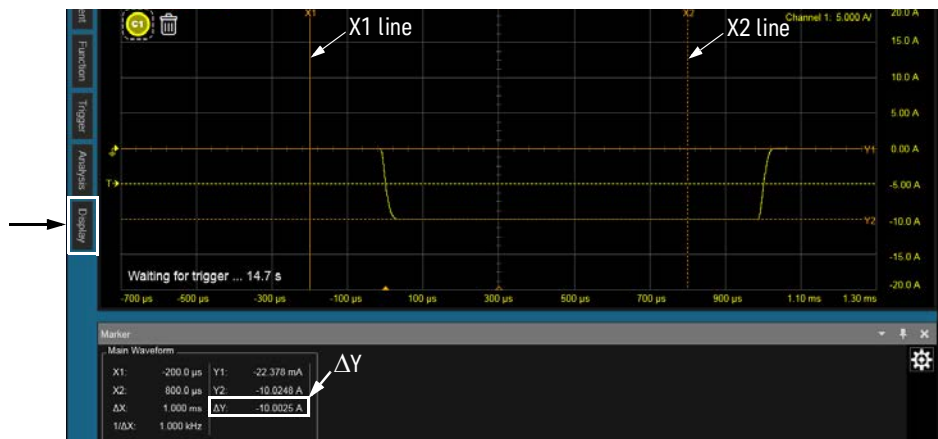

- d. Press the **High Reso** key to set the high resolution mode OFF.
 - e. Control the CX3300 and acquire the waveform as same as the step 3-c.
And read the marker ΔY value then record it as follows.
 - $\text{loff_negative} = \Delta Y$
 - f. Disable the current source (Keysight B2900) output.
9. Set the 10 A range user calibration data as shown below.
- a. Press the **Menu** key several times to open the Configuration dialog box. The **Menu** key is located above the Horizontal control on the front panel.
 - b. Click User Calibration and click Channel *N* to display the Configuration > User Calibration > Channel *N* screen. Where Channel *N* is the channel connected to the CX1101A/CX1206A. In the example of **Figure 3-2**, *N* is 1.
 - c. Fill in the Gain and Offset fields as shown below.

High Resolution Mode: OFF
Gain=A
Offset= $-\text{loff_offset}$

High Resolution Mode: ON
Gain=B
Offset= $-\text{lon_offset}$

Where, A and B values can be calculated by the following formulas.
 - $A = 20 / (\text{loff_positive} - \text{loff_negative})$
 - $B = 20 / (\text{lon_positive} - \text{lon_negative})$
 - d. Click the Apply button to memorize the Gain and Offset values.
- To enable the user calibration, set the ON/OFF switch to ON.

Using the CX1104A

The CX3300 provides the offset user calibration for the CX1104A.

The user calibration data, Offset [A], is acquired and is used for error correction. Effective for reducing the offset error.

Preparation: Before starting the user calibration, connect the CX1104A to the CX3300 analog input channel.

Prepare a resistive sensor head (CX1211A, CX1212A, CX1213A, CX1214A, CX1215A, or CX1216A).

After the connection, warm up them for 30 minutes.


Procedure: You can perform the user calibration as shown below.

1. Press the **Menu** key several times to open the Configuration dialog box. The **Menu** key is located above the Horizontal control on the front panel.
2. Click User Calibration to display the Configuration > User Calibration screen.
3. Click the Execute button for the channel under user calibration.

You will see a dialog box which asks you to connect a resistive sensor head to the CX1104A input using the extension cable. Then connect them as shown in **Figure 3-5** and click Yes.

The user calibration will start.

Figure 3-5 Connection Diagram for User Calibration (CX1104A)

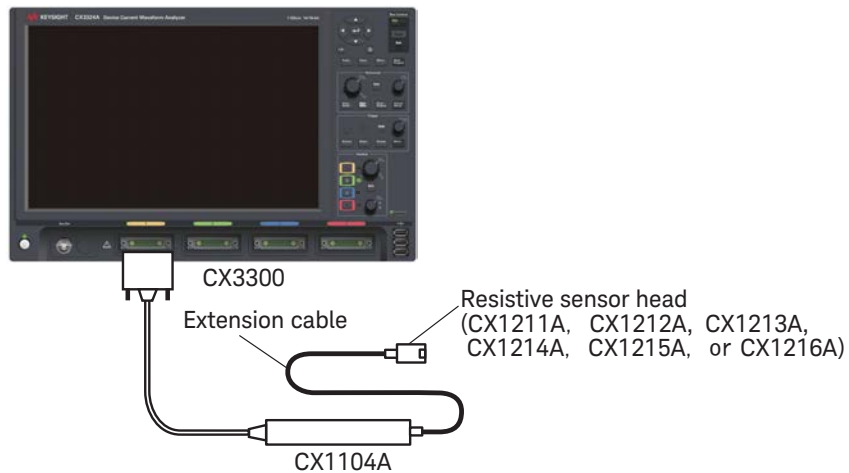

After the channel passed the user calibration, the ON/OFF switch will be available.

- Set ON to enable error correction.
Error correction is performed for the data measured by this channel from now on.
- Set OFF to disable error correction.
Error correction is not performed.

If the channel failed the user calibration, the ON/OFF switch is not available.
Error correction is not performed.

Once you disconnect the CX1104A from the CX3300, the user calibration data for this channel will be cleared.

Using the CX1105A

The CX3300 provides the offset user calibration for the CX1105A.

The user calibration data, Offset [V], is acquired and is used for error correction. Effective for reducing the offset error.

Preparation: Before starting the user calibration, connect the CX1105A to the CX3300 analog input channel.

Prepare the test adapter.

After the connection, warm up them for 30 minutes.


Procedure: You can perform the user calibration as shown below.

1. Press the **Menu** key several times to open the Configuration dialog box. The **Menu** key is located above the Horizontal control on the front panel.
2. Click User Calibration to display the Configuration > User Calibration screen.
3. Click the Execute button for the channel under user calibration.

You will see a dialog box which asks you to connect the test adapter to the CX1105A input. Then connect them as shown in **Figure 3-6** and click Yes.

The user calibration will start.

Figure 3-6 Connection Diagram for User Calibration (CX1105A)

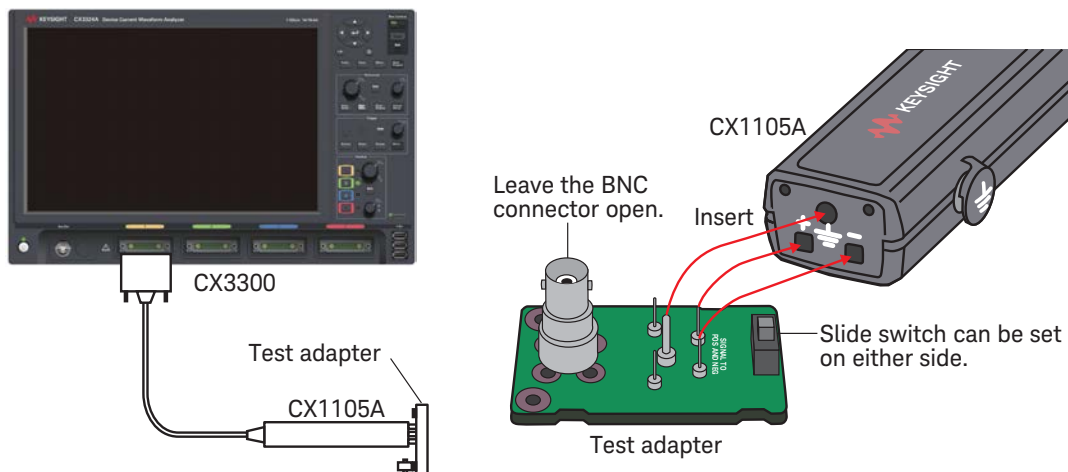

After the channel passed the user calibration, the ON/OFF switch will be available.

- Set ON to enable error correction.

Error correction is performed for the data measured by this channel from now on.

- Set OFF to disable error correction.

Error correction is not performed.

If the channel failed the user calibration, the ON/OFF switch is not available.
Error correction is not performed.

Once you disconnect the CX1105A from the CX3300, the user calibration data for this channel will be cleared.

Using the CX1151A

The CX3300 provides the two types of user calibration for the CX1151A. You can select one before starting the user calibration.

- Gain/Offset user calibration

The user calibration data, Gain and Offset [V], is acquired and is used for error correction. Effective for reducing the gain error and the offset error.

- Offset user calibration

The user calibration data, Offset [V], is acquired and is used for error correction. Effective for reducing the offset error.

Preparation: Before starting the user calibration, connect the CX1151A to the CX3300 analog input channel.

After the connection, warm up them for 30 minutes.


Procedure: You can perform the user calibration as shown below.

1. Press the **Menu** key several times to open the Configuration dialog box. The **Menu** key is located above the Horizontal control on the front panel.
2. Click User Calibration to display the Configuration > User Calibration screen.
3. Click the Gain/Offset or Offset radio button for the channel under user calibration.
4. Click the Execute button for the channel.

You will see a dialog box which asks you to connect the CX1151A input to the Aux Out terminal. Then connect them as shown in **Figure 3-7** and click Yes.

The user calibration will start.

Figure 3-7 **Connection Diagram for User Calibration (CX1151A)**

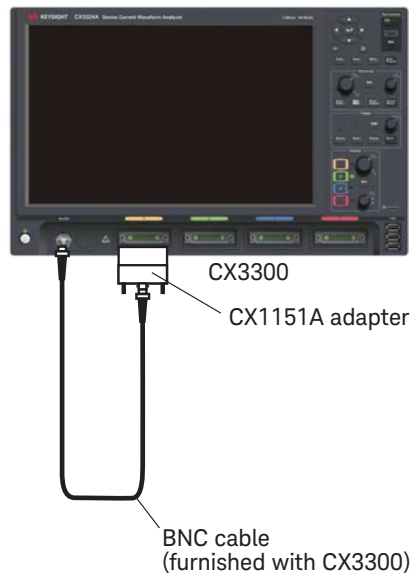

After the channel passed the user calibration, the ON/OFF switch will be available.

- Set ON to enable error correction.

Error correction is performed for the data measured by this channel from now on.

- Set OFF to disable error correction.

Error correction is not performed.

If the channel failed the user calibration, the ON/OFF switch is not available.
Error correction is not performed.

Once you disconnect the CX1151A from the CX3300, the user calibration data for this channel will be cleared.

4 Safety Information

Safety Summary	84
Safety Symbols	86
Product Stewardship	88
Precautionary Statement	89
Working in Comfort	90

Safety Summary

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual may impair the protections provided by the instrument. In addition, it violates safety standards of design, manufacture, and intended use of the instrument. Keysight Technologies assumes no liability for the customer's failure to comply with these requirements.

Product manuals may be provided on CD-ROM or in printed form. Printed manuals are an option for many products. Manuals may also be available on the Web. Go to www.keysight.com and type in the product model number in the Search field at the top of the page.

NOTE

Do not use this instrument in any manner not specified by the manufacturer. The protective features of this instrument may be impaired if it is used in a manner not specified in the operation instructions.

This instrument is an INDOOR USE product.

This instrument complies with INSTALLATION CATEGORY II for mains input and INSTALLATION CATEGORY I for measurement input terminals, and POLLUTION DEGREE 2 defined in IEC 61010-1.

If an instrument is marked CAT I (IEC Measurement Category I), or it is not marked with a measurement category, its measurement terminals must not be connected to line-voltage mains.

Safety of any system incorporating the equipment is the responsibility of the assembler of the system.

DANGEROUS PROCEDURE WARNINGS

Warnings, indicated by red WARNING mark, shall be complied. Procedures throughout in this manual prevent you from potential hazard. Their instructions contained in the warnings must be followed.

BEFORE APPLYING POWER

Verify that all safety precautions are taken. Note the instrument's external markings described under “**Safety Symbols**”.

GROUND THE INSTRUMENT

This is Safety Class I instrument. To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The power terminal and the power cord must meet International Electrotechnical Commission (IEC) safety standards.

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE

Do not operate the instrument in the presence of flammable gases, corrosive gases, or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

DO NOT REMOVE COVERS

No operator serviceable parts inside. Refer servicing to qualified personnel. To prevent electrical shock do not remove covers.

IN CASE OF DAMAGE

Instruments that appear damaged or defective should be made inoperative and secured against unintended operation until they can be repaired by qualified service personnel. Return the instrument to a Keysight Technologies sales or service office for services and repair to ensure that safety features are maintained.

USE ONLY THE SPECIFIC ACCESSORIES

Specific accessories satisfy the requirements for specific characteristics for using the instrument. Use the specific accessories, cables, adapters, and so on for safety reasons.

Safety Symbols

The general definitions of safety symbols used on equipment or in manuals are listed below.

WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

CAUTION

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

— — — Direct current.

~ Alternating current.

⊥ Earth ground terminal.

⓪ Protective conductor terminal. For protection against electrical shock in case of a fault. Used with field wiring terminals to indicate the terminal which must be connected to ground before operating equipment.

⏏ Frame or chassis terminal. A connection to the frame (chassis) of the equipment which normally includes all exposed metal structures.

⊥ Grounded terminal which indicates the earth potential.

| On supply.

○ Off supply.

⏻ Standby supply. The equipment will be marked with this symbol is not completely disconnected from AC mains when power switch is in the standby position.

⏻ In position of a bi-stable push switch.



Out position of a bi-stable push switch.



Hazardous voltage and potential for electrical shock. Do not touch terminals that have this symbol when the equipment is on.



Hot surface. Avoid contact. Surfaces are hot and may cause personal injury if touched.



Low temperature or freezing conditions. Avoid contact. Surfaces are cold and may cause personal injury if touched.



Caution, refer to accompanying documentation. The equipment will be marked with this symbol when it is necessary for the user to refer to the instruction manual.



Read operator's manual. To indicate that the operator's manual or card should be read before continuing the operation.

CAT I IEC Measurement Category I



The CE mark shows that the product complies with all applicable European Directives.



The CSA mark is a registered trademark of the Canadian Standards Association.



The RCM mark is a registered trademark of the Australian Communications Authority. This signifies compliance with the Australian EMC Framework Regulations under the terms of the Radio communications Act.

ICES/NMB-001

This ISM device complies with Canadian ICES-001.
Cet appareil ISM est conforme à la norme NMB-001 du Canada.

ISM GROUP 1 CLASS A

This is the symbol for an Industrial, Scientific and Medical, Group 1 Class A product. (CISPR 11)



Korea's safety and EMC mark



China RoHS - Environmentally Green Product Label



China RoHS - Product with Toxic Substance 40 yr EPUP



The Chinese mark for paper-based packaging materials; Paperboard and Corrugated Fiberboard



Plastic Material Coding Identification

Product Stewardship



Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC

This product complies with the WEEE Directive (2002/96/EC) marking requirements. The affixed label indicates that you must not discard this electrical/ electronic product in domestic household waste.

Product Category: With reference to the equipment types in the WEEE directive Annex 1, this product is classified as a “Monitoring and Control instrumentation” product.

Do not dispose in domestic household waste.

To return unwanted products, contact your local Keysight office or visit the following website for more information.

<http://about.keysight.com/en/companyinfo/environment/>

Perchlorate Information

Perchlorate Material - special handling may apply. Visit the following website.

<http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>

Equipment's real-time clock battery or coin cell battery may contain perchlorate and may require special handling when recycled or disposed of in California.

Precautionary Statement

Keysight CX3300 Device Current Waveform Analyzer operates in the Microsoft Windows environment. The CX3300 requires the CX3300 application, a specially-designed Windows application program.

About guarantee and support for the CX3300

Keysight Technologies guarantees and supports the performance of Keysight CX3300 for the same condition as the preload condition when shipped from the factory.

About updating the CX3300 application and the Windows Update

Keysight Technologies confirms the operation of the CX3300 application patch programs and important Windows security patches, and provides recommended update information. Visit the CX3300 support site, download the patches, and perform the software update.

About Windows application programs and peripherals (including driver)

Using commercial products on the CX3300 is your responsibility. Keysight Technologies cannot provide compatibility information for commercial products.

About servicing

Bench repair service is available at your nearest Keysight Technologies service center. Be aware that the CX3300 configuration might be updated to the latest one without notice because of support issues.

The solid-state drive (SSD) might be initialized during servicing. If peripherals are connected, they will be removed.

When the CX3300 is returned, the SSD might be initialized. Peripherals will be returned separately.

Other notes

- Back up the SSD to prevent loss of data by accident or failure.
- Protect the CX3300 from computer viruses.
- If you connect the CX3300 to the network, take care to protect it from computer virus.

Working in Comfort

To optimize your comfort and productivity, it is important that you set up your work area correctly and use your instrument properly. With that in mind, we have developed some set-up and use recommendations for you to follow based on established ergonomic principles.

Improper and prolonged use of keyboards and input devices are among those tasks that have been associated with repetitive strain injury (RSI) to soft tissues in the hands and arms. If you experience discomfort or pain while using the instrument, discontinue use immediately and consult your physician as soon as possible. For more information on RSI you may wish to consult the *About Repetitive Strain Injury* section.

Please study the recommendations described below. Included there are references to relevant parts of international standards, regulations and guidelines, such as ISO 9241 and the European Community Display Screen Equipment directive. You may also wish to consult your employer's human resources department or other relevant departments for guidance specific to your company.

For more information, see "Working in Comfort" located at http://about.keysight.com/en/quality/Keysight_Ergonomic_Information.pdf.

About Repetitive Strain Injury

Because your comfort and safety are our primary concern, we strongly recommend that you use the instrument in accordance with established ergonomic principles and recommendations. Scientific literature suggests that there may be a relationship between injury to soft tissues -especially in the hands and arms- and prolonged improper use of keyboards or other equipment requiring repeated motions of the hands and forearms. This literature also suggests that there are many other risk factors that may increase the chance of such injury, commonly called Repetitive Strain Injury.

What is RSI?

Repetitive Strain Injury (RSI -also known as cumulative trauma disorder or repetitive motion injury) is a type of injury where soft tissues in the body, such as muscles, nerves, or tendons, become irritated or inflamed. RSI has been a reported problem for those who perform repetitive tasks such as assembly line

work, meatpacking, sewing, playing musical instruments, and computer work. RSI also has been observed in those who frequently engage in activities such as carpentry, knitting, housework, gardening, tennis, windsurfing and lifting children.

What causes RSI?

The specific causes of RSI have not been established. Nevertheless, the incidence of RSI has been associated with a variety of risk factors, including:

- Too many uninterrupted repetitions of an activity or motion.
- Performing an activity in an awkward or unnatural posture.
- Maintaining static posture for prolonged periods.
- Failing to take frequent short breaks.
- Other environmental and psychosocial factors.

In addition, there have been reports associating the occurrence of RSI with the use of keyboards, mice, and other input devices. Also, certain medical conditions, such as rheumatoid arthritis, obesity and diabetes, may predispose some people to this type of injury.

What if I experience discomfort?

If you are experiencing any discomfort, seek professional medical advice immediately. Typically, the earlier a problem is diagnosed and treated, the easier it is to resolve.

Mice and Other Input Devices

Various aspects of using mice and other input devices may increase your risk of discomfort or injury. Observing the following recommendations may reduce that risk.

- Try to keep your hand, wrist, and forearm in a neutral position while using your mouse or other input device.
- If you use your thumb to rotate the ball on a trackball or spaceball, keep it in a relaxed, natural shape, and maintain a neutral posture in your hand, wrist, and forearm.
- Hold the mouse gently by draping your fingers over it. Keep your hand relaxed and fingers loose. Do not grip the mouse tightly.

- It takes very little pressure or force from your fingers to activate the buttons or scroll wheel on your mouse, scrolling mouse, trackball, or other input device. Using too much force can place unnecessary stress on the tendons and muscles in your hands, wrists, and forearms.
- If you are using a scrolling mouse, be sure to keep your fingers and hand in a relaxed, neutral position when activating the scroll wheel. Also, this type of mouse features software that can minimize the number of mouse movements or button clicks.
- When using a mouse, trackball, or other input device, position it as close to the keyboard as possible, and keep it at the same level as you do not have to stretch while using it.
- Be sure to keep your mouse and trackball clean. Regular removal of accumulated dust and dirt helps ensure proper tracking and reduces unnecessary hand and wrist motions.

This information is subject to change without notice.

© Keysight Technologies 2016, 2018

Edition 3, April 2018



CX3300-90010
www.keysight.com