

Keysight Technologies

CX3300 Current Waveform Analyzer

Quick Operation Guide

How to change the sampling rate

1. Click on the Horizontal summary to open the Horizontal mini dialog box.
2. Un-check “Automatic”.
3. Set the “Sampling Rate”.



Note:

- If “Auto” is enabled, a suitable sampling rate is selected automatically by the horizontal scale setting controlled by the Horizontal scale control knob.