



CONFIDENTIAL. Proprietary information property of Tempo Europe Ltd., not to be disclosed, copied or reproduced without permission

TP00011 needs to be connected to a compressed air supply (no greater than 250PSI) and its Valve then needs to be opened.

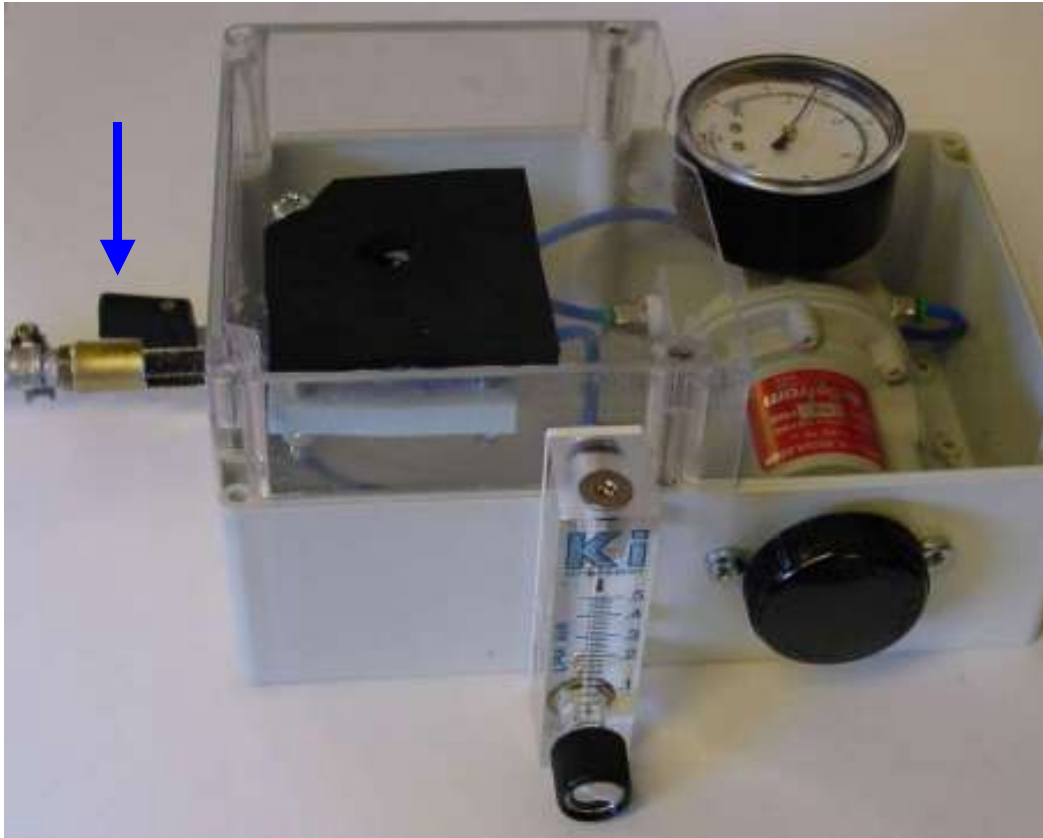

1/ Adjust Regulated supply to 1.5PSI:


Block hole with thumb until air flow meter shows "0", then using large black knob, adjust pressure to 1.5PSI.

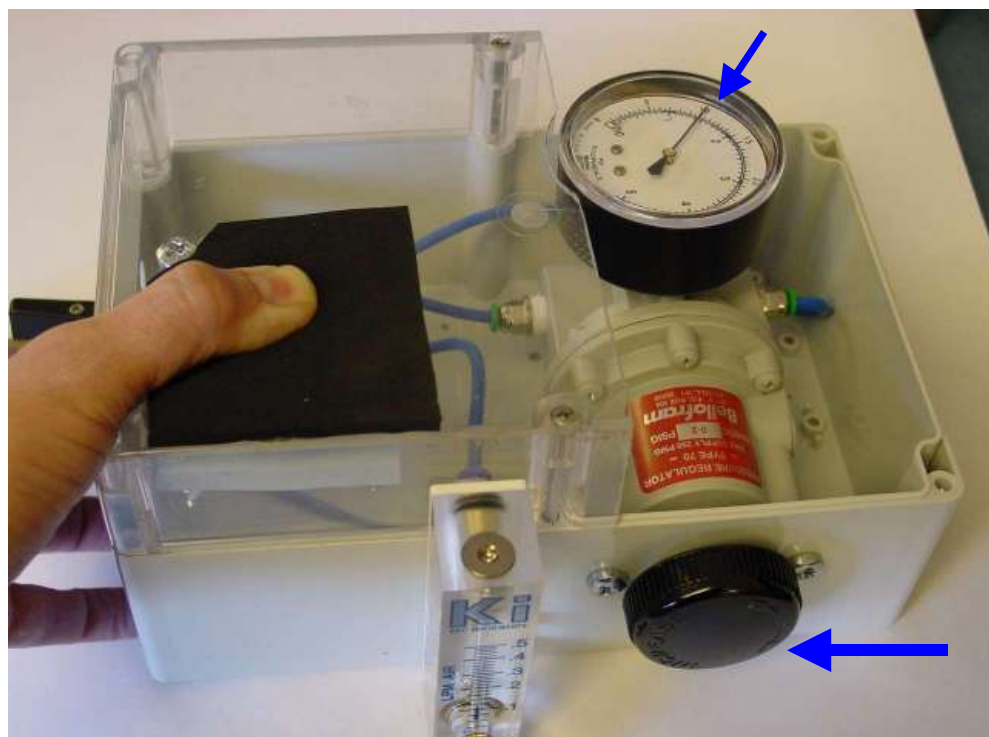


CONFIDENTIAL. Proprietary information property of Tempo Europe Ltd., not to be disclosed, copied or reproduced without permission

2/ Adjust Air flow Meter to 0.5LPM

Let the air flow freely out of the hole, and adjust small black knob to 0.5LPM.

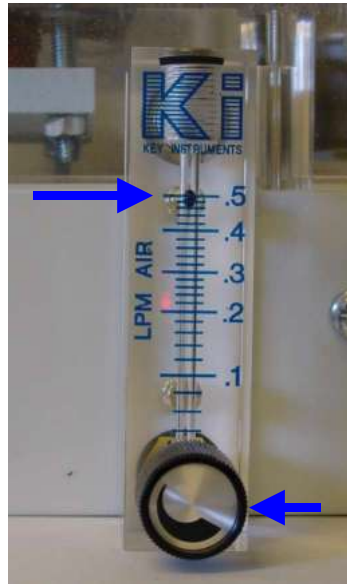

3/ Test transducer seals:

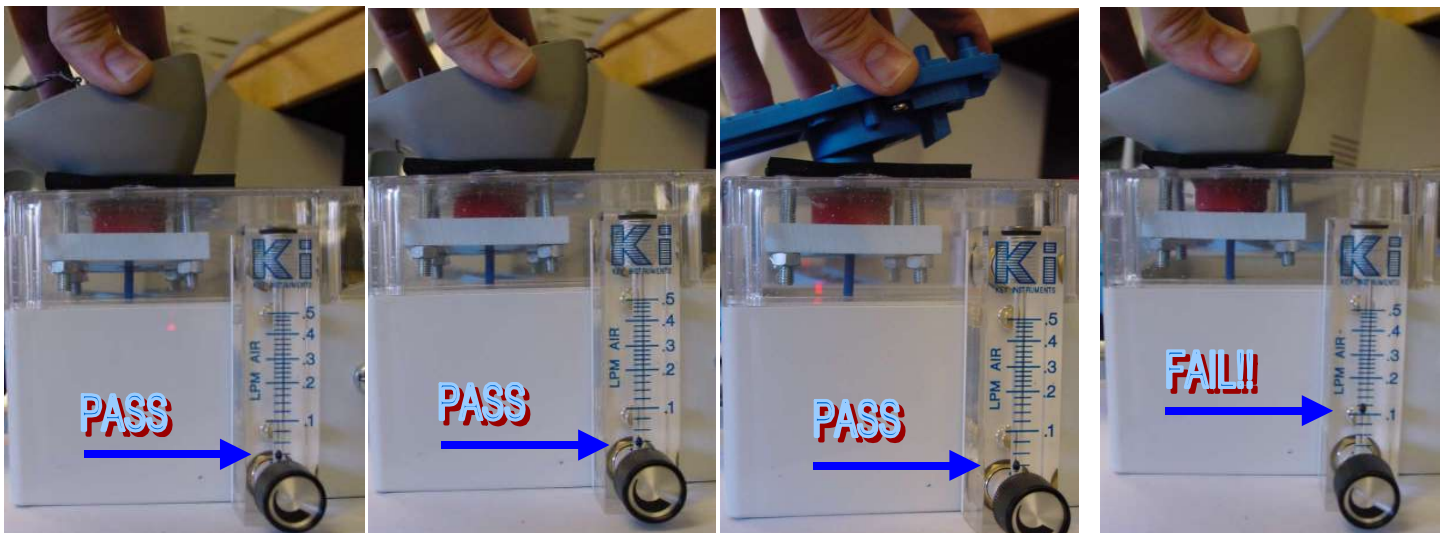

PASS: Black marker stays at the bottom of the tube.

FAIL: Black marker NEVER goes to the bottom of the tube.