

5000 Series Test System Documentation (NH PN 15-1437-00)

General

About NH Research (NH PN 08-0331)

Getting Support (NH PN 08-0332)

Software License Agreement (NH PN 08-0330)

Software

emPower® Operator's Quick Reference (NH PN 09-0277)

emPower® Quick Start Guide (NH PN 09-0261)

emPower® Test Reference Manual (NH PN 09-0271)

emPower® Edit Reference Manual (NH PN 09-0270)

emPower® Control Reference Manual (NH PN 09-0275)

emPower® Utilities Reference Manual (NH PN 09-0269)

emPower® Test Routine Reference Manual (NH PN 09-0253)

emPower® Device Driver Reference Manual (NH PN 09-0252)

emPower® Datalog Driver Reference Manual (NH PN 09-0251)

Multiple UUT Testing with *emPower*® (NH PN 08-0410)

emPower® Quality Monitor Reference Manual (NH PN 09-0272)

Hardware

NHR Networked Instrument Setup Guide (NH PN 08-0402)

NHR 5000 System User's Manual (NH PN 09-0248)

NHR Model S300 Chassis HW Reference Manual (NH PN 09-0240)

NHR Model 4100 Load Module H/W Reference Manual (NH PN 09-0300)

NHR Model 4200 DC Load User's Manual (NH PN 09-0293)

NHR Model 4300 System User's Manual (NH PN 09-0334)

NHR Model 4300 Power Analyzer User's Manual (NH PN 09-0330)

NHR Model 4350 DC Load User's Manual (NH PN 09-0315)

NHR Model 4600 AC Load HW Reference Manual (NH PN 09-0237)

NHR Model 4700 DC Load User's Manual (NH PN 09-0281)

NHR Model 4700 LXI DC Load Family User's Manual (NH PN 09-0299)

NHR Model 4820 DC Load User's Manual (NH PN 09-0288)

NHR Model 5100 AC/DC Source HW Reference Manual (NH PN 09-0255)

NHR Model 5427 AC/DC Source HW Reference Manual (NH PN 09-0298)

NHR Model 6000 Source Module H/W Reference Manual (NH PN 09-0301)

NHR Model 6100 DC Source User's Manual (NH PN 09-0294)