

Keysight Technologies

CX3300 Current Waveform Analyzer


Quick Operation Guide

How to change the measurement units (Clone to Ampere Hour) in Area analysis

1. Select “Markers” in the Display Tool Pallet, then drag and drop the “Area” icon on the interest area on the waveform.



2. Select “Utilities > Configuration > User Preference” window.

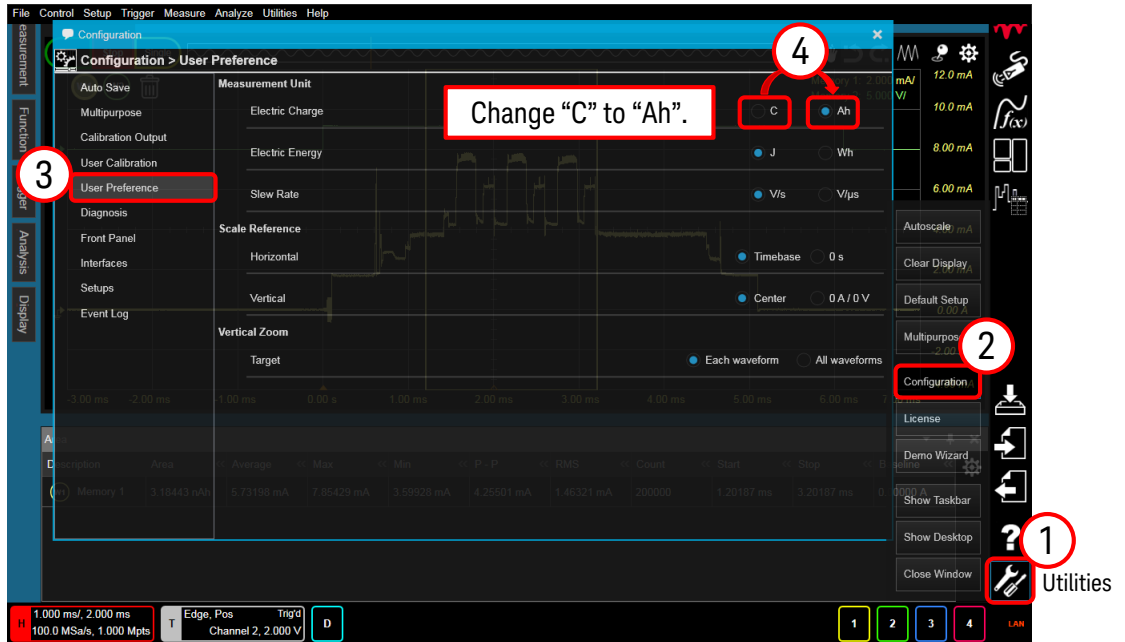

Note:

- The setting is also retained in CX3300 power cycle and [Default Setup].
- It returns to the factory condition with [Factory Default]¹.

1. [Factory Default] can be selected on the “Utilities > Configuration > Setups” window.