

A. GENERAL


The 235A+ can print reports to a serial printer via the RS-232-C port on the right side of the unit. This quick sheet gives details of how to set-up the printer interface and printout the reports. The PRINT key menu can download either: Summary, Receiver Status, or Scan Results reports. It also can be used to set the Activity Report Timer (which sets the minimum time between printouts) and the RS-232-C port parameters, to accommodate various types of printers.

B. RS-232-C PORT SET-UP

1. Press the PRINT key. To change the RS-232 rate, move the underline to 9600:


PRINT REPORT: SUMMARY INTERVAL: 01 MIN
 RS-232: 9600 7 N 2 NONE

2. Press F3 or F4 to select either: 9600, 4800, 2400, 1200 or 300 baud.
3. To change the RS-232 data bits from 7 to 8, move the underline to 7 and press F3 or F4.
4. To change the parity, move the underline to N and press F3 or F4 to select either: N (NONE), O (ODD), or E (EVEN).
5. To change the number of stop bits, move the underline to 2 and press F3 or F4 to select either: 1, 2, 1.5.
6. To add flow control, move the underline to NONE and use the F3 or F4 keys to select either: NONE, DSR, CTS or XON/XOFF.

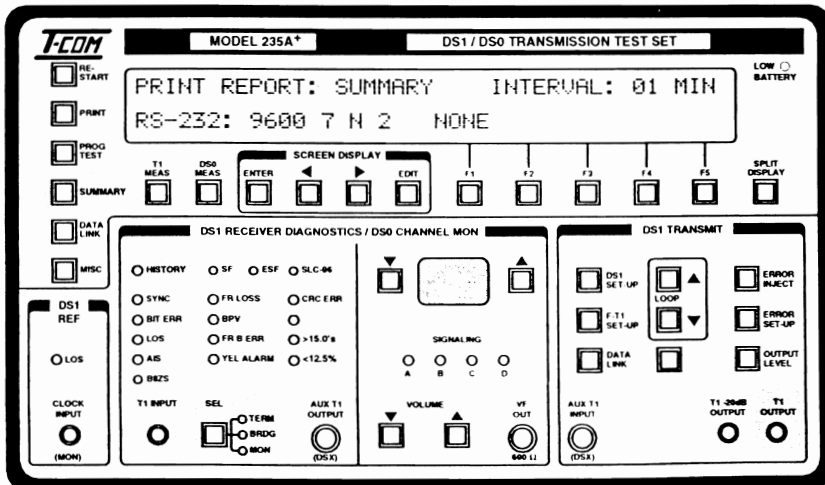

C. PRINT INTERVAL

1. Press the PRINT key. To change the printing interval, move the underline to the digits near INTERVAL:

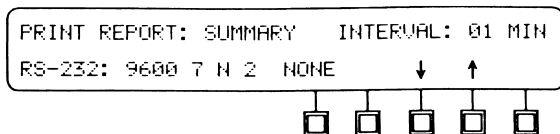


2. Press F3 or F4 to change the two digits to the desired interval (01 to 99 minutes):

NOTE: Regardless of the interval set, the printer will only print a report if the test set has received errors.

D. PRINTING REPORTS

1. Press the PRINT key.

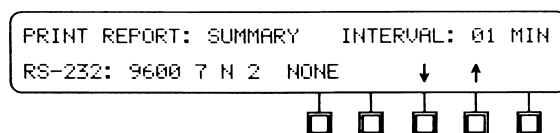

2. Move the underline to SUMMARY and press F3 and F4 to select a report: SUMMARY, PRM-SUMMARY, RCVR-STATUS.
3. Press GO (F5) to download the selected report to the RS-232 port.

NOTE: The screen should read REPORT IS NOW BEING DOWNLOADED, while this is happening.

4. Repeat Step 2 and 3 for other reports.