



# Fuel Quantity Test Set PSD60-2R Operation Manual

**EXPORT CONTROL WARNING:** This document contains controlled technical data under the jurisdiction of the Export Administration Regulations (EAR), 15 CFR 730-774. It cannot be transferred to any foreign third party without the specific prior approval of the U.S. Department of Commerce, Bureau of Industry and Security (BIS). Violations of these regulations are punishable by fine, imprisonment, or both.



## OPERATION MANUAL

# PSD60-2R FUEL QUANTITY TEST SET

**MANUAL NUMBER:** E6-0597-01 (75322)

**REVISION:** B0

**DATE:** 02/07/2014

**WARNING: INFORMATION SUBJECT TO EXPORT CONTROL LAWS**

*This document contains controlled technical data under the jurisdiction of the Export Administration Regulations (EAR), 15 CFR 730-774. It cannot be transferred to any foreign third party without the specific prior approval of the U.S. Department of Commerce, Bureau of Industry and Security (BIS). Violations of these regulations are punishable by fine, imprisonment, or both.*

This document is proprietary to Aeroflex,  
and is not to be reproduced or otherwise disseminated without the written consent of Aeroflex.

10200 West York / Wichita, Kansas 67215 U.S.A. / (316) 522-4981 / FAX (316) 524-2623

[www.aeroflex.com](http://www.aeroflex.com)



## **ELECTROSTATIC DISCHARGE GENERAL WARNINGS FOR ALL EQUIPMENT**

**CAUTION:** THIS EQUIPMENT MAY CONTAIN ELECTROSTATIC DISCHARGE (ESD) SENSITIVE COMPONENTS. TO PREVENT ESD SENSITIVE EQUIPMENT FROM POSSIBLE DAMAGE, OBSERVE THE FOLLOWING PRECAUTIONS WHEN HANDLING ANY ESD SENSITIVE COMPONENTS OR UNITS CONTAINING ESD SENSITIVE COMPONENTS.

- a. Maintenance or service personnel must be grounded through a conductive wrist strap or a similar grounding device using a 1 M $\Omega$  series resistor for equipment protection against static discharge and personal protection against electrical shock.
- b. All tools must be grounded (including soldering tools) that may come into contact with the equipment. Hand contact provides sufficient grounding for tools that are not otherwise grounded provided the operator is grounded through an acceptable grounding device such as a wrist strap.
- c. Maintenance or service of the Unit must be done at a grounded ESD work station.
- d. Before maintenance or service of the equipment, disconnect all power sources, signal sources and loads connected to the Unit.
- e. If maintenance or service must be performed with power applied, take precautions against accidental disconnection of equipment components. Specifically, do not remove integrated circuits or printed circuit boards from the equipment while the equipment has power applied.
- f. All ESD sensitive components are shipped in protective tubes or electrically conductive foam. The components should be stored using the original container/package when not being used or tested. If the original storage material is not available, use similar or equivalent protective storage material.
- g. When ESD sensitive components are removed from a Unit, the components must be placed on a conductive surface or in an electrically conductive container.
- h. When in storage or not being repaired, all printed circuit boards must be kept in electrically conductive bags or other electrically conductive containers.
- i. Do not unnecessarily pick up, hold or directly carry ESD sensitive devices.

Failure to comply with these precautions may cause permanent damage to ESD sensitive devices. This damage can cause devices to fail immediately or at a later time without apparent cause.

# Safety and Regulatory Information

***Review this product and related documentation to familiarize yourself with safety markings and instructions before you operate this equipment.***

**WARNING** The **WARNING** notice denotes a hazard. It calls attention to a procedure, practice, or the like, that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **WARNING** notice until the indicated conditions are fully understood and met.


**CAUTION** The **CAUTION** notice denotes a hazard. It calls attention to an operating procedure, practice, or the like, which, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a **CAUTION** notice until the indicated conditions are fully understood and met.




**Caution (refer to accompanying documents).** Attention – refer to the manual. This symbol indicates that information about usage of a feature is contained in the manual.

## Equipment Markings


The following markings may appear on this equipment:




**Direct current.** This symbol indicates that the equipment requires direct current input.




**Alternating current.** This symbol indicates that the equipment requires alternating current input.



**Both direct and alternating current.** This symbol indicates that the equipment requires either ac or dc input at the same connector.



**Three-phase alternating current.** This symbol indicates that the equipment requires 3-phase ac input.



**Earth (ground) terminal.** This symbol indicates the ground (earth) terminal.



**Protective conductor terminal.** This symbol indicates the protective ground (earth) terminal.




**Frame or chassis terminal.** This symbol indicates the frame or chassis terminal for connection to ground.




**Equipotentiality.** This symbol indicates an equipotentiality terminal.




**On (Supply).** This symbol indicates that the power line switch is ON.




**Off (Supply).** This symbol indicates that the power line switch is OFF.



**Standby.** This symbol indicates that the power line switch is in STANDBY.




**Caution, risk of electric shock.** Danger – high voltage.




**Caution, hot surface.** Danger – high temperature surface.



**Caution (refer to accompanying documents).** Attention – refer to the manual. This symbol indicates that information about usage of a feature is contained in the manual.



**In-position of a bistable push control.** This symbol indicates the in (on) position of a bistable push control.



**Out-position of a bistable push control.** This symbol indicates the out (off) position of a bistable push control.



**CE Mark.** <sup>TM</sup> of the European Community.



**Fuse Symbol.** To indicate a fuse.

## Warnings

**WARNING** Do not use the equipment in a manner not specified in this manual!

**WARNING** Equipment should only be serviced by authorized personnel.

**CLEANING WARNING**

Keep the equipment dry to avoid damage to the equipment. To prevent damage, never apply solvents to the equipment housing. For cleaning, wipe the equipment with a cloth that is lightly dampened with water, mild detergent, or alcohol. Do not use aromatic hydrocarbons, chlorinated solvents, or methanol-based fluids.

**DO NOT OPERATE IN EXPLOSIVE ATMOSPHERES**

To avoid explosion, do not operate the equipment in an atmosphere of explosive gas.

**WARNING** Equipment contains no-rechargeable batteries. Use only 1.5-V size C alkaline cells. Never attempt to recharge these cells.

**NOTE** For EMC testing M17/84-RG223 double shielded coaxial cable, 4.5 m long, with BNC connectors, shielding terminated 360° at both end connectors, and unterminated at far end were used at terminals (ports) INDICATOR LOZ (J1), INDICATOR HIZ (J2), INDICATOR COMP (J3), TANK UNITS LOZ (J4), TANK UNITS HIZ (J5), AND TANK UNITS COMP (J6).

**CAUTION** This equipment is electrostatic discharge (ESD) sensitive. Use of the supplied ESD wrist strap with cord (JPN 90-0283-02), or equivalent, must be used at all times when operating this unit. See the manufacturer's instructions that come with each package for proper connection and use.

## Aeroflex Operation Manual

### **REVISION HISTORY – PSD60-2R OPERATION MANUAL**

E6-0597-01 / 10000015086 / 75322

| Revision | Date     | Reason                                   | Reference        |
|----------|----------|------------------------------------------|------------------|
| 0        | 01/12/07 | New release                              |                  |
| A0       | 9/30/10  | Add 2-wire / 3-wire switch               | 50000000100<br>2 |
| A1       | 8/24/11  | Add OR and SH error codes in Section 2.6 | 50000000208<br>6 |
| B0       | 2/7/14   | Change Address                           | 50000000530<br>7 |

**REVISION HISTORY BY DRAWING NUMBER**

MANUAL: PSD60-2R Fuel Quantity Test Set Operation

REVISION: B0 – February 07, 2014

| <b><u>DRAWING NO.</u></b>            | <b><u>REV.<br/>LEVEL</u></b> | <b><u>DRAWING NO.</u></b> | <b><u>REV.<br/>LEVEL</u></b> |
|--------------------------------------|------------------------------|---------------------------|------------------------------|
| Safety and Regulatory<br>Information | 00                           |                           |                              |
| Table of Contents                    | 01                           |                           |                              |
| Section I                            | 01                           |                           |                              |
| Section II                           | 01                           |                           |                              |
| Section III                          | 01                           |                           |                              |
| Section IV                           | 01                           |                           |                              |
| Appendix A                           | 00                           |                           |                              |

## **TABLE OF CONTENTS**

### **SECTION I GENERAL INFORMATION**

| SECTION |                                          | PAGE NUMBER |
|---------|------------------------------------------|-------------|
| 1.1     | INTRODUCTION .....                       | 1-1         |
| 1.2     | EQUIPMENT DESCRIPTION .....              | 1-2         |
| 1.3     | UNPACKING AND INSPECTING EQUIPMENT ..... | 1-5         |
| 1.4     | SPECIFICATIONS .....                     | 1-5         |
| 1.5     | ACCESSORIES SUPPLIED .....               | 1-6         |
| 1.6     | EQUIPMENT REQUIRED BUT NOT SUPPLIED..... | 1-6         |

### **SECTION II OPERATION**

|     |                               |     |
|-----|-------------------------------|-----|
| 2.1 | GENERAL INFORMATION.....      | 2-1 |
| 2.2 | CAPACITANCE MEASUREMENT ..... | 2-1 |
| 2.3 | CAPACITANCE SIMULATION .....  | 2-2 |
| 2.4 | RESISTANCE MEASUREMENT .....  | 2-3 |
| 2.5 | DTF MEASUREMENT .....         | 2-3 |
| 2.6 | ERROR CODES .....             | 2-3 |

### **SECTION III THEORY OF OPERATIONS**

|     |                                    |     |
|-----|------------------------------------|-----|
| 3.1 | GENERAL THEORY OF OPERATIONS ..... | 3-1 |
|-----|------------------------------------|-----|

### **SECTION IV MAINTENANCE**

|     |                                                        |     |
|-----|--------------------------------------------------------|-----|
| 4.1 | GENERAL MAINTENANCE.....                               | 4-1 |
| 4.2 | BILLS OF MAT, ASSY DWGS, SCHEMATICS & TEST PROCED..... | 4-1 |

### **APPENDIX A THREE TERMINAL MEGGER**

|     |                                      |     |
|-----|--------------------------------------|-----|
| A.1 | PSD60-2R THREE TERMINAL MEGGER ..... | A-1 |
|-----|--------------------------------------|-----|

## **SECTION I GENERAL INFORMATION**

### **1.1 INTRODUCTION**

This manual provides operational information for the Aeroflex PSD60-2R Fuel Quantity Gauging System Test Set.

The PSD60-2R Fuel Quantity Gauging System Test Set is an instrument that permits complete functional checkout and calibration of an AC Fuel Gauging System, on or off the aircraft. The test set can accurately measure the capacitance of Tank Units, Compensators, or entire systems. The test set can also simulate capacitance values for the operation of Indicators, as well as measure the insulation resistance of Tank Units and cabling.

The insulation resistance measurement circuit normally operates in three terminal configuration. If a direct short is present from signal source to ground the system will display short. If a direct short is present from signal return to ground the systems reading is undefined.

Operation of the test set is essentially automatic (no manual nulling required). To evaluate a particular system, connect it to the applicable input. Panel controls are set to determine what is displayed on the digital display.

The test set is powered by 18 C sized alkaline batteries. The batteries may be replaced without need of test set recalibration. Battery condition is displayed on the digital readout.

The test set is shipped with a chassis ground cable. In order to properly test a system, specific aircraft interface cables are required but not furnished with the test set.

## 1.2 EQUIPMENT DESCRIPTION

Figure 1-1 shows the front panel of the test set. Refer to Table 1-1 for the description and function of each item.

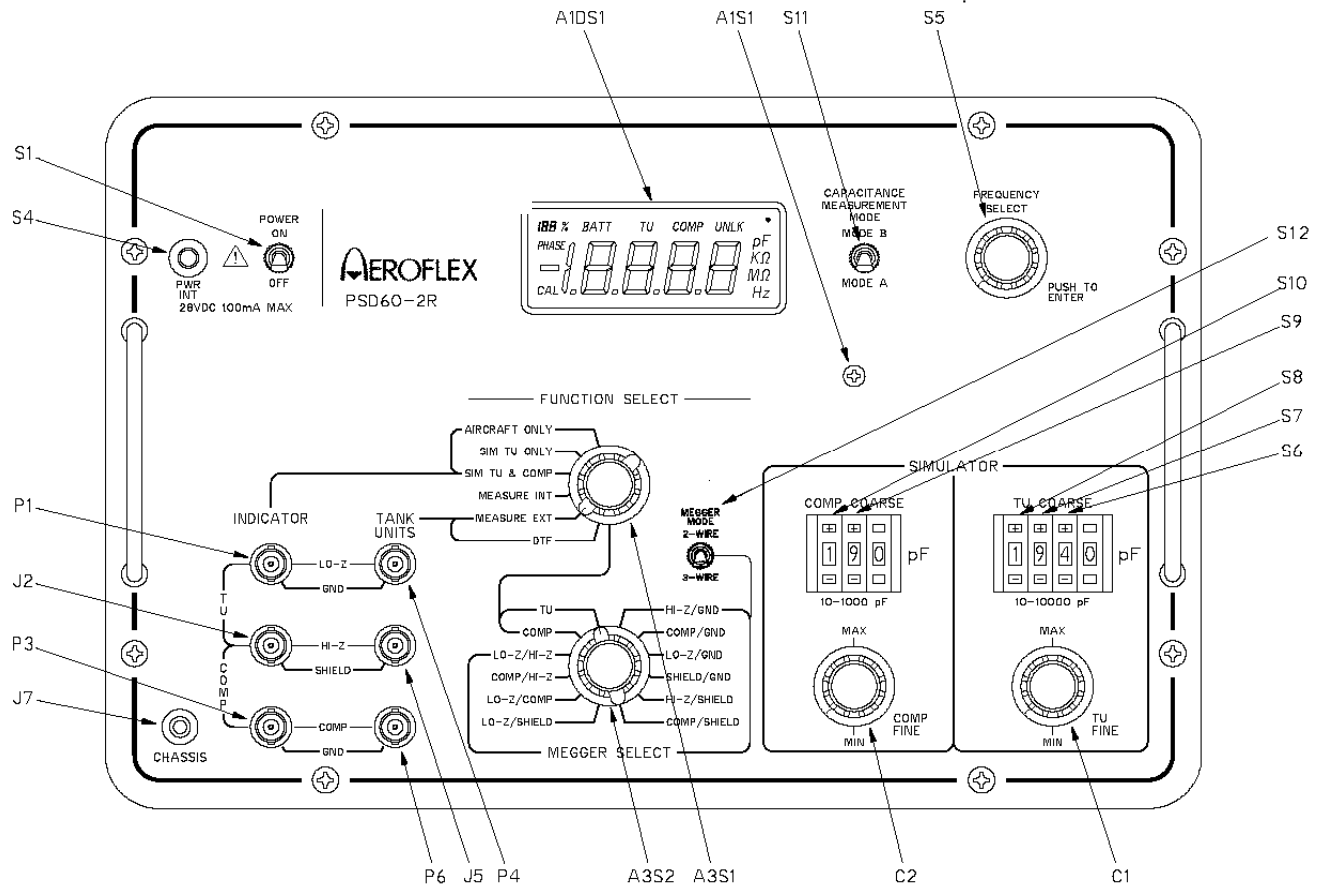


FIGURE 1-1

# Aeroflex Operation Manual

| ITEM  | FUNCTION                    | DESCRIPTION                                                                                                                                                                                                                                                                                                                      |
|-------|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| S4    | POWER INTERRUPT SWITCH      | Turns power off when lid is closed regardless of the position of Power Switch                                                                                                                                                                                                                                                    |
| S1    | POWER SWITCH                | Applies power to the test set.                                                                                                                                                                                                                                                                                                   |
| A3S1  | FUNCTION SELECT             | Used to select function to be performed.                                                                                                                                                                                                                                                                                         |
|       | MEASURE EXT                 | Use to select measurement of TANK UNIT parameters through P4, J5, P6 and/or J7 depending on MEGGER SELECT switch (A3S2) position.                                                                                                                                                                                                |
|       | MEASURE INT                 | Use to select measurement of SIMULATOR capacitance depending on SELECT switch S3 (TU or COMP) position.                                                                                                                                                                                                                          |
|       | DTF                         | Sets the unit to measure distance to fault.                                                                                                                                                                                                                                                                                      |
|       | SIM TU & COMP               | Connects the two simulators to the INDICATOR jacks (P1, J2, & P3) for capacitance output.                                                                                                                                                                                                                                        |
|       | SIM TU ONLY                 | Connects the TU SIMULATOR to the INDICATOR TU jacks (P1 & J2) for capacitance output.                                                                                                                                                                                                                                            |
|       | AIRCRAFT ONLY               | Disconnects both simulators from the INDICATORS jacks (P1, J2, & P3)                                                                                                                                                                                                                                                             |
| A3S2  | MEGGER SELECT               | Use to select parameter to measure depending on the position of the FUNCTION SELECT switch.                                                                                                                                                                                                                                      |
| S12   | MEGGER MODE 2-WIRE / 3-WIRE | Changes the Megger section from the 3-wire mode to the 2-wire mode. See Appendix A for details of the 2-wire and 3-wire operation.                                                                                                                                                                                               |
| A1DS1 | LCD Display                 | Displays: <ol style="list-style-type: none"> <li>1. Frequency of LO-Z signal.</li> <li>2. Capacitance under test, either internal or external.</li> <li>3. Insulation resistance of system wiring or unit under test.</li> <li>4. Relative charge of the PSD60-2R batteries.</li> <li>5. Capacitance measurement mode</li> </ol> |
| A1S1  | CALIBRATION MODE Switch     | To put the unit in Calibration mode, the screw is removed and the switch beneath the screw hole is held depressed during power up.                                                                                                                                                                                               |
| P1    | INDICATOR LO-Z              | Allows connection from test set TU SIMULATOR to aircraft FQGs.                                                                                                                                                                                                                                                                   |
| J2    | INDICATOR HI-Z              | Allows connection from test set SIMULATOR (TU, and COMP) HI-Z line to aircraft FQGs.                                                                                                                                                                                                                                             |
| P3    | INDICATOR COMP              | Allows connection from test set COMP SIMULATOR to aircraft FQGs.                                                                                                                                                                                                                                                                 |
| P4    | TANK UNITS LO-Z             | Allows connection from test set measurement circuits to aircraft tanks.                                                                                                                                                                                                                                                          |

# Aeroflex Operation Manual

|                |                                                                                                                                                                                             |                                                                                                                      |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| J5             | TANK UNITS HI-Z                                                                                                                                                                             | Allows connection from test set measurement circuits to aircraft tanks.                                              |
| P6             | TANK UNITS COMP                                                                                                                                                                             | Allows connection from test set measurement circuits to aircraft tanks.                                              |
| J7             | CHASSIS                                                                                                                                                                                     | Access to PSD60-2R chassis ground. Normally required to connect the PSD60-2R to aircraft ground.                     |
| S5             | FREQUENCY SELECT                                                                                                                                                                            | Use to enter the LO-Z frequency. Also used to calibrate the unit                                                     |
| S6, S7<br>& S8 | TU DECADE<br>CAPACITOR                                                                                                                                                                      | Increments TU SIMULATOR by 10, 100, or 1000 pF increments depending on decade chosen (increments are not calibrated) |
| S9 &<br>S10    | COMP DECADE<br>CAPACITOR                                                                                                                                                                    | Increments COMP SIMULATOR by 10 or 100 pF increments depending on decade chosen (increments are not calibrated)      |
| S11            | CAPACITANCE<br>MEASUREMENT<br>MODE                                                                                                                                                          | Used to select between measuring Mode B (magnitude capacitance) and Mode A (parallel capacitance).                   |
| C1             | TU FINE                                                                                                                                                                                     | Rotate for fine adjustment of TU simulation capacitance.                                                             |
| C2             | COMP FINE                                                                                                                                                                                   | Rotate for fine adjustment of COMP simulation capacitance.                                                           |
| <b>NOTE:</b>   | C1 and C2 have 180 degree rotation for minimum to maximum value with no stops. It is therefore possible to have an increasing value in either the clockwise or counter clockwise direction. |                                                                                                                      |

**TABLE 1-1**

### 1.3 UNPACKING AND INSPECTING EQUIPMENT

Exercise extreme care when unpacking the unit. Make a visual inspection of the unit for evidence of damage incurred during shipment. If a claim for damage is to be made, save the shipping container to substantiate the claim. When the equipment has been unpacked, return all the packing material to the container for future use in storing or shipping of the equipment. Remove any protective covers from connectors before using the equipment. Replace any covers on the connectors after using the PSD60-2R.

### 1.4 SPECIFICATIONS

#### Environmental Specifications

The environmental specifications are as follows:

|                                     |                                                                                                            |
|-------------------------------------|------------------------------------------------------------------------------------------------------------|
| Size:                               | 16.5 cm H x 35.6 cm W x 26.9 cm D (6.5" H x 14" W x 10.6" D)                                               |
| Mass (Weight):                      | 5.4 kg (12 lbs.)                                                                                           |
| Container:                          | High-impact plastic                                                                                        |
| Operating Temperature:              | -25 °C to +55 °C                                                                                           |
| Relative Humidity (Non-Condensing): | 80% maximum for $\leq 30$ °C<br>Decrease linearly to 50% at 40 °C<br>40 °C $\leq$ 50% maximum $\leq$ 55 °C |
| Operating Altitude:                 | $\leq 2\,000$ m                                                                                            |
| IEC Overvoltage Category:           | II                                                                                                         |
| Pollution Degree:                   | 2                                                                                                          |
| Intrinsic Safety:                   | 1 $\mu$ J @ 0.02 $\mu$ F (normal operation)                                                                |

#### Measurement Range

##### Capacitance Measurement Range

| <u>Range</u>                 | <u>Resolution</u> |
|------------------------------|-------------------|
| Low 0 - 199.99 $\rho$ F      | 0.01 $\rho$ F     |
| Mid 200 - 1999.9 $\rho$ F    | 0.1 $\rho$ F      |
| High 2,000 - 19,999 $\rho$ F | 1 $\rho$ F        |
| 20.00K - 39.99 K $\rho$ F    | 10 $\rho$ F       |
| DTF 0 - 19,999 $\rho$ F      | 1 $\rho$ F        |
| 20.00K - 39.99 K $\rho$ F    | 10 $\rho$ F       |

##### Resistance Measurement Mode (9 ranges)

10 m $\Omega$  to 1999 M $\Omega$   
(optional) 2000 M $\Omega$  to 19999 M $\Omega$

#### Measurement Accuracy


|                 |                                                                                                      |
|-----------------|------------------------------------------------------------------------------------------------------|
| AC Capacitance: |                                                                                                      |
| Mode A          | Greater of +/- 0.1% of reading or 0.05 $\rho$ F from 0 – 39.99 K $\rho$ F at 0° Phase Shift.         |
| Mode B          | Greater of +/- 0.1% of reading or 0.05 $\rho$ F from 0 – 39.99 K $\rho$ F at 0° to 359° Phase Shift. |
| DTF             | Greater of +/- 0.1% of reading or 2 $\rho$ F                                                         |
| Resistance:     | Greater of 2% of reading or 0.1 ohm<br>+/- 5% of reading for R > 2000 M ohm                          |

Capacitance Simulators Range

|              |                                                                                                                                                                                                           |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tank Unit:   | 10 pF – 9900 pF infinite resolution                                                                                                                                                                       |
| Compensator: | 10 pF – 990 pF infinite resolution. The capacitance simulators are calibrated to an exact value by using MEASURE INT TU or COMP and, therefore, are as accurate as the capacitance measurement circuitry. |

Power

|            |                                                        |
|------------|--------------------------------------------------------|
| Batteries: | 27 V, 150 mA maximum.<br>18 C sized Alkaline batteries |
|------------|--------------------------------------------------------|



## 1.5 ACCESSORIES SUPPLIED

The following is a list of accessories that are supplied with the PSD60-2R:

1. Ground strap cable, JPN 55-7002-00.
2. Operation Manual, JPN 06-0597-01.

## 1.6 EQUIPMENT REQUIRED BUT NOT SUPPLIED

The following is a list of equipment that is referenced in this manual but not supplied with a PSD60-2R:

1. Aircraft Interface Cabling

## **SECTION II OPERATION**

### **2.1 GENERAL INFORMATION**

The PSD60-2R is a general purpose test set and must be used in conjunction with an aircraft specific interface cable in order to gain access to the aircraft fuel quantity system. Manufacturers of test sets historically have made or specified cables which best utilize their particular test set. Contact Aeroflex for interface cabling.

**The following precautions should be observed at all times:**

- A. Connect the PSD60-2R chassis jack to airframe ground during all operations (measurement and simulation).**
- B. Never connect cable leads to the TANK UNITS and INDICATOR jacks at the same time. (PSD60-2R TANK UNITS jacks are always active.)**
- C. Do not use cables which may connect shield to airframe ground within the cables. SHIELD and GROUND must be isolated to allow correct operation of the megger.**

### **2.2 CAPACITANCE MEASUREMENT**

1. Connect CHASSIS jack (J7) to Airframe.
2. Turn power ON, select the desired LO-Z frequency, and allow three minutes for test set to stabilize.
3. Check battery condition, if "LO BAT" is displayed on the display replace batteries.
4. Connect TANK UNITS LO-Z, HI-Z and COMP connectors (P4, J5, and P6) to the aircraft interface with the appropriate interface cables.
5. Turn the FUNCTION SELECT switch (A3S1) to MEASURE EXT.
6. Turn the MEGGER SELECT switch (A3S2) to COMP or TU.
7. Select the correct Capacitance Measurement Mode by setting S11.
8. The capacitance of the system's TU or COMP is measured and displayed in pF on the test set's display.

## 2.3 CAPACITANCE SIMULATION

**CAUTION:** Some procedures may specify that the test set should not be connected to airframe ground when simulating capacitance. This is because some test sets connect airframe ground and shield together, thereby grounding the shield at a point other than the "Single-Point" ground. This test set isolates case and shield ground in the simulate mode, so this precaution is not necessary. **The test set should be connected to airframe ground for all tests.**

1. Connect CHASSIS jack (J7) to Airframe.
2. Turn power ON, select the desired LO-Z frequency, and allow three minutes for test set to stabilize.
3. Check battery condition, if "LO BAT" is displayed on the display replace batteries.
4. Turn the FUNCTION SELECT switch (A3S1) to MEASURE INT.
5. Connect INDICATOR LO-Z, HI-Z, and COMP connectors (P1, J2, and P3) to the aircraft interface with the appropriate interface cables. Assure that no cables are connected to P4, J5, and P6.
6. Turn the MEGGER SELECT switch (A3S2) to TU.
7. Adjust TU decade (S6, S7, and S8) below desired capacitance value.
8. Adjust TU FINE knob (C1) to desired capacitance value.
9. Turn the MEGGER SELECT switch (A3S2) to COMP and adjust COMP decade (S9 and S10) and COMP FINE knob (C2) to desired capacitance value.
10. Turn FUNCTION SELECT switch (A3S1) to SIM TU & COMP.

**NOTE:** Connecting test harnesses and interface boxes should not add capacitance to the system. However, if the cable is suspect, connect only the cable to P4, J5, and P6 and read its capacitance per measurement procedure. If cable capacitance is less than 1 pF above displayed reading with no cables connected to test set, subtract its capacitance from the amount being simulated. If over 1 pF, repair cable; shields are probably improperly terminated.

**NOTE:** When simulating tank unit only, as in the case of an uncompensated system, FUNCTION SELECT switch (A3S1) should be in the SIM TU ONLY position.

**NOTE:** The AIRCRAFT ONLY position disconnects both simulators. This is used when delta values are simulated and actual dry tanks are used for empty.

## 2.4 RESISTANCE MEASUREMENT

1. Connect CHASSIS jack (J7) to Airframe.
2. Turn power ON, select the desired LO-Z frequency, and allow three minutes for test set to stabilize.
3. Check battery condition, if "LO BAT" is displayed on the display replace batteries.
4. Connect TANK UNITS LO-Z, HI-Z and COMP connectors (P4, J5, and P6) to the aircraft interface with the appropriate interface cables.
5. Turn the FUNCTION SELET switch (A3S1) to MEASURE EXT, and select desired points to be measured using the MEGGER SELECT switch. (A3S1)
6. The resistance between the points selected will be displayed in ohms on the test set display.

## 2.5 DTF MEASUREMENT

1. Connect CHASSIS jack (J7) to Airframe.
2. Turn power ON, select the desired LO-Z frequency, and allow three minutes for test set to stabilize.
3. Check battery condition, if "LO BAT" is displayed on the display replace batteries.
4. Connect TANK UNITS LO-Z, HI-Z and COMP connectors (P4, J5, and P6) to the interface box with the appropriate interface cable.
5. Without the aircraft interface connected to the airplane, place the FUNCTION SELECT switch (A3S1) in DTF mode.
6. When the unit nulls all stray capacitance, 0pF will be indicated on the units display.
7. Connect the interface to the airplane and read the capacitance indicated on the units display.
8. Divide the displayed capacitance by the capacitance per foot of the specific coax measured. This number will yield the length of the coax, or the distance to the fault of the coax.

## 2.6 ERROR CODES

ER0 –

Not used at this time.

ER1 – LO-Z SHORT

The LO-Z signal is shorted and/or the REFHI/REFLO signal is to low.

ER2 – INVALID FUNCTION

This error appears when attempting to calibrate the unit with one of the selector switches placed in an invalid position.

ER3 –

Not used at this time.

ER4 –

Not used at this time.

ER5 –

Not used at this time.

ER6 – CAL DATA ERROR

This error code is caused by the loss of calibration data in the EEPROM chip.

ER7 – A/D ERROR

The A/D converter is not communicating correctly with the processor.

ER8 – STACK ERROR

The microprocessor had a stack overflow.

ER9 – DIVIDE BY 0 ERROR

The main board microprocessor tried to divide by 0.

ER10 – SWITCH ERROR

The microprocessor detected that the function select switches are in an invalid mode.

-ER- – INVALID FUNCTION

The function switches are in an invalid position.

-SH- – MEGGER REFERENCE SHORT

The ohmmeter drive signal has been shorted.

-OR- – OVERRANGE

The measured value is too big to be displayed for the selected range.

%BATT displays 'LO BATT'

The batteries do not have sufficient charge to operate the unit.

%BATT displays 'Er'

The processor is bypassing the calibration data error (ER6).

## **SECTION III THEORY OF OPERATION**

### **3.1 GENERAL INFORMATION**

The PSD60-2R Theory of Operation is detailed in the PSD60-2R Maintenance Manual (PN: E6-0597-00 for CD) available separately from Aeroflex.

## **SECTION IV MAINTENANCE**

### **4.1 GENERAL MAINTENANCE**

**CLEANING WARNING:**

Keep the equipment dry to avoid damage to the equipment. To prevent damage, never apply solvents to the equipment housing. For cleaning, wipe the equipment with a cloth that is lightly dampened with water, mild detergent, or alcohol. Do not use aromatic hydrocarbons, chlorinated solvents, or methanol-based fluids.

**CAUTION:** THE PSD60-2R CONTAINS ESD SENSITIVE DEVICES. OPEN AND CALIBRATE AT ESD PROTECTED AREA ONLY.

- A. Battery Replacement:: a "LO BAT" indication will illuminate on the digital display when batteries require replacement. Remove the front panel and replace used batteries with fresh alkaline batteries.
- B. Calibration: The suggested calibration interval is 1 year. A test procedure, JPN 04-0597-00 is included in the PSD60-2R Maintenance Manual (PN: E6-0597-00 for CD) available separately from Aeroflex. It contains a section that tests the units accuracy, a section that calibrates the unit, and a section that does complete testing of the unit. Periodic calibration and certification service is also provided by:

Aeroflex  
10200 West York  
Wichita, KS 67215  
Telephone: (800) 835-2350 / (316) 522-4981  
Attn: Service Dept.

### **4.2 BILLS OF MATERIAL, ASSEMBLY DRAWINGS, SCHEMATICS & TEST PROCEDURE**

To assist in the maintenance of the PSD60-2R, bills of material, assembly drawings, schematics and a test procedure are included in the PSD60-2R Maintenance Manual (PN: E6-0597-00 for CD) available separately from Aeroflex.

## APPENDIX A

### THREE TERMINAL MEGGER

#### A.1 PSD60-2R THREE TERMINAL MEGGER

The PSD60-2R incorporates a three terminal megger in order to accurately measure the insulation resistance of each element. This method is required due to the complexity of the network to be measured. An equivalent circuit for a two terminal megger is shown in Figure A-1.

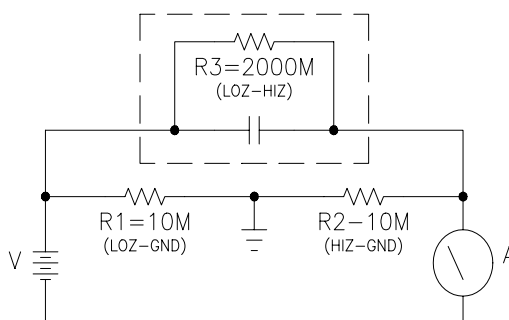


FIGURE A-1

In Figure A-1, the insulation resistance reading would be approximately 20 MΩ, which is unacceptable. This is because the main current is through R1 and R2 not the tank unit.

The three terminal measurement used in the PSD60-2R measures the current through the element under test. (Figure A-2) As you can see, the resistance in the ammeter is infinitely smaller than R1 or R2. By using this method we can accurately measure the tank unit insulation resistance.

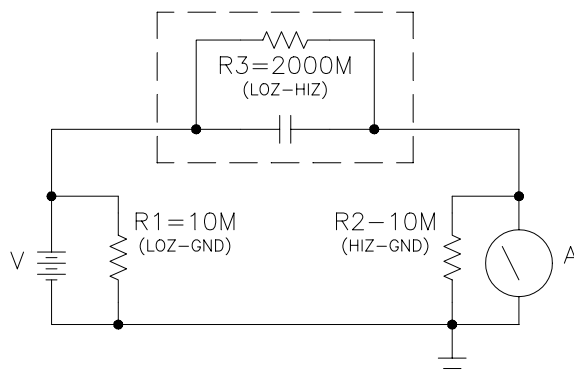


FIGURE A-2

The three terminal measurement as described above works well in identifying problems except when a direct short is in the system. For example, if R1 is shorted no current will reach R3 and it shows infinite resistance or if R2 is shorted no current will reach the current sensing device also indicating an incorrect reading. When connected to an entire system, this will cause erroneous readings on many portions of the select switch. Table A-1 shows a typical result.

| <u>SELECT POSITION</u> | <u>NORMAL READING</u> | <u>SHORT FROM LoZ TO HiZ</u> |
|------------------------|-----------------------|------------------------------|
| LoZ - HiZ              | 0 $\Omega$            | 0 $\Omega$                   |
| Comp - HiZ             | 10 M $\Omega$         | INFINITY                     |
| LoZ - Comp             | 10 M $\Omega$         | INDETERMINATE                |
| LoZ - Shield           | 10 M $\Omega$         | INDETERMINATE                |
| Comp - Shield          | 10 M $\Omega$         | 10 M $\Omega$                |
| HiZ - Shield           | 10 M $\Omega$         | INDETERMINATE                |
| Shield - GND           | 10 M $\Omega$         | 10 M $\Omega$                |
| LoZ - GND              | 10 M $\Omega$         | INDETERMINATE                |
| Comp - GND             | 10 M $\Omega$         | 10 M $\Omega$                |
| HiZ - GND              | 10 M $\Omega$         | INDETERMINATE                |

TABLE A-1

Of the five points measured (LoZ, HiZ, Comp, Shield, GND) only four of the readings are correct. The "TWO TERMINAL MEASUREMENT" switch is provided to help eliminate this confusion by lifting the third leg of the megger so it will act as a two terminal device. This method of testing will provide the best of both three and two terminal measurements by allowing accurate measurement of system parameters while allowing for quick identification of a direct short.

As we are always seeking to improve our products, the information in this document gives only a general indication of the product capacity, performance and suitability, none of which shall form part of any contract. We reserve the right to make design changes without notice.

|                         |                             |                             |
|-------------------------|-----------------------------|-----------------------------|
| <b>CHINA / Beijing</b>  | Tel: [+86] (10) 6539 1166   | Fax: [+86] (10) 6539 1778   |
| <b>CHINA / Shanghai</b> | Tel: [+86] (21) 5109 5128   | Fax: [+86] (21) 6457 7668   |
| <b>FINLAND</b>          | Tel: [+358] (9) 2709 5541   | Fax: [+358] (9) 804 2441    |
| <b>FRANCE</b>           | Tel: [+33] 1 60 79 96 00    | Fax: [+33] 1 60 77 69 22    |
| <b>GERMANY</b>          | Tel: [+49] 8131 2926-0      | Fax: [+49] 8131 2926-130    |
| <b>HONG KONG</b>        | Tel: [+852] 2832 7988       | Fax: [+852] 2834 5364       |
| <b>INDIA</b>            | Tel: [+91] (0) 80 4115 4501 | Fax: [+91] (0) 80 4115 4502 |
| <b>JAPAN</b>            | Tel: [+81] 3 3500 5591      | Fax: [+81] 3 3500 5592      |
| <b>KOREA</b>            | Tel: [+82] (2) 3424 2719    | Fax: [+82] (2) 3424 8620    |
| <b>SCANDINAVIA</b>      | Tel: [+45] 9614 0045        | Fax: [+45] 9614 0047        |
| <b>*SINGAPORE</b>       | Tel: [+65] 6873 0991        | Fax: [+65] 6873 0992        |
| <b>SPAIN</b>            | Tel: [+34] (91) 640 11 34   | Fax: [+34] (91) 640 06 40   |
| <b>UK / Cambridge</b>   | Tel: [+44] (0) 1763 262277  | Fax: [+44] (0) 1763 285353  |
| <b>*UK / Stevenage</b>  | Tel: [+44] (0) 1438 742200  | Fax: [+44] (0) 1438 727601  |
|                         | Freephone: 0800 282388      |                             |
| <b>*USA</b>             | Tel: [+1] (316) 522 4981    | Fax: [+1] (316) 522 1360    |
|                         | Toll Free: 800 835 2352     |                             |

\* Indicates Regional Service Center



**EXPORT CONTROL WARNING:** This document contains controlled technical data under the jurisdiction of the Export Administration Regulations (EAR), 15 CFR 730-774. It cannot be transferred to any foreign third party without the specific prior approval of the U.S. Department of Commerce, Bureau of Industry and Security (BIS). Violations of these regulations are punishable by fine, imprisonment, or both.



Our passion for performance is defined by three attributes represented by these three icons: solution-minded, performance-driven, customer-focused.