

Keysight Technologies

CX3300 Current Waveform Analyzer

Quick Operation Guide


How to zoom in on the waveform

The CX3300 has two kinds of zoom in functions:

- Zoom at single display
- “Anywhere” Zoom.

a. Zoom at single display

- a-1. Click on the “Move” icon to change the ‘Zoom’ icon.
- a-2. Drag the cursor until the displayed box covers the area of interest.

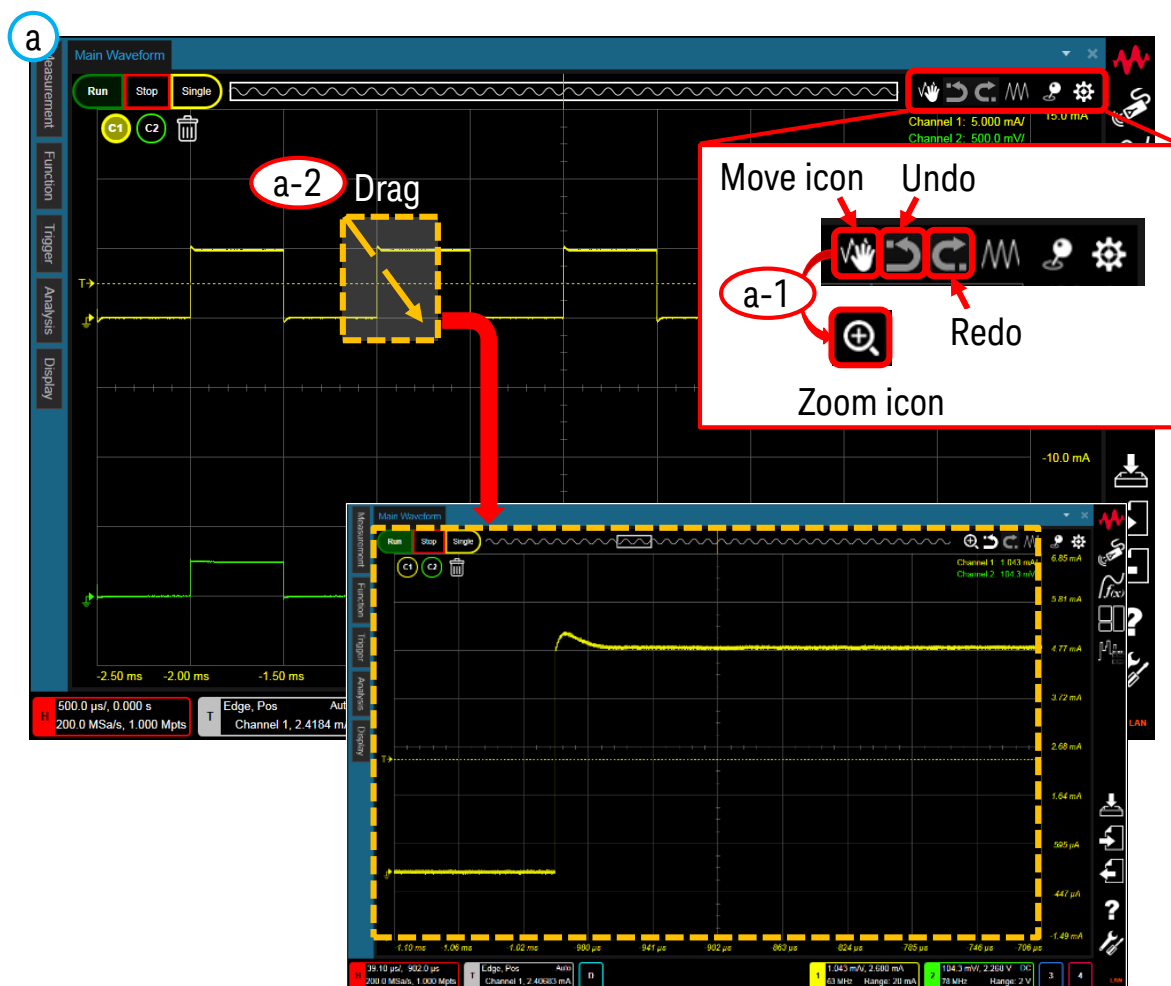


Tips: If you want to cancel the zoom, click the Undo icon.


Next page

Tips: By using the Scale Reference function, you can change the base point of the Zoom.


- Utilities > Configuration > User Preference > Scale Reference

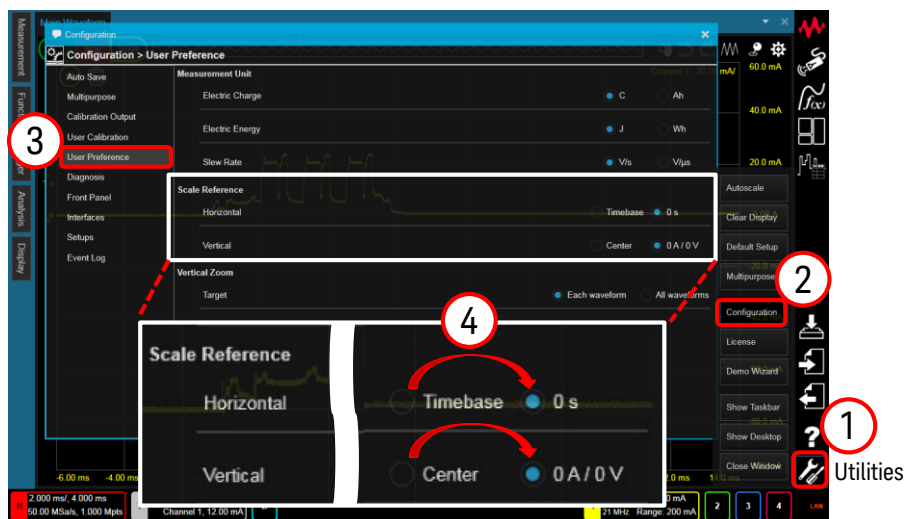

[Scale Reference > Horizontal Sample]

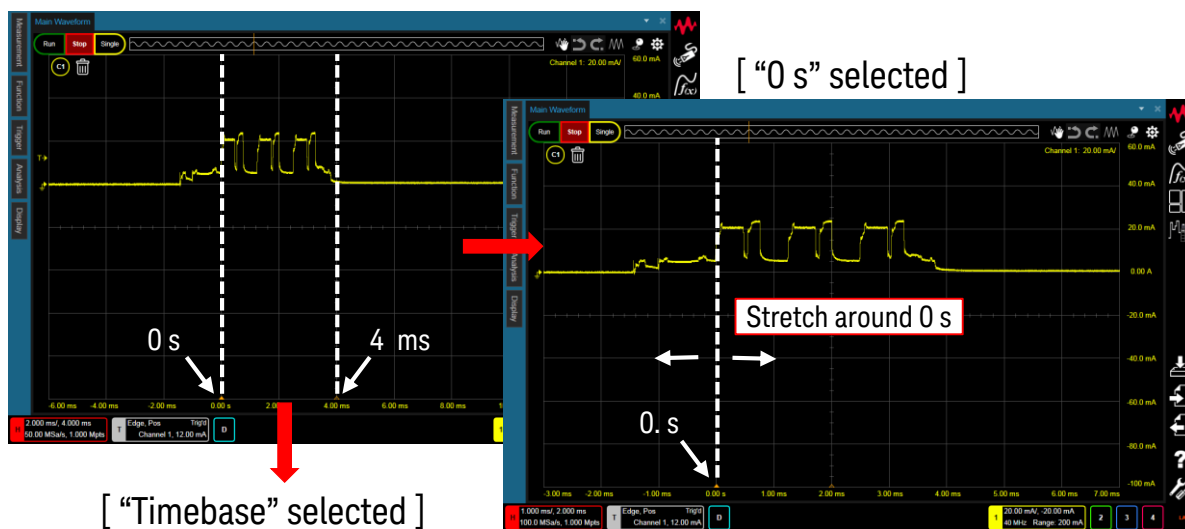

["Timebase" selected]

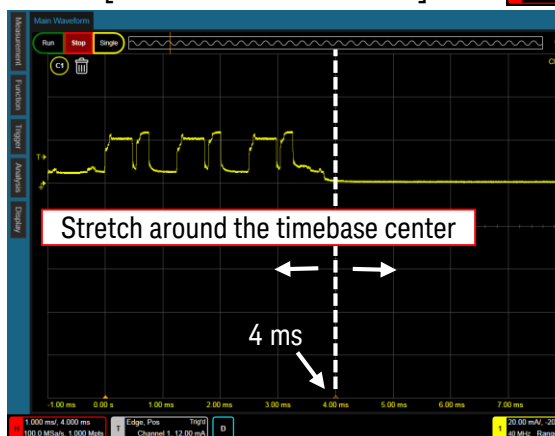

Note:

- The setting is also retained in CX3300 power cycle and [Default Setup].
- It returns to the factory condition with [Factory Default]¹.


1. [Factory Default] can be selected on the "Utilities > Configuration > Setups" window.

b. "Anywhere" Zoom

b-1. Click on the "Waveforms" icon.

b-2. Click on the "1 & zoom" icon.

b-3. Drag the boundary line of the area.

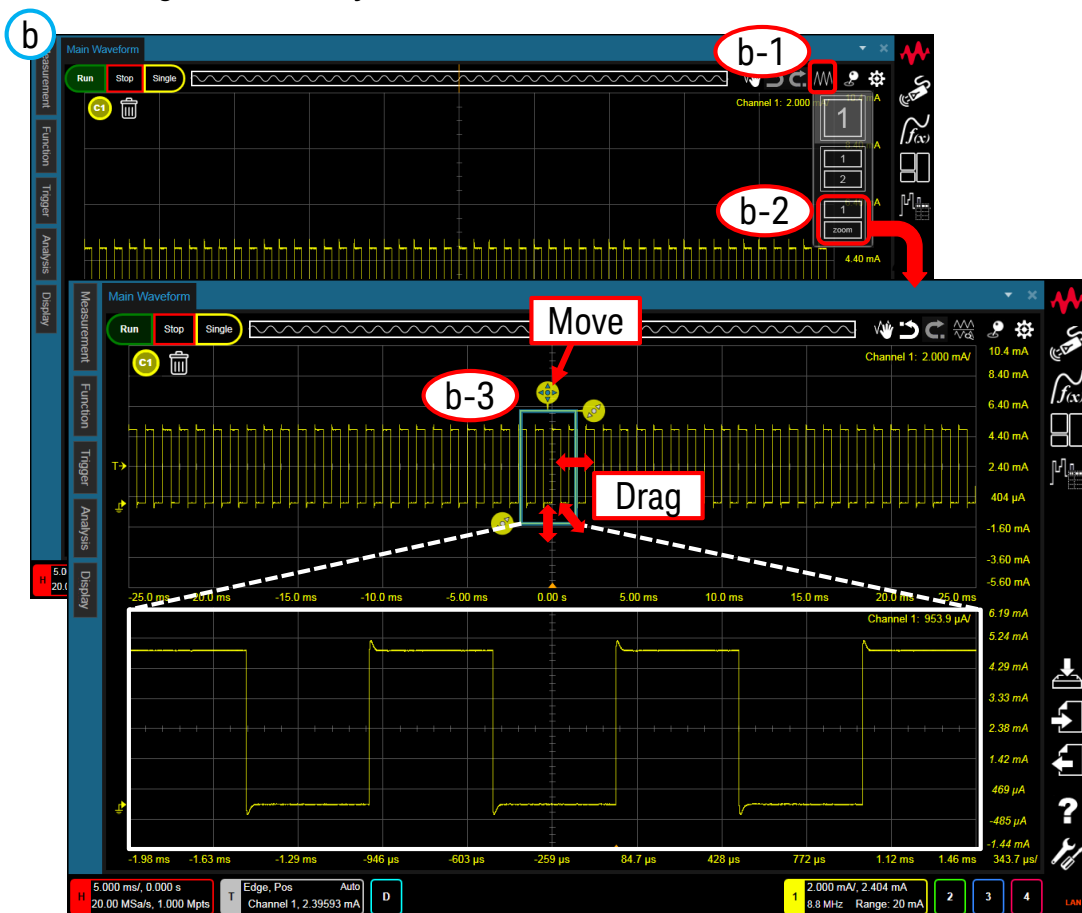

Tips: You can also specify the scale and position on the Axis dialog.

