


# Keysight Technologies

## CX3300 Current Waveform Analyzer

### Quick Operation Guide


#### How to add an Annotation

1. Drag and drop the Display icon onto the target waveform.
  - 1-1. Click the “Display” icon on the Tool Palette.
  - 1-2. Click the “Annotations” tab.
  - 1-3. Drag and drop the “Display” icon on the Display tool palette onto the target waveform.

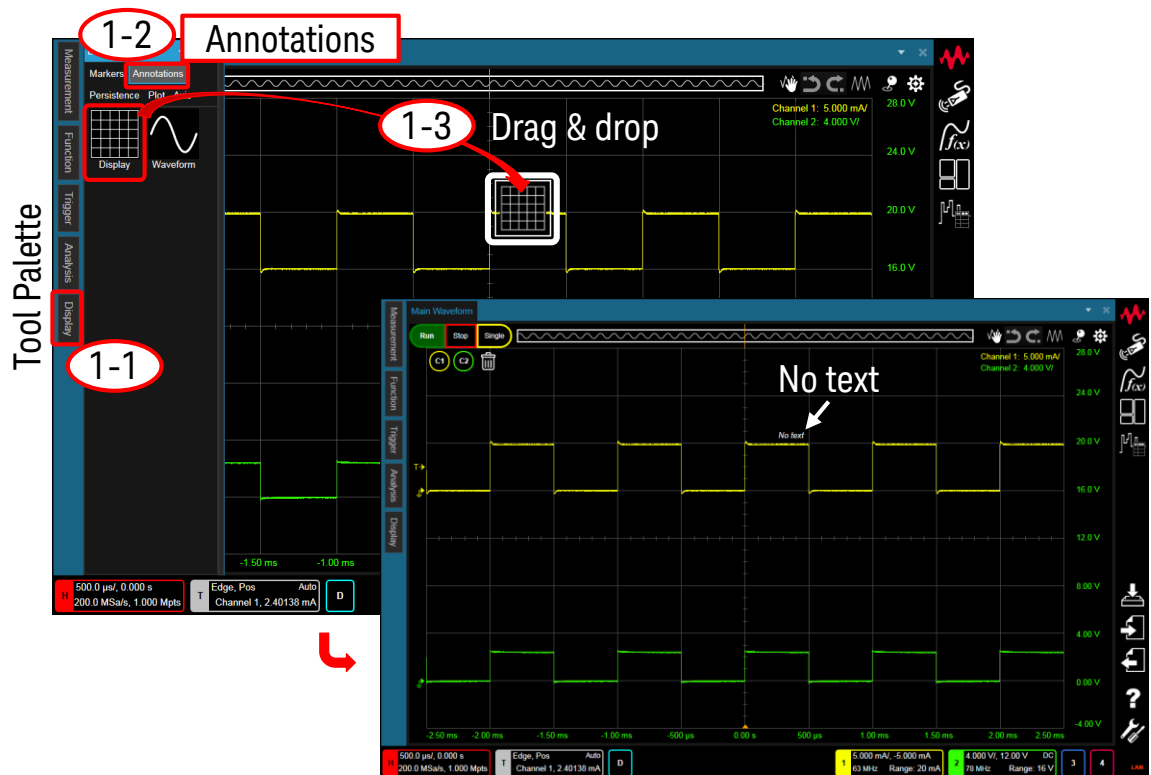

Next page

2. How to edit the Annotation
  - 2-1. Select Edit by right clicking on “No text”.
  - 2-2. You can edit the Annotation.

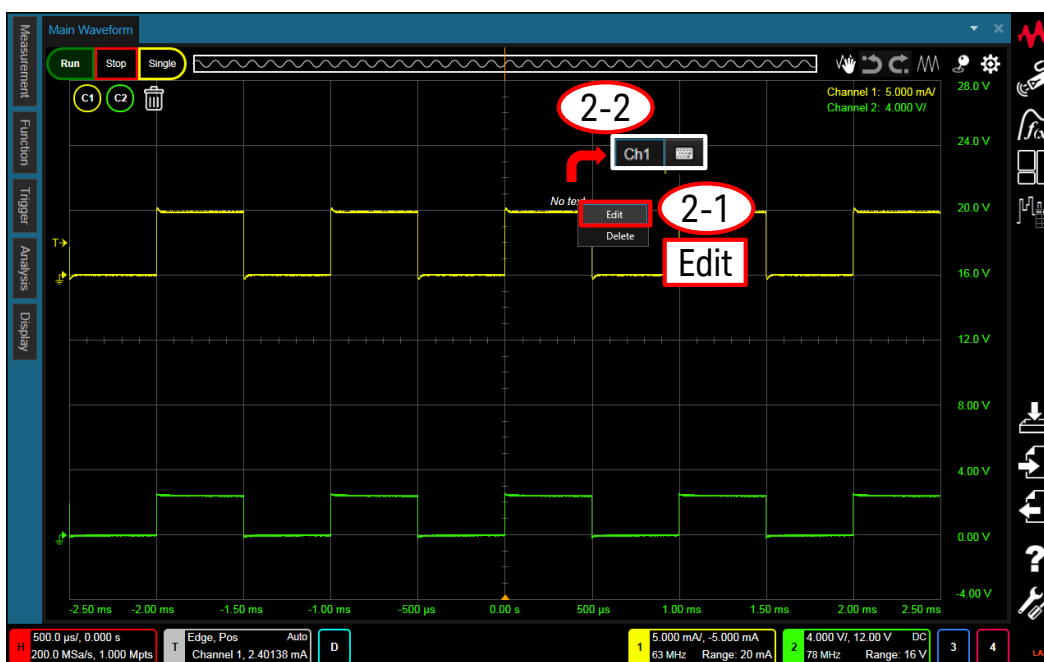

3. How to delete the Annotation

You can delete the Annotation by right clicking on it, as shown with “Ch1” in the example below, and selecting Delete.

