

Keysight Technologies


CX3300 Current Waveform Analyzer

Quick Operation Guide



How to save rarely occurring waveforms automatically

"Auto Save" can be used to automatically save a current waveform if it satisfies specific conditions.

1. Select "Utilities > Configuration > Auto Save".

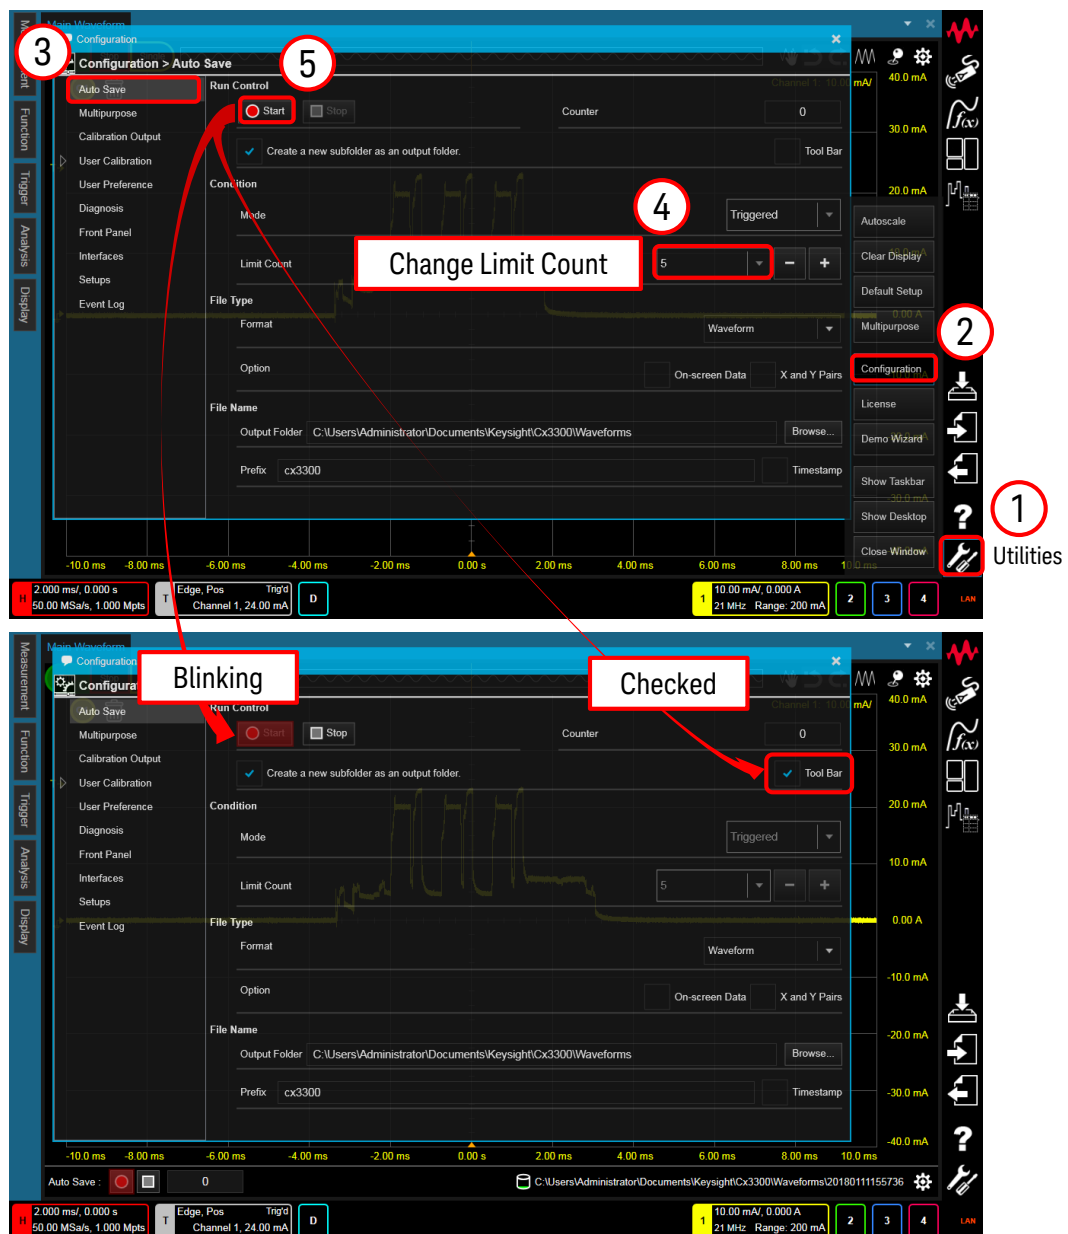

2. Push the “Auto Save” (red circle) button on the lower left of the display. The waveforms consistent with the trigger condition are stored up until the Limit Count set on the “Configuration > Auto Save” window.

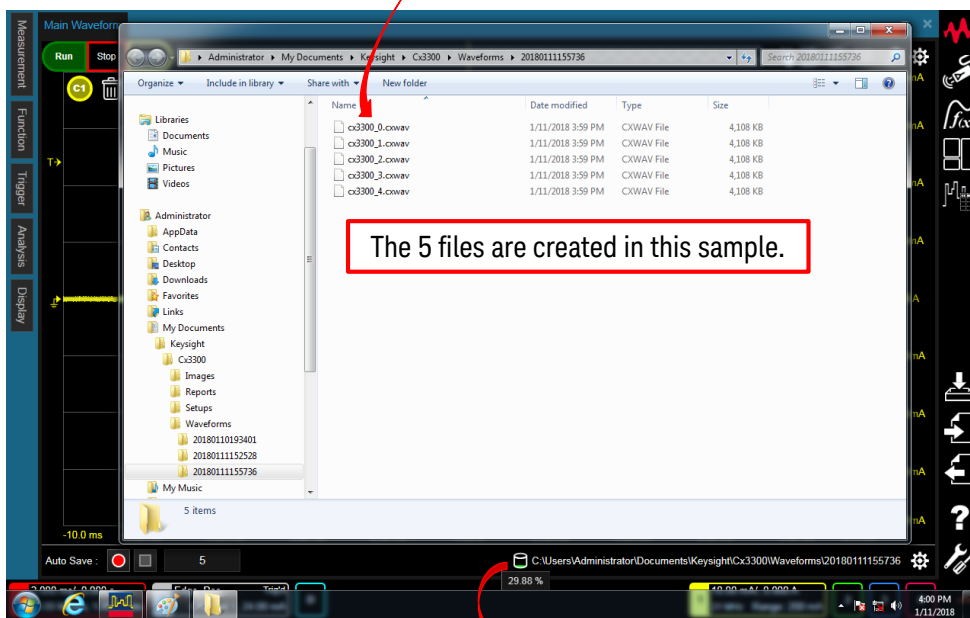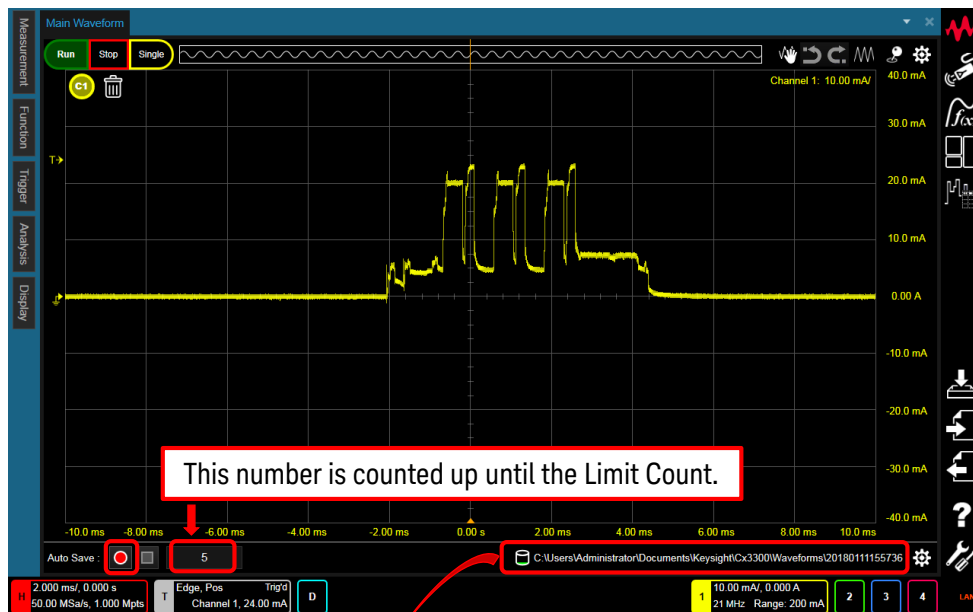

The icon shows the disk usage. When the free space becomes 10% or less, the color changes from green to red.

Note:

- During the processing for previously acquired waveforms, the data is not saved even if the specified condition is satisfied.
- Depending on the File Type and Limit Count, the size or number of the files to be saved increases.