

Keysight Technologies

CX3300 Current Waveform Analyzer

Quick Operation Guide


How to place pointers on waveforms

1. Select “Markers” in the Display Tool Pallet. Then, drag and drop the “Cross” icon on the point that you want to monitor.




2. How to delete the Cross Hair Marker.
There are 3 ways to delete the cross hair marker.



2-1. Right-click the mouse on the cross hair marker and choose “Delete”.

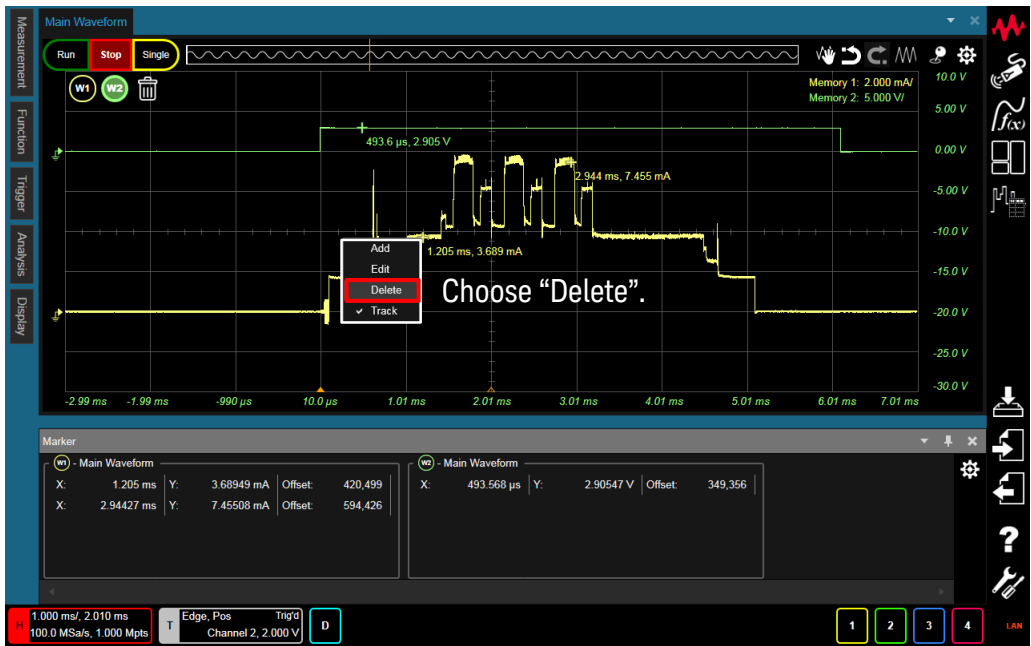

2-2. Click the gear icon on the upper right corner of the main screen.

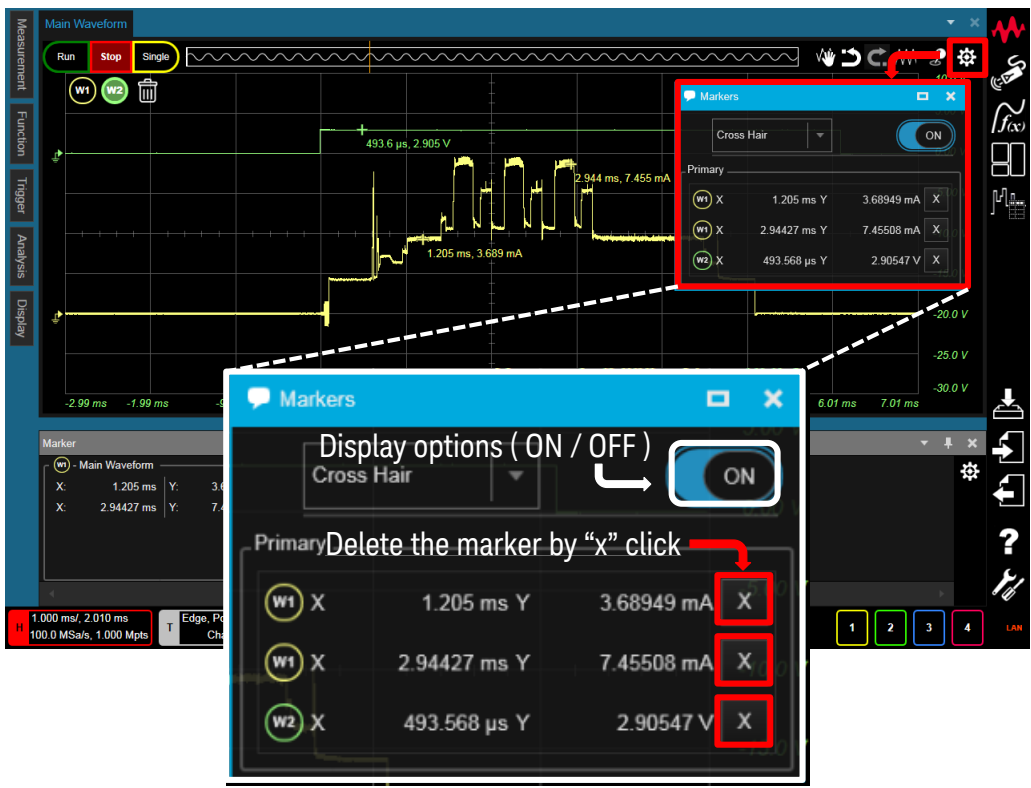

2-3. Click the gear icon on the upper right corner of the “Marker” screen.

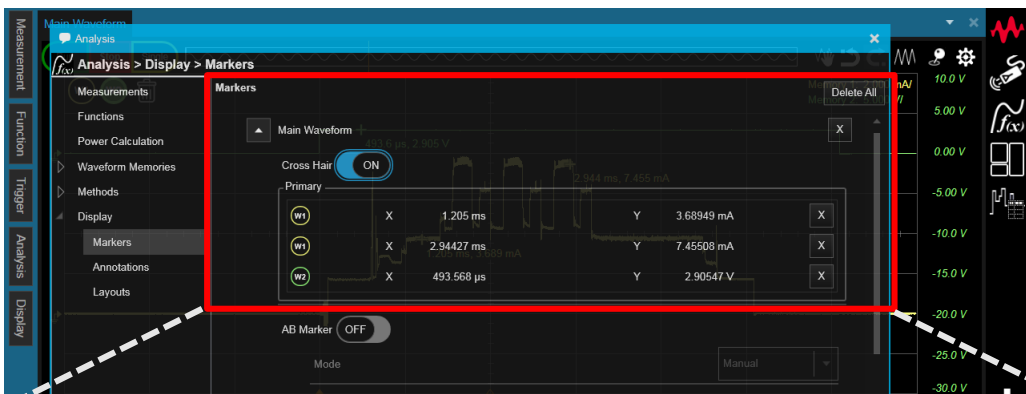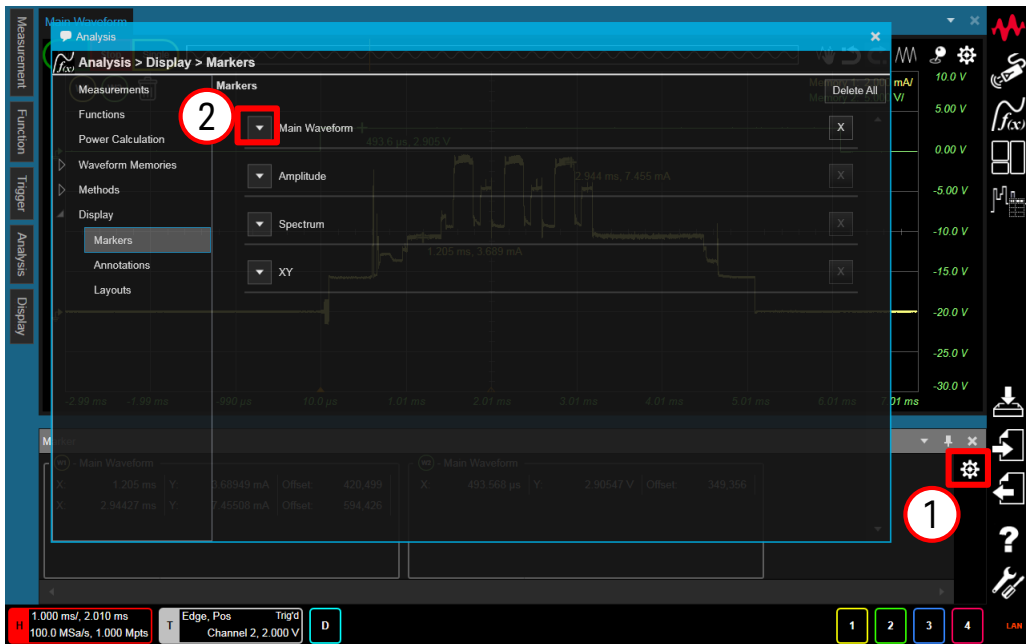

Tips :

- You can select whether or not the cross hair marker is tracked as follows:

Right-click the mouse on the cross hair marker.



This cross hair marker can be tracked on the waveform in this mode.

Choose "Track".

This cross hair marker can NOT be tracked on the waveform in this mode.