


EP Digital Postal Scale

QUICK START GUIDE

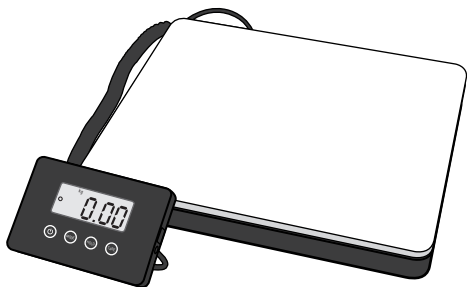


EP-180KG (180kgx0.01kg)

THANK YOU


Thank you for purchasing the EP digital postal scale by FUZION. Please read the operating instructions carefully before use. Scales are precision measuring devices and should always be handled with proper care. To ensure the scales accurate, please calibrate before the first use. If you have any questions, please feel free to reach out our customer support: support@fuzionglobal.com.

Name of each component

< Front >

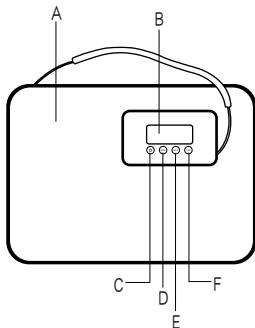

< Back >

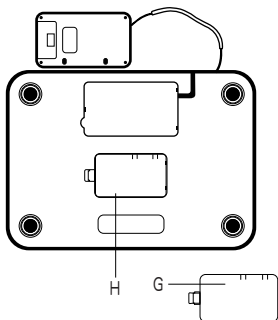

A	platform
B	LCD Display
C	
D	
E	
F	
G	battery cover
H	battery

What's in the Box


1. EP Digital Scale x1
2. AAA Batteries x2
3. AC Adaptor x1
4. User Manual x1

If you have any missing parts, please feel free to reach out our customer support.


Operation

1. Place the scale on a flat, level surface and press the  key to turn the scale on.
2. You are ready to weigh once the start-up process completes and the scale goes to zero.
3. Place the quantity to be weighed on the weighing platform.
4. Wait a couple seconds for the display to stabilize before taking a weight reading.

Turning Scale On

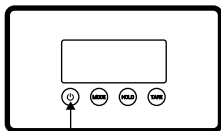

Mode Setting

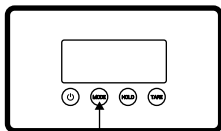


Mode Setting

Press the  key to change the scales displayed unit of measure.


- Units: kg(kilogram) lb(pound): oz(ounce) lb(pound)

Tare Weighing Function


1. Turn the scale on, and place a container on the platform.

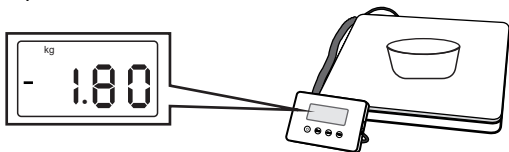

2. Press “” button to reset the displayed weight on the scale back to zero.

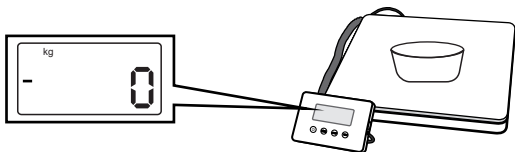


3. Add items into the container, the weight of the item will be displayed.

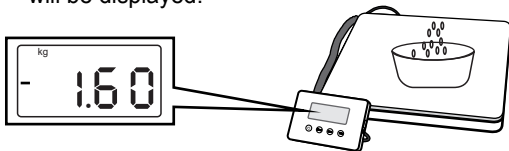


Hold Function


1. Turn on the scale.
2. Press “” button to turn on the auto hold function.

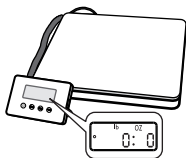


3. Put the package on the weighing platform for 5s, the reading will be locked on the display even the package is took away.

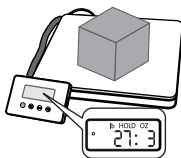

4. Press “” button to unlock.

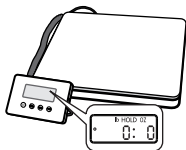


Calibration

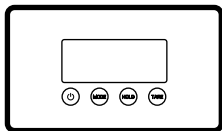

1. In the power-off, press and hold "⏻", at the same time press "MODE" button 4 to 5 times quickly until the display shows "CAL", then release the buttons, the number will be shown on the screen.
2. Press "MODE" button, the screen will show "20.0lb" to "0".
3. Place the required weight on the weighing platform.
4. Press "MODE", the "PASS" will be shown on the screen.

Time Setting

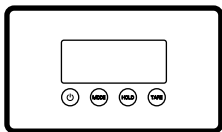

1. In the power-off, press and hold "MODE" for 3 second, then the part of hour will flash.
2. Press "HOLD" to increase the number, and press "TARE" to decrease the number.
3. After part of hour is adjusted properly, press "MODE" to confirm and then set the part of minute.
4. Follow step 2 to complete this setting, then press "MODE" to confirm. Time setting is completed.

Troubleshooting

Problem: the scale body and hand-held part cannot be connected and weighed

Solution:

1. Firstly, check that the scale body and hand-held part batteries and external power supply works.
2. Turn on the hand-held part first, then power on the scale body, the power indicator lights up.
3. Press and hold the  button, the PASS will be displayed on the screen, the paired connection is completed.

Problem: Scale will not turn on.

Solution: Check the batteries.

Problem: Displayed weight fluctuates randomly.

Solution: Make sure your workspace is stable and free of any air currents or vibration.


Problem: Displayed weight is inaccurate.

Solution: Perform a calibration adjustment.


Indication Message

Low battery indication: “Lo” or “L” :

Please replace the new batteries.




“OUT2”: Please recalibrate the scale per the instructions above.



Overload indication: “0-Ld” or “88888”

Please remove the object from the weighing tray immediately.



Things To Avoid



Unlevel Surfaces

Radio Frequency
Interference

High Humidity



Air Currents



Vibration



Extreme Temps

Specifications

EP-180kg

Max Capacity	180 kg / 390 lb
---------------------	-----------------

Readability	0.01 kg / 0.1lb
--------------------	-----------------

Weighing Units	kg, lb, lb: oz
-----------------------	----------------

Dimensions	Overall: 11.8 in x 10 in x 1.69 in Platform: 11.8 in x 10 in Display: 2.55 in x 1 in
-------------------	--

Calibration Weight	20lb
---------------------------	------

Power	2 x AAA Batteries
--------------	-------------------

Warranty	1 Year Limited Warranty
-----------------	-------------------------