

Bimetal Thermometer

Model TI.30, Stainless Steel Case & Wetted Parts

Datasheet TI.30

Applications

- Suitable for fluid medium which does not corrode 304 stainless steel

Special features

- Industrial design
- Stainless steel case and wetted parts
- Back connection with external reset



Standard version

Application

Industrial type design for fluid medium which does not corrode 304 stainless steel.

Sizes

3" (76.2 mm) Type TI.30

Accuracy

+ 1.0% full scale value (ASME B40.3)

Ranges

-100 °F to 1000 °F (and equivalent Celsius)

Working Range

Steady: full scale value
Short time: 110% of full scale value

Over Range

Temporary over or under range tolerance of 50% of scale up to 500 °F. (260°C). For ranges above 500°F, maximum over range is 800°F; continuous. 1000°F intermittent.

Connection

Material: 304 stainless steel
Center back mount (CBM), 1/2" NPT

Measuring Element

Bi-metal helix

Pointer

Black aluminum

Pressure Gauge TI.30

Stem

Material: 304 stainless steel
Diameter: 1" (6.35 mm)
Length: 2 1/2" to 72" (63.5 mm to 1,828.8 mm)

Case

Material: 304 stainless steel
Hermetically sealed per ASME B40.3 standard
External reset slotted hex head on back of case

Dial

White aluminum, dished, with black markings

Dampening

Inert gel to minimize pointer oscillation

Standard Scales

Single: Fahrenheit or Celsius
Dual: Fahrenheit (outer) and Celsius (inner)

Window Gasket

Neoprene
Silicone (-100 °F and over 550 °F)

Window

Flat instrument glass

Weight


7 oz. (3" dial); Add 1 oz for every 2" of stem length

Movement

Viscous inert gel to enhance pointer operation

Dimensions

Standard versions

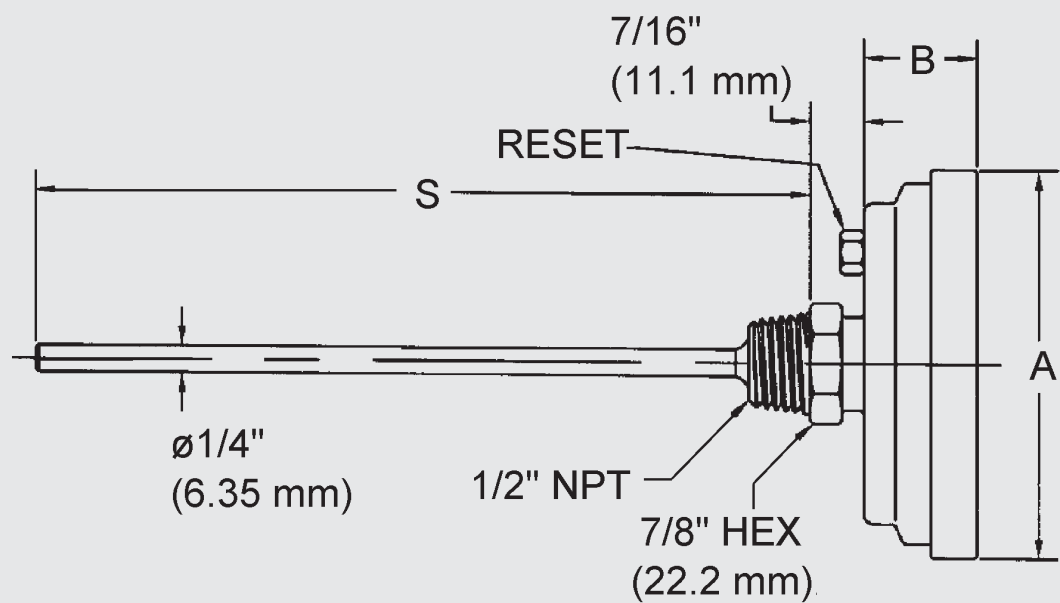

WIKA TYPE	DIAL SIZE	A	B	S (Stem Length)
30	3" (76.2 mm)	3 1/4" (82.6 mm)	15/16" (23.8 mm)	As Specified

STEM LENGTH
2 1/2" (63.5 mm)
4" (101.6 mm)
6" (152.4 mm)
9" (228.6 mm)
12" (304.8 mm)
15" (381.0 mm)
18" (457.2 mm)
24" (609.6 mm)

Note: Thermowells for temperature instruments are recommended for all process systems where pressure, velocity, or viscous, abrasive and corrosive materials are present individually or in combination. A properly selected thermowell protects the temperature instrument from possible damage resulting from these process variables. Furthermore, a thermowell permits removal of the temperature instrument for replacement, repair or testing without effecting the process media or the system.

Ordering information
State computer part number (if available) /type number/size/range/connection size and locations/options required. WIKA reserves the right to make changes without prior notice.