

DVM-80UVM VOLTMETER/PHASER

and ACCESSORIES



Operating and Instruction Manual

HD[®] HD ELECTRIC COMPANY
A Textron Company

1475 Lakeside Drive • Waukegan, Illinois 60085 U.S.A. • 847.473.4980
fax 847.473.4981 • website: www.HDElectricCompany.com

VOLTMETER/PHASER

DVM80UVM

and ACCESSORIES

Operating & Instruction Manual

IMPORTANT SAFETY INFORMATION 4

GENERAL DESCRIPTION 5

SPECIFICATIONS 6

OPERATING INSTRUCTIONS 7-8

 Pre-Use Inspection 7

 Voltage and Phasing Measurements: Line-to-Line 7

 Voltage Measurements: Line-to-Ground 8

 Test Point Measurements 8

 Peak Hold 8

 Care and Maintenance 8

PROBES AND ACCESSORIES 9-13

 Probes 9

 Add-on Resistor Stick 10

 Hotstick 10

 Hotstick Adapter 10

 Proof Tester 10

 Cable Fault Tester 11-13

REPAIRS 13

CALIBRATION AND MAINTENANCE LOG 14



WARRANTY AND LIABILITY 16

HDE **HD ELECTRIC COMPANY**
A Textron Company

1475 Lakeside Drive • Waukegan, Illinois 60085 U.S.A. • 847.473.4980
fax 847.473.4981 • website: www.HDElectricCompany.com

Read and understand these instructions prior to use. These operating instructions are not a substitute for proper training in the use of this equipment. High voltage systems present serious hazards, including the risk of death or serious injury due to arcing, thermal burns and electrocution. HD Electric's products are intended solely for use by professionals with knowledge, training and experience in the use of the equipment and its accessories in and around high voltage systems.

**THESE IMPORTANT LABELS ARE AFFIXED TO THE PRODUCT.
READ AND UNDERSTAND EACH OF THEM BEFORE PROCEEDING.**

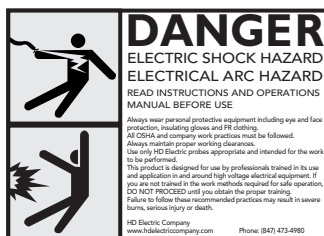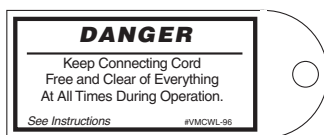

The users of this meter should always be equipped with personal protective equipment including high voltage gloves, flame retardant clothing, eye and face protection. Some applications may require additional protective equipment.

Failure to follow these and other warnings and safety precautions may result in severe injury or death.

GENERAL DESCRIPTION


The DVM-80UVM is a high accuracy digital voltmeter and phasing set designed to measure voltages up to 40kV and up to 80kV when used with a pair of add-on resistors. The DVM-80UVM includes an elbow test point reading feature as well as a peak hold feature. The DVM-80UVM can be purchased on its own or in a complete, ready-to-use Universal Voltmeter Kit that contains the following probes and accessories:

DVM-80UVK UNIVERSAL VOLTmeter KIT

- Dual stick phasing voltmeter (DVM-80UVM)
- Two overhead hook probes (025-OLPS-5)
- Two resistor sticks for measurements up to 80kV (R-80)
- Two underground bushing probes, 15 and 25kV class (ASP-15/25)
- An underground cable fault tester, 15, 25 and 35kV class (CFT-35)
- Voltmeter proof tester (PT-5000B)
- Two shotgun hotstick adapters (HSA-2500)
- A soft-sided, multi-functional carrying bag (B-12)

See pages 9-13 for a complete list of probes and accessories available.

All HD Electric voltmeters and phasers are constructed with epoxy encapsulated high voltage resistors, a connecting cord and a meter display. The DVM-80UVM is a digital meter. The major elements are shown here:

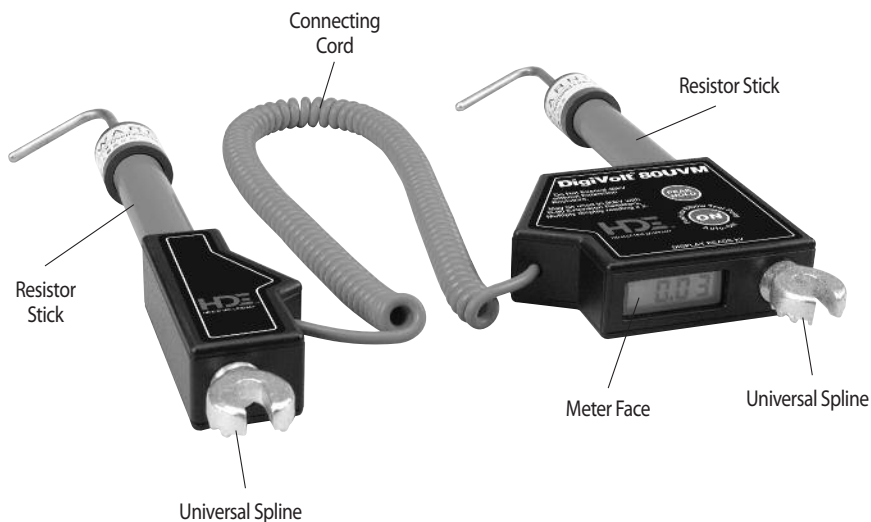

The high voltage resistors limit the current through the connecting cord to less than one milliamp. Although the connecting cord is insulated for voltage up to 10kV, it should always be kept free and clear from you, ground and any other conductors. These instruments will measure DC through 1000Hz RMS AC.

WARNING: The DVM-80UVM will require add-on resistor sticks for higher voltage ranges. Always completely remove the voltmeter from the live circuit before adding or removing add-on resistor sticks. Always use add-on resistor sticks in pairs, one on each voltmeter stick.

SPECIFICATIONS



The DVM-80UVM requires one 9V lithium or alkaline battery, which powers the unit and activates the backlight. The meter will shut off automatically a few minutes after the display reads zero, but not while voltage measurements are being made. The DVM-80UVM includes an elbow test point reading feature, which is displayed by a blinking decimal point (↵) and a Peak Hold feature which is indicated by all decimal points flashing.

To activate the Peak Hold feature, press the Peak Hold button. The display will hold the highest reading while Peak Hold is activated. To deactivate the Peak Hold and clear the display, press the Peak Hold button again.

NOTE: The meter will not shut off while a peak reading is displayed.

The backlight is always on when the unit is powered on. The low battery feature will simply shut off or will not turn on the meter when the battery is low. The unit has a 0.4" LCD display that indicates 3-1/2 digits. The DVM-80UVM measures RMS AC and DC.

The DVM-80UVM is autoranging with three ranges. The lowest range is from .005kV (5V) to 1.999kV. The middle range is from 2.00kV to 19.99kV and the highest range is from 20.0kV to 40.0kV.

To take readings above 40.0kV, attach one R-80 on each meter stick, and then multiply the reading on the display by two (for example, if the display reads 30kV with add-on resistor sticks installed, multiply 30 times 2 = 60.0kV). Do not exceed 80kV with the R-80 resistor sticks attached.

OPERATING INSTRUCTIONS

PRE-USE INSPECTION

WARNING: Before using the instrument be sure to test and inspect the equipment to insure that it is functioning properly and is in safe, working condition. Failure to do so may cause serious injury or death and may result in erroneous test measurements.

Before making any high voltage measurements, test and inspect the voltmeter/phaser as follows:

- 1) Make certain the instrument is clean, dry and waxed to a clear shiny surface.
- 2) Inspect the cord for cracked insulation.
- 3) Be sure that you are using hotsticks of the appropriate length, and examine each hotstick to insure that it is clean, dry and waxed to a clear shiny surface.
- 4) Attach the appropriate probes for overhead or underground applications (see page 9) and ensure that the probes are properly installed and tightened (do not overtighten).
- 5) Install add-on resistor sticks if necessary for the range being tested.
- 6) Test the voltmeter/phaser with a proof tester such as the HD Electric PT-5000B (see page 10).

VOLTAGE AND PHASING MEASUREMENTS – LINE-TO-LINE

We recommend that two person crews perform all line-to-line voltage measurements and phasing operations. Since the operation is occurring near two energized conductors, the use of two person crews allows each person to operate one meter stick and maintain high safety standards.

In order to make line-to-line measurements, each probe must contact an energized line. Be sure that only those probes intended for the particular application are used (see page 9). Always keep the connecting cord free and clear of energized phases and ground.

For phasing applications, the probes will be placed on opposite sides of an open point, typically a switch. The phasing operation will indicate if two sides of a line are in-phase before closing a switch.

To check all phases proceed as follows:

- 1) Measure voltage on each phase from line-to-ground to verify all phases are live and at the same voltage.
- 2) Place one of the probes on a conductor on one side of the switch.
- 3) Place the other probe on one of the three phases on the other side of the switch.
- 4) If the conductors are out-of-phase, the meter will read line-to-line voltage. If they are in-phase, the meter will read near zero but may read up to 15% of the line-to-line voltage.
- 5) Continue this procedure with all three phases on both sides of the switch.

If an intermediate reading is found, the phasing cannot be determined by this method and the switch should not be closed until other means are used for phasing.

OPERATING INSTRUCTIONS *continued*

VOLTAGE MEASUREMENTS – Line-to-Ground

Keep the connecting cord free and clear while testing.

To use this two-stick voltmeter/phaser, first connect one of the probes to either a ground or system neutral making sure the resistor stick is making contact at all times during measurement. The other probe should be connected to the energized source to be measured.

Maintain contact only long enough to read the meter. Always remove the probe from the energized source first before removing the ground connection.

TEST POINT MEASUREMENTS

The DVM-80UVM includes a Test Point feature for measuring voltage from elbow test points. To activate Test Point mode simply push the ON button again. Test Point mode is indicated by a blinking decimal point. To turn Test Point mode off, simply push the ON button once again and the decimal point will stop blinking. When using a DigiVolt to phase between test points, the important measurement is whether high voltage is present or not. The proper procedure for phasing between elbow test points is as follows:

- 1) Both elbows must be energized. Follow the proper safety practices for removing the test point protective caps and exposing the live test points. Treat all exposed electrodes as energized high voltage. Measure from both elbow test points to ground. These measurements should show that both elbows are energized and, if both elbows are of the same type and manufacture, should measure the approximate line voltage.
- 2) Measure from one elbow test point to the other. This reading will show either a high voltage reading indicating the elbows are out-of-phase or a zero or low voltage reading indicating the elbows are connected to the same phase. **The out-of-phase measurement will likely not show the higher voltage expected from a phase-to-phase measurement but will be closer to the line-to-ground voltage. The in-phase voltage measurement can be between zero and 15% of the nominal line-to-ground voltage.** If both elbows are of different type and manufacture, then a higher reading may occur.

PEAK HOLD

The DVM-80UVM includes a Peak Hold feature. To activate the Peak Hold feature press the Peak Hold button. Peak Hold is indicated by all decimal points flashing. The display will hold the highest reading while Peak Hold is activated. To deactivate the Peak Hold and clear the display, press the Peak Hold button again. **Note:** The meter will not shut off while a peak reading is displayed.

CARE AND MAINTENANCE

Periodic regular maintenance is required to keep the voltmeter in proper operating condition. Digital models will require periodic battery replacement. Keep the voltmeter clean and dry and always store it in its case. The fiberglass sticks should be kept clean and free of dirt, contamination and marking. Examine the cord for cracking or other damage prior to each use. Although we don't specify a calibration cycle, we recommend you test, measure and calibrate your instrument annually. The Calibration and Maintenance Log provided on page 14 can be used to record these events. Contact HD Electric Company for details.

PROBES AND ACCESSORIES

WARNING: ALWAYS use probes appropriate to your application. NEVER use overhead probes in underground applications. Failure to use the correct probe can result in arcing or electrical contact and may cause serious injury or death. If you are not trained in the particular operation or are not sure about the appropriate probe for your application **DO NOT PROCEED.**

The DVM-80UVM comes standard with two overhead hook probes (025-OLPS-5), a 9-volt battery, instruction manual and a carrying case (CS-DVM). The DVM-80UVK Universal Voltmeter Kit is supplied with a DVM-80UVM dual stick phasing voltmeter, two overhead hook probes (025-OLPS-5), two resistor sticks (R-80), two underground bushing probes (ASP-15/25), an underground cable fault tester (CFT-35), voltmeter proof tester (PT-5000B), two shotgun hotstick adapters (HSA-2500), a 9-volt battery, instruction manual and a soft-sided carrying bag (B-12). Below are descriptions of these as well as other optional probes and accessories available.

OVERHEAD PROBES

- 025-OLPS-5 brass hook probe
- 025-OLPS-6 brass pigtail probe

UNDERGROUND DEAD FRONT BUSHING PROBES

- ASP-15/25 for use in 15kV and 25kV loadbreak bushings
- ASP-35U for use in 35kV loadbreak bushings


UNDERGROUND ELBOW PROBE

EA-15/25 for insertion in loadbreak elbows

NOTE: The elbow must be firmly supported when using this probe

INSULATED UNDERGROUND PROBE

GCP-1 for general underground use on grounded terminals, exposed high voltage terminals or elbow test points.

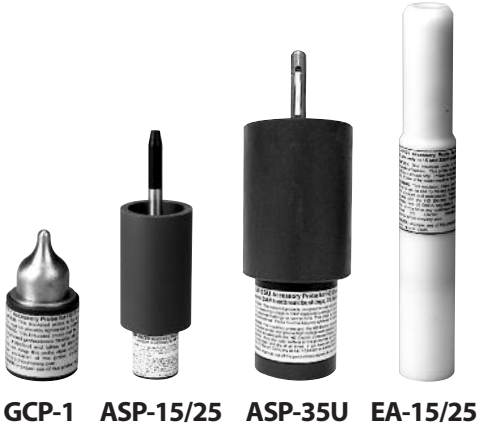

PROBES AND ACCESSORIES *continued*

ADD-ON RESISTOR STICK

R-80 used to take readings above 40kV. Always completely remove the voltmeter from the live circuit before adding or removing add-on resistor sticks. Always use the add-on resistor sticks in pairs, one on each voltmeter stick, then attach the appropriate overhead or underground probe to be used. When a reading is displayed, multiply that reading by two (for example, if the display reads 30kV with add-on resistor sticks installed, multiply 30 times 2 = 60kV). Do not exceed 80kV with the R-80 resistor sticks attached.

R-80



HSA-2500

HOTSTICK

A range of hotsticks are available in lengths starting at 4'. Contact HD Electric for more details.

Hotsticks

HOTSTICK ADAPTER

HSA-2500 shotgun hotstick adapter

PROOF TESTER

The PT-5000B Proof Tester will produce 5kVDC at the test leads to confirm proper operation of voltmeters and phasers. This tester should be used only with voltmeters/phasers that measure DC voltage. It will not confirm operation of voltmeters/phasers that measure AC voltage only. The PT-5000B operates from one 9V lithium or alkaline battery and produces approximately 5kVDC at the connecting leads. To use:

- 1) Connect both tester leads to the voltmeter/phaser probes.
- 2) Press and hold both TEST buttons.
- 3) Confirm a good battery by checking the red light on the Tester. If the red light does not come on, replace the battery with a 9V lithium or alkaline only.
- 4) Verify the voltmeter/phaser reads approximately 5kV.
- 5) Release the TEST buttons and disconnect the Tester from the voltmeter/phaser.



PT-5000B Proof Tester

WARNING: Do not use the voltmeter/phaser if proper operation is not confirmed.

WARNING: Do not use this tester except as directed. Do not use to test equipment other than voltmeters/phasers. Do not apply to energized circuits or equipment. Refer all servicing to the factory. Failure to follow these instructions may lead to electric shock, severe injury or death.

PROBES AND ACCESSORIES *continued*

CABLE FAULT TESTER

The CFT-35 is for use only with two stick voltmeters for testing leakage current in underground primary voltage cables.




CFT-35

The CFT-35 can be used on underground cables with grounded neutrals with a maximum line-to-ground voltage of 21.1kV or maximum line-to-line voltage of 36.6kV. Operation at higher voltages may damage the CFT-35 and provide erroneous test results.

The CFT-35 is used with a voltmeter/phaser for testing installed or repaired underground cable prior to energizing it. Only cable with extruded dielectric such as rubber or polyethylene can be tested with the CFT-35. Using the CFT-35 on paper insulated cable may provide erroneous test results caused by higher leakage currents typical for this type of cable.

The CFT-35 contains a high voltage rectifier and is connected to test underground primary cable as shown in this circuit:

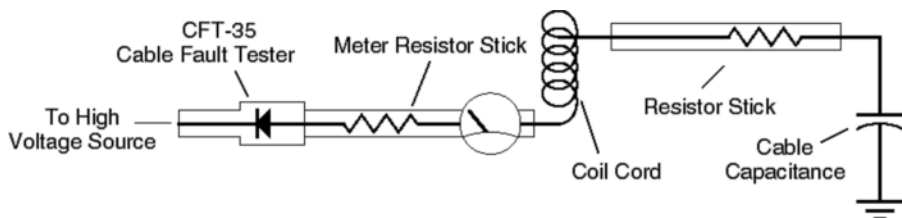

In practice, the CFT-35 rectifies the high voltage from the source, usually a transformer primary, and charges up the cable, shown as a capacitor above. When a connection is first made, the DC from the CFT-35 will charge up the cable capacitance through the resistors in the meter sticks. If the cable is good, current will stop flowing when the cable is charged up. If the cable is not good, the cable will not charge and current will continue to flow, as indicated by a higher meter indication.

The following equipment is required for testing cable with a CFT-35:

- 1) An HD Electric two-stick voltmeter/phaser.
- 2) The CFT-35 Cable Fault Tester.
- 3) For deadfront applications, ASP bushing probe(s) or, for live front applications, GCP-1 probe(s). An EA-15/25 elbow probe may also be used for deadfront applications.
- 4) For deadfront applications, a feed-through bushing may also be used.

PROBES AND ACCESSORIES *continued*

Shown here is a typical application of the CFT-35 and associated equipment for testing underground cable from a pad-mount dead front transformer:


Before using the CFT-35, read and understand all of the instructions and precautions for live testing with voltmeters/phasers (pages 7 & 8). In addition, be sure to consult your company's work practices and any information provided by the manufacturers of the apparatus that you are testing.

Testing using the CFT-35 should be performed as follows:

- 1) Test the cable with the HD voltmeter/phaser to insure that it is not energized and that it is discharged.
- 2) Insure that the cable to be tested is completely isolated; that both ends have no other connection to voltage or to a transformer winding and are properly terminated.

- 3) Assemble the CFT-35 with appropriate probe on the voltmeter/phaser stick **with the meter**.

- 4) Assemble the appropriate probe on the voltmeter/phaser stick **without the meter**.
- 5) Connect the voltmeter/phaser stick **without the meter** to the cable to be tested.
- 5) Connect the voltmeter/phaser stick **with the CFT-35** to the voltage source.
- 6) Read the display on the voltmeter/phaser. The reading will be initially high. For a short cable, the reading should return quickly to near zero. For a longer cable, it may take a few seconds for the reading to return to near zero.
- 8) If the reading does not return to near zero after several seconds, the cable is leaking or shorted and the test should be discontinued. Remember that all HDE voltmeters/phasers are intermittent duty devices and should be connected only as long as necessary to obtain a reading.
- 9) Discharge the cable by removing the voltmeter/phaser from the line, removing the CFT-35 from the voltmeter/phaser and connecting the voltmeter/phaser from cable to ground.

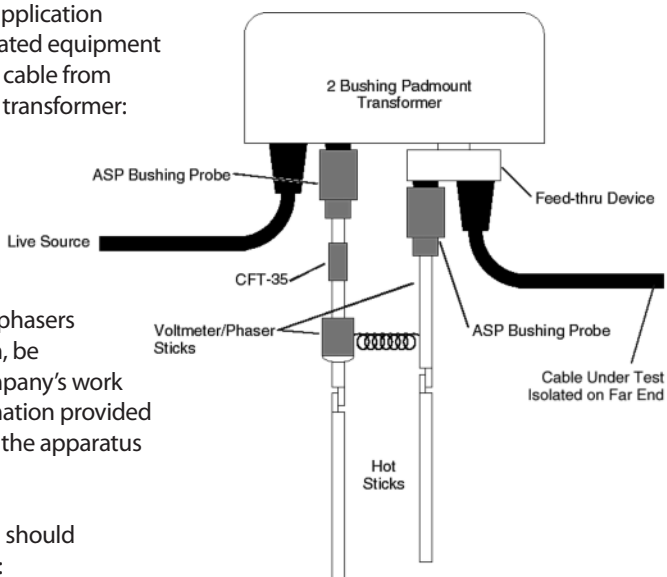

Cable Fault Tester and Bushing Probe

PROBES AND ACCESSORIES *continued*

With the DVM-80UVM, if the cable is completely shorted the meter will read the line voltage times 0.71. For a nominal 7.2kV circuit the meter will read approximately 5.1kV.

Listed here are the actual cable leakage currents for voltage readings on the

DVM-80UVM digital meter: Meter reading of 0.5kV = 8uA

Meter reading of 1.0kV = 16uA

Meter reading of 2.0kV = 31uA

REPAIRS

All repairs and calibration are performed at HD Electric Company. If any damage is found please contact HD Electric Company at 847-473-4980 to arrange for service.

CALIBRATION AND MAINTENANCE LOG

[illegible]

LIMITED WARRANTY AND LIMITATION OF LIABILITY

This warranty applies to all products sold by HD Electric Company (the "Products"); provided, however, that the term Products does not include any third party products purchased through HD Electric Company, for which no warranties are made (the "Third Party Products"). Third Party Products may be subject to a separate manufacturer's warranty; [should you have any question regarding whether a separate warranty applies, please contact HD Electric Company].

NOTICE: READ THIS LIMITATION OF WARRANTY AND LIABILITY BEFORE BUYING OR USING THE PRODUCTS CONTAINED HEREIN.

It is impossible to eliminate all risks associated with the use of the Products. Risks of serious injury or death, including risks associated with electrocution, arcing and thermal burns, are inherent in work in and around energized electrical systems. Such risks arise from the wide variety of electrical systems and equipment to which Products may be applied, the manner of use or application, weather and environmental conditions or other unknown factors, all of which are beyond the control of HD Electric Company.

HD Electric Company does not agree to be an insurer of these risks.

WHEN YOU BUY OR USE THESE PRODUCTS, YOU AGREE TO ACCEPT THESE RISKS.

HD Electric Company warrants to the original purchaser that the Products (excluding any third party products purchased through HD Electric Company, for which no warranties are made) will be free from defects in material and workmanship, under normal use and regular service, and preventative maintenance for a period of one (1) year from the date of shipment (the "Warranty Period"). Should any failure to conform with this warranty be found during the Warranty Period, you must notify HD Electric Company of your claim within thirty (30) days of discovery, and within the Warranty Period. Your failure to give notice of claims of breach of warranty within the Warranty Period shall be deemed an absolute and unconditional waiver of claims for such defects. HD Electric Company will have no responsibility to honor claims received after the date the applicable Warranty Period expires.

Upon notice of your claim, HD Electric Company will provide a return authorization number, and further instructions on how to return the product for service. You must follow HD Electric Company's instruction. You are responsible for all Product removal, handling, re-installation, and shipping (both to and from HD Electric Company). Products returned for repair, as well as repaired or replacement Products shall be sent postage / freight prepaid. After receipt of a product which HD Electric Company determines is defective, HD Electric will, at its option, either (1) repair (or authorize the repair of) the Product or (2) replace the Product, subject to the following: The Products are made using parts sourced from a variety of manufacturers. Due to the rapidly changing technology environment, parts may become obsolete / unavailable over time (end of life). In the event that a Product cannot be repaired or replaced due to unavailability of parts, HD Electric Company will use commercially reasonable efforts to obtain substitute parts or conduct work around design, but cannot guarantee its ability to do so.

Items not found defective will be returned at your expense, or failing receipt of instruction from you on return of such items within five (5) business days of our notice to you that the product is not defective, HD Electric may dispose of the product at its discretion and with no liability to you. HD Electric Company's determination of defects is final. Products repaired or replaced during the Warranty Period shall be covered by the foregoing warranties for the remainder of the original Warranty Period or ninety (90) days from the date of delivery of the repaired or replaced Products, whichever is longer.

LIMITATIONS:

This warranty is void in the event of misuse, alteration, faulty installation, or misapplication of the product. This warranty does not cover failure of product or components due to any ACT OF NATURE; lightning, floods, hurricanes, tornadoes or any other such catastrophic events.

HD Electric Company does not warrant any third party products or associated hardware or their performance or suitability for use and application. Such items are provided "as-is".

All repairs must be authorized by HD Electric Company. Unauthorized repairs will not be reimbursed under any circumstances.

HD Electric Company is not required to make replacement or loaner equipment available while Products are being repaired or replaced, or to compensate you for any in/out labor charges or expenses associated with removal, handling or re-installation of the Products.

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. HD ELECTRIC EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY AND NON-INFRINGEMENT.

IN NO EVENT SHALL HD ELECTRIC COMPANY BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM THE USE OR HANDLING OF THESE PRODUCTS. THIS SHALL INCLUDE BUT, NOT LIMITED TO, LOST PROFITS OR REVENUE, LOSS OF USE OF THE PRODUCTS, COST OF SUBSTITUTE PRODUCTS, FACILITIES OR SERVICES, OR DOWNTIME.

IN NO EVENT SHALL HD ELECTRIC COMPANY HAVE ANY LIABILITY FOR ANY THIRD PARTY PRODUCTS OR ASSOCIATED HARDWARE, OR CUSTOMER-OWNED SYSTEMS, EQUIPMENT OR SOFTWARE.

HD Electric Company must have prompt notice of any claim so that an immediate product inspection and investigation can be made. Buyer and all users shall promptly notify HD Electric Company of any claims, whether based on contract, negligence, strict liability, or other tort or otherwise be barred from any remedy.

HD Electric Company® is committed to ongoing review and improvement of its product lines, and thus reserves the right to modify product design and specifications without notice.

HD Electric Company products are available through HDE® sales representatives worldwide.

Printed in U.S.A. © HD Electric Company 2015 • Bulletin No. DVM80UVM IM-200C